




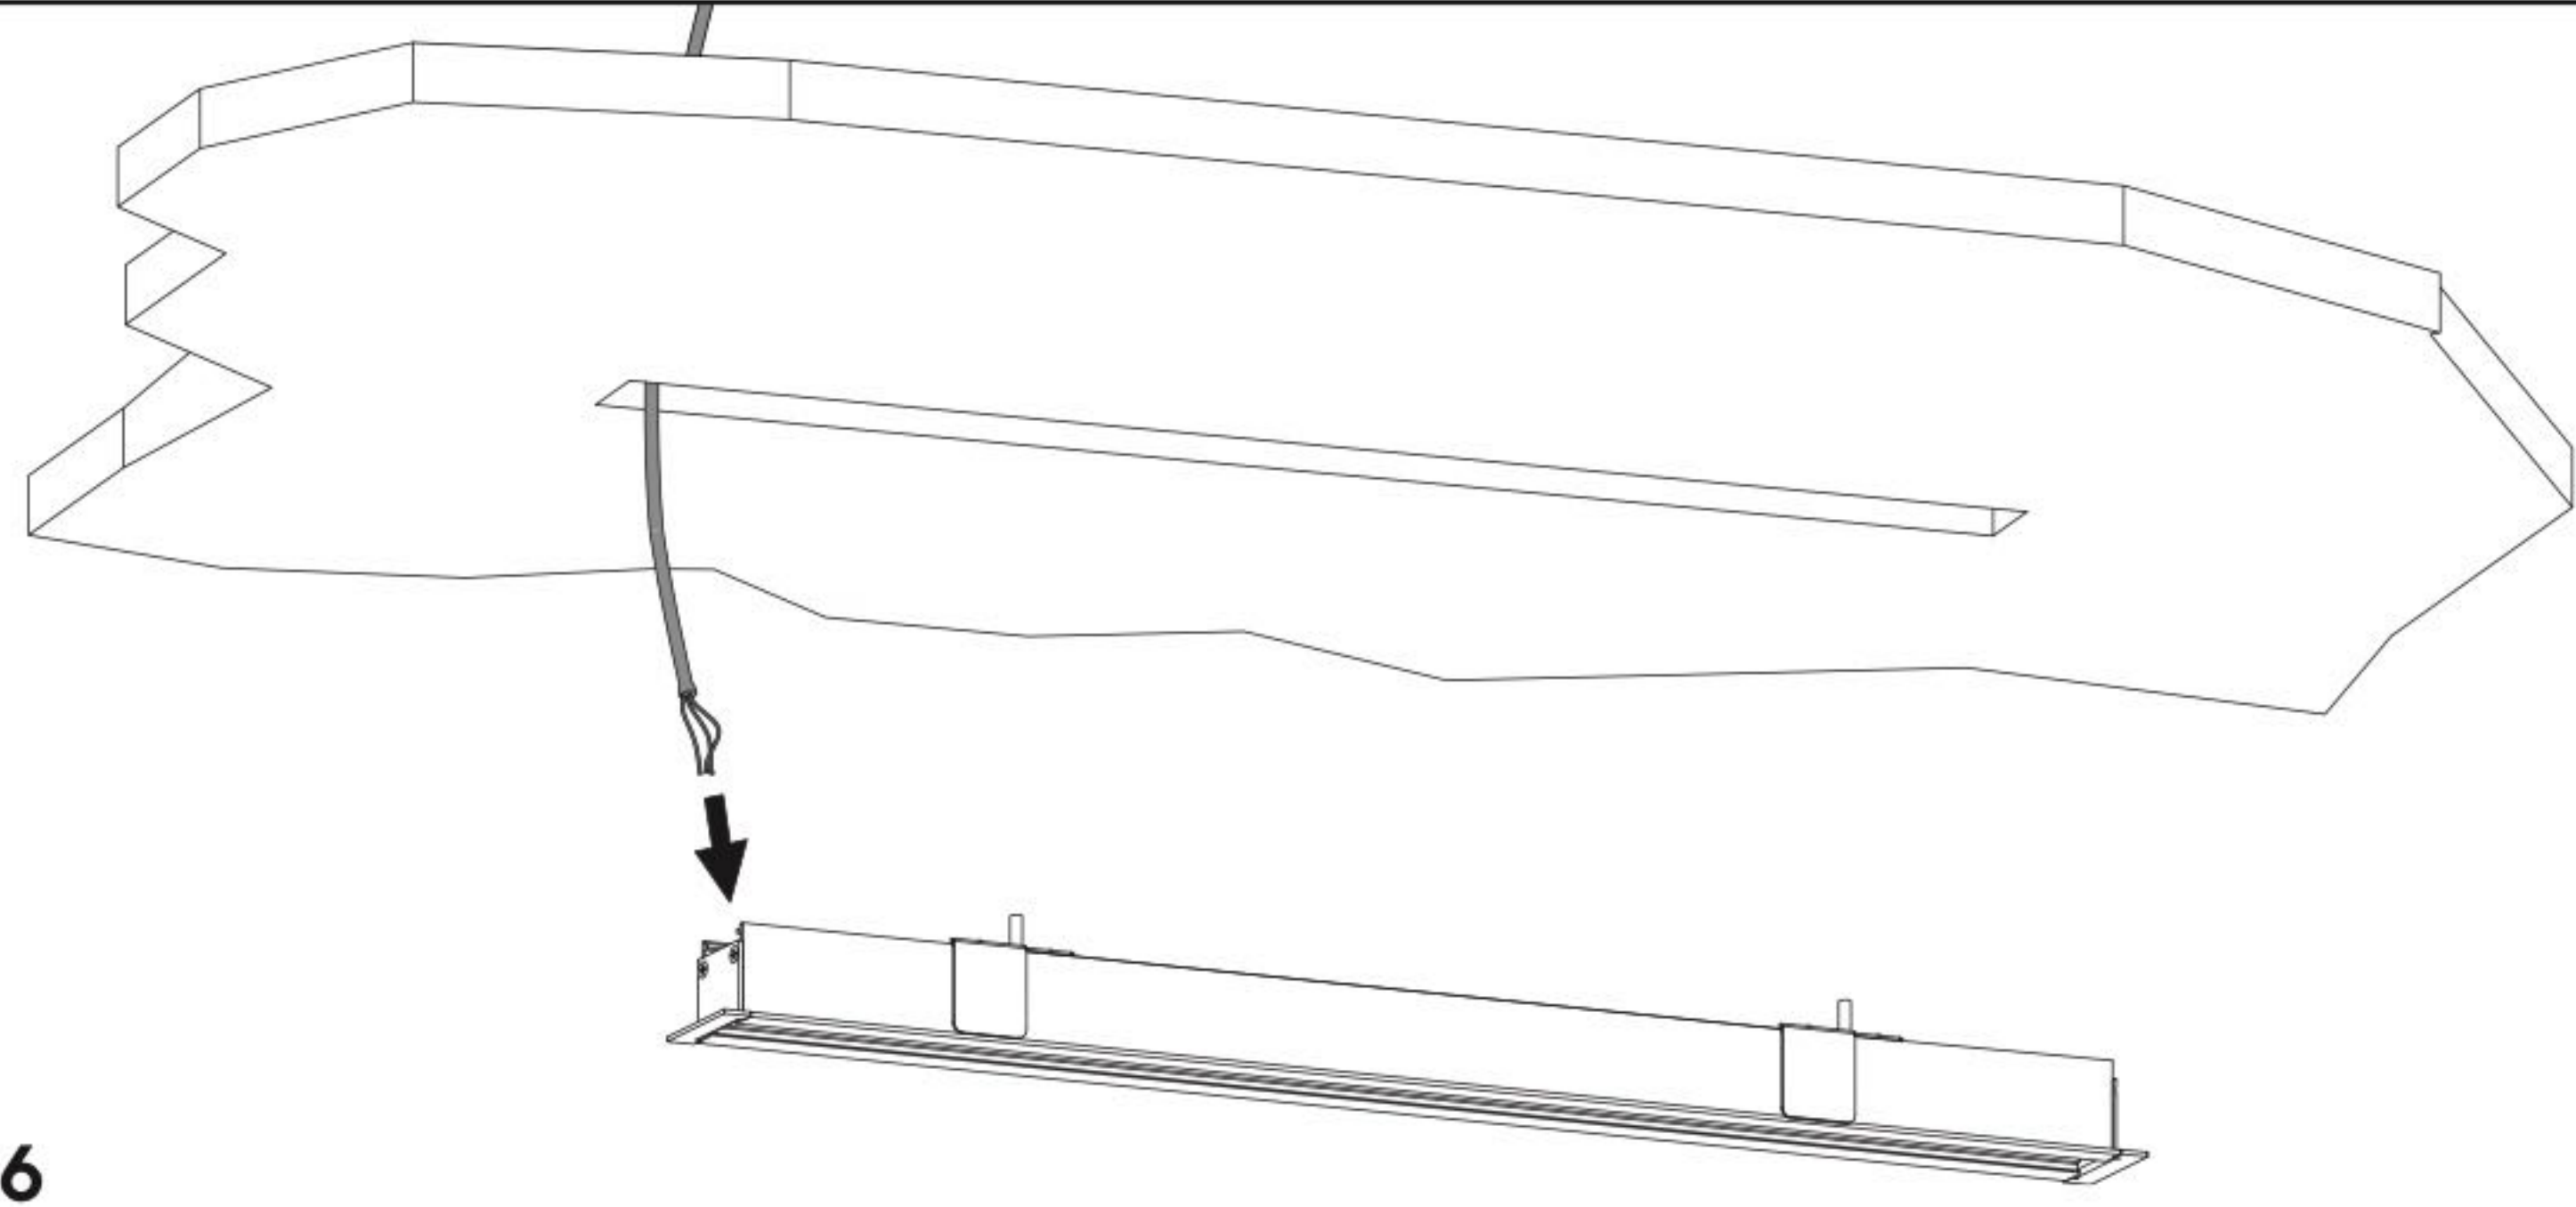


6

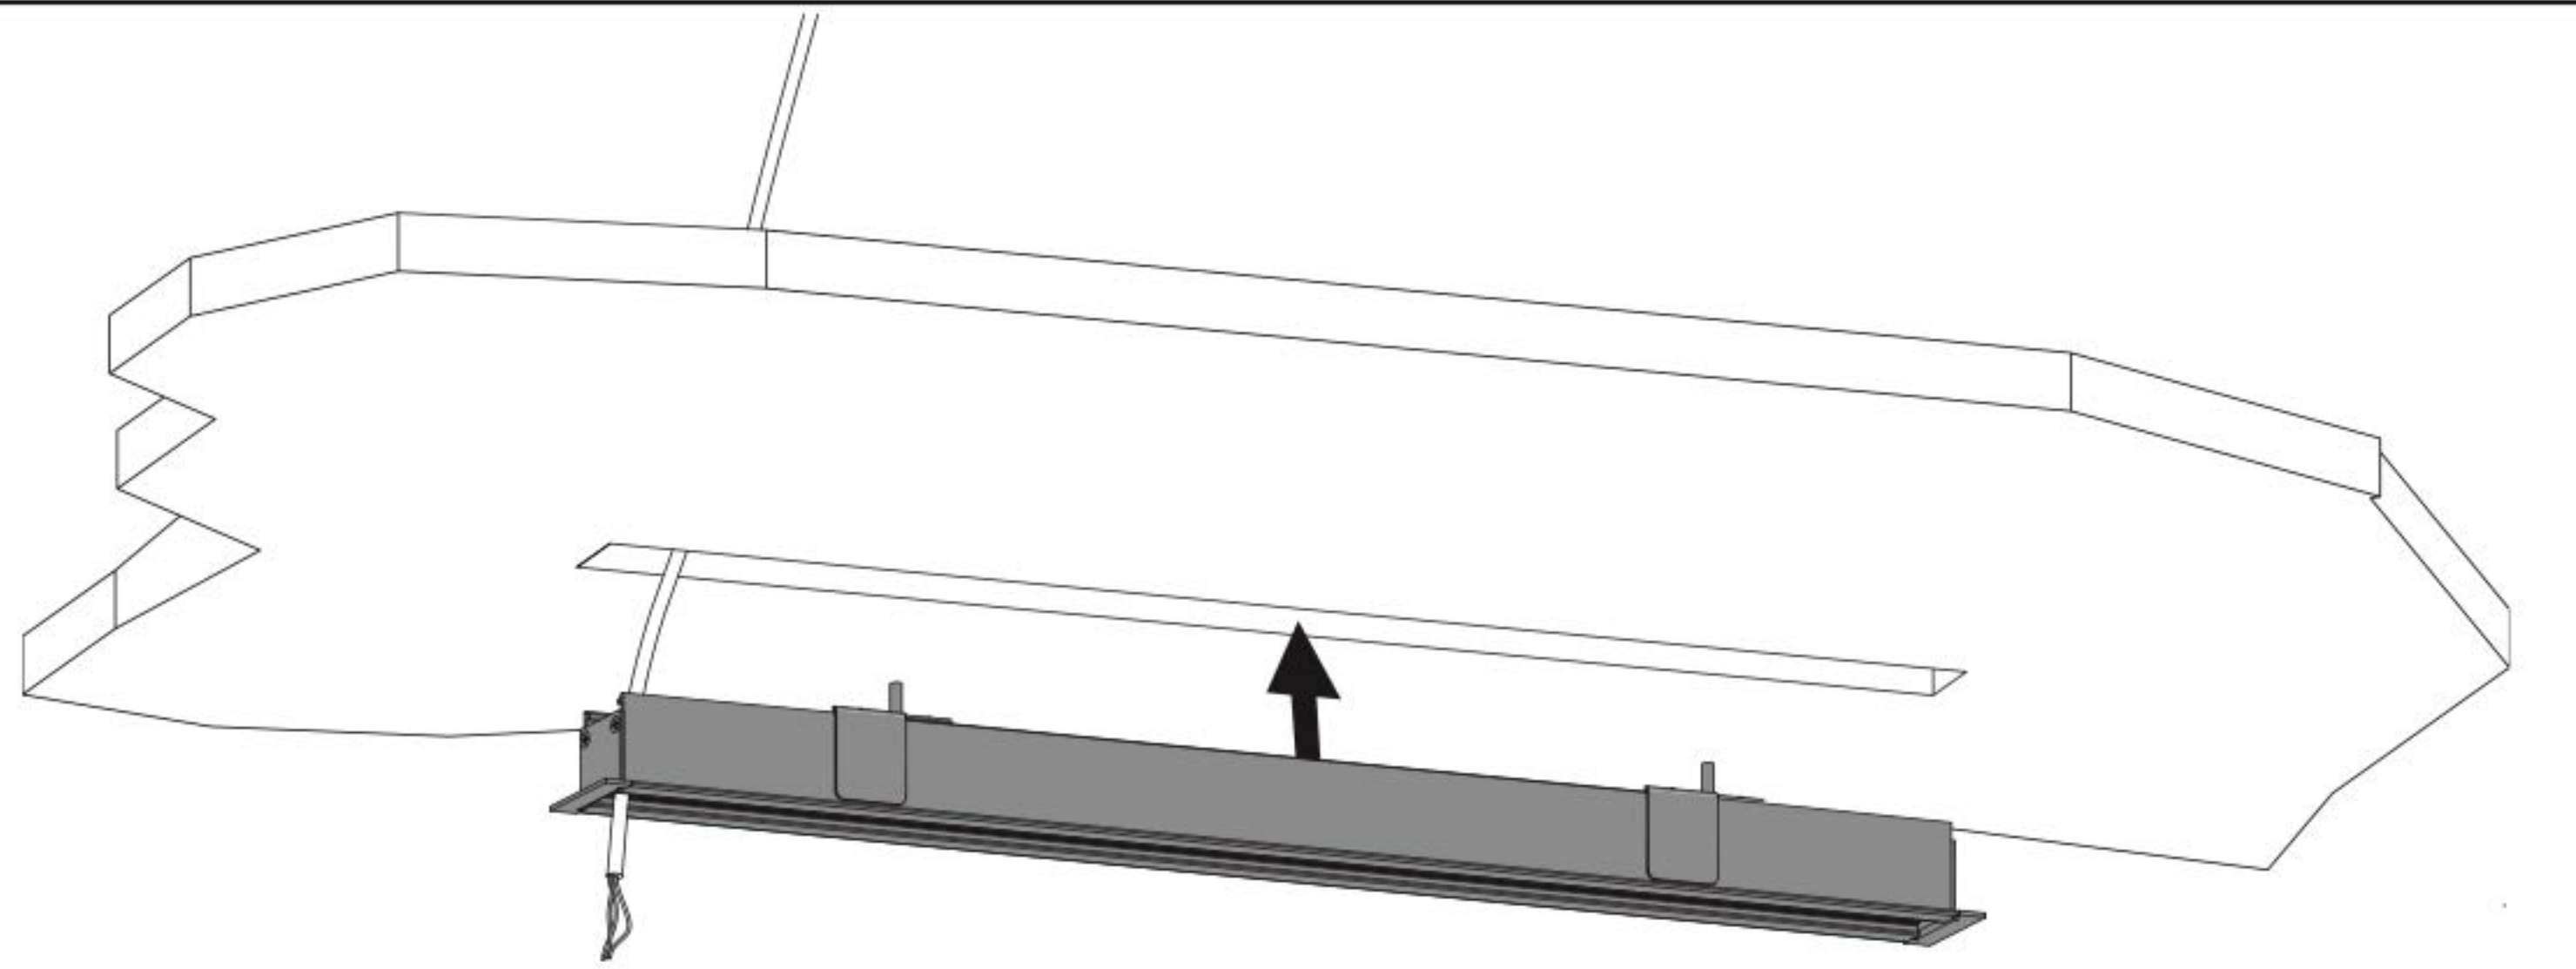


7

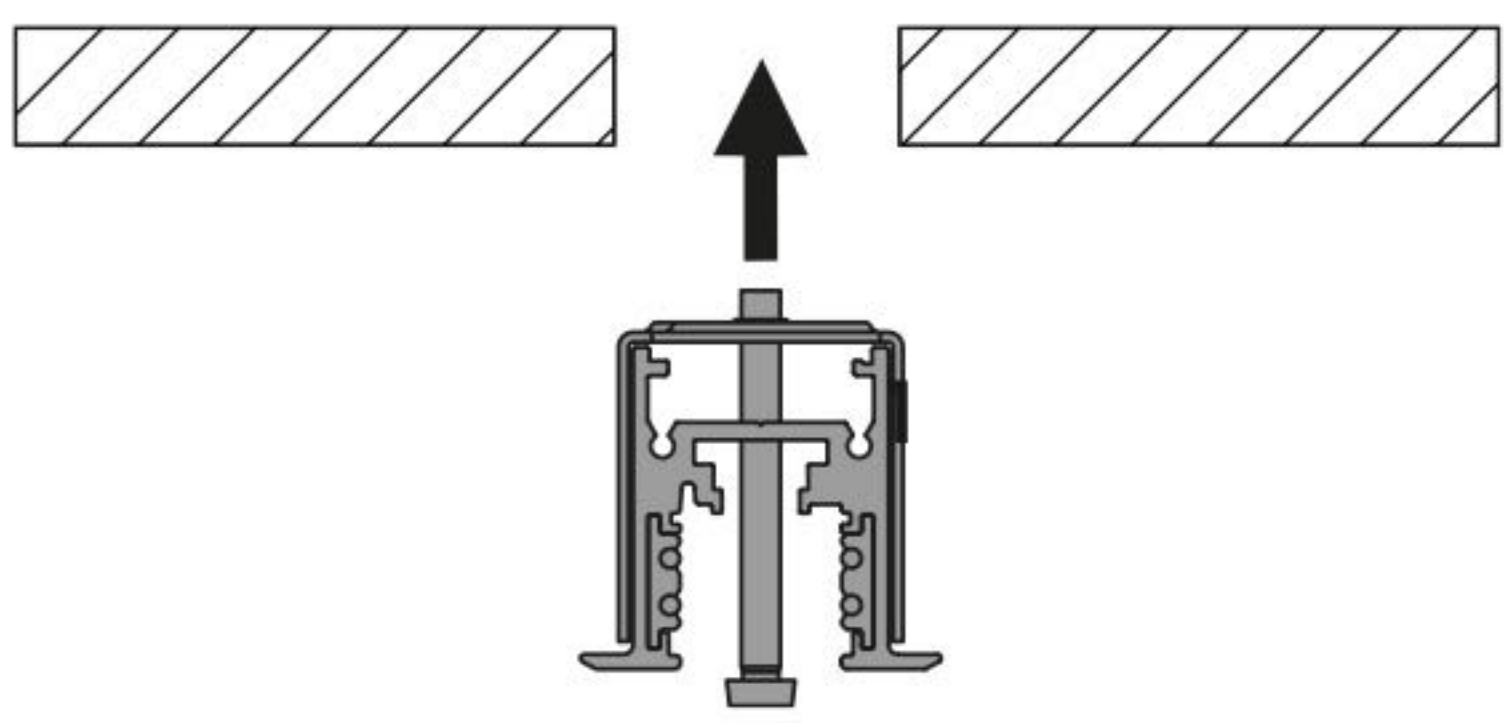


7a

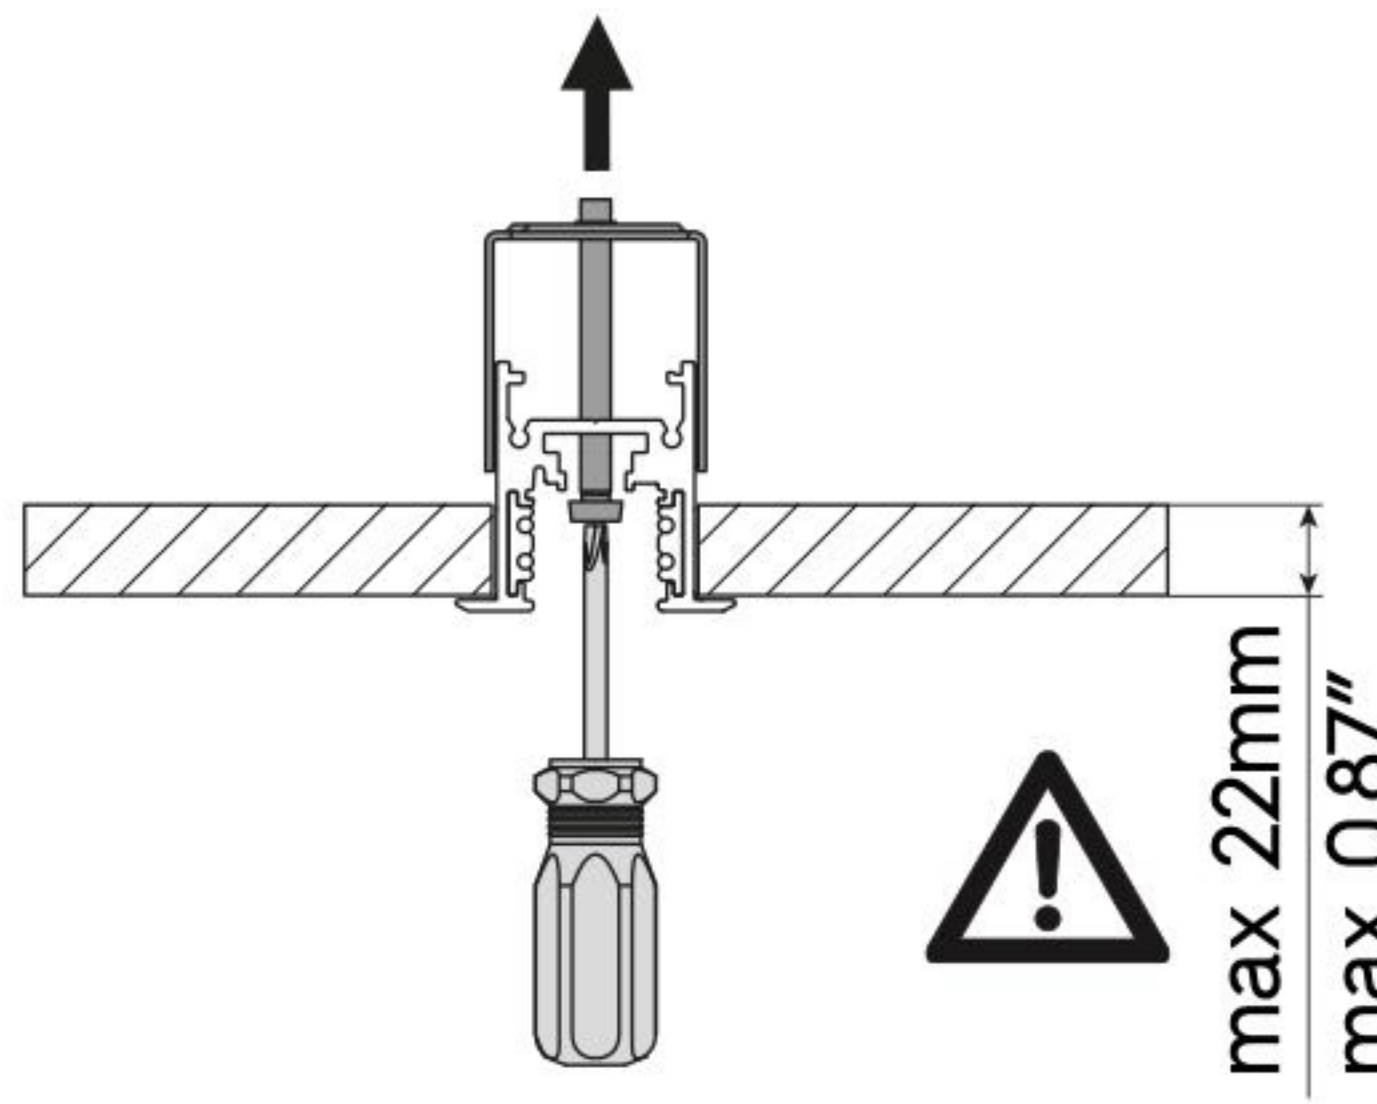

7b


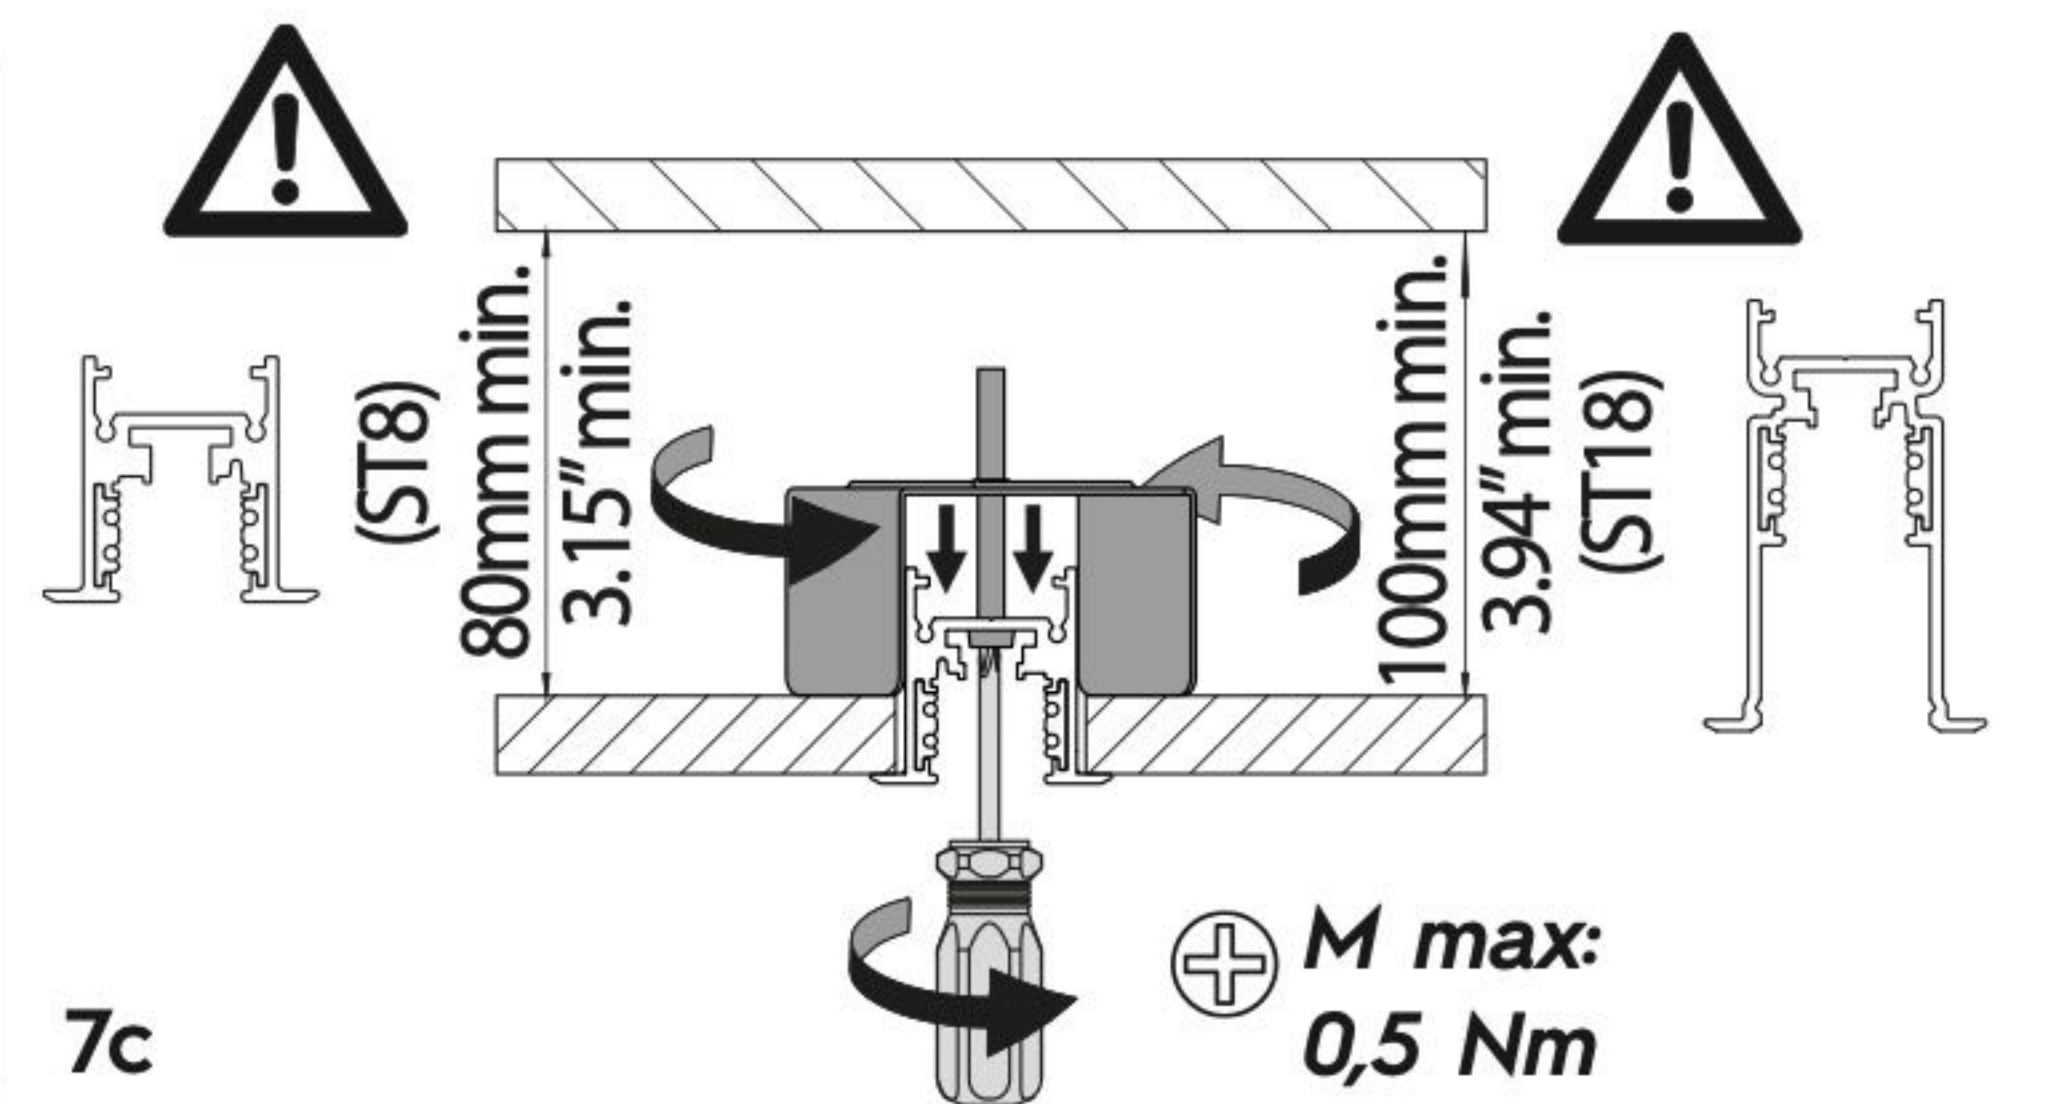


7c

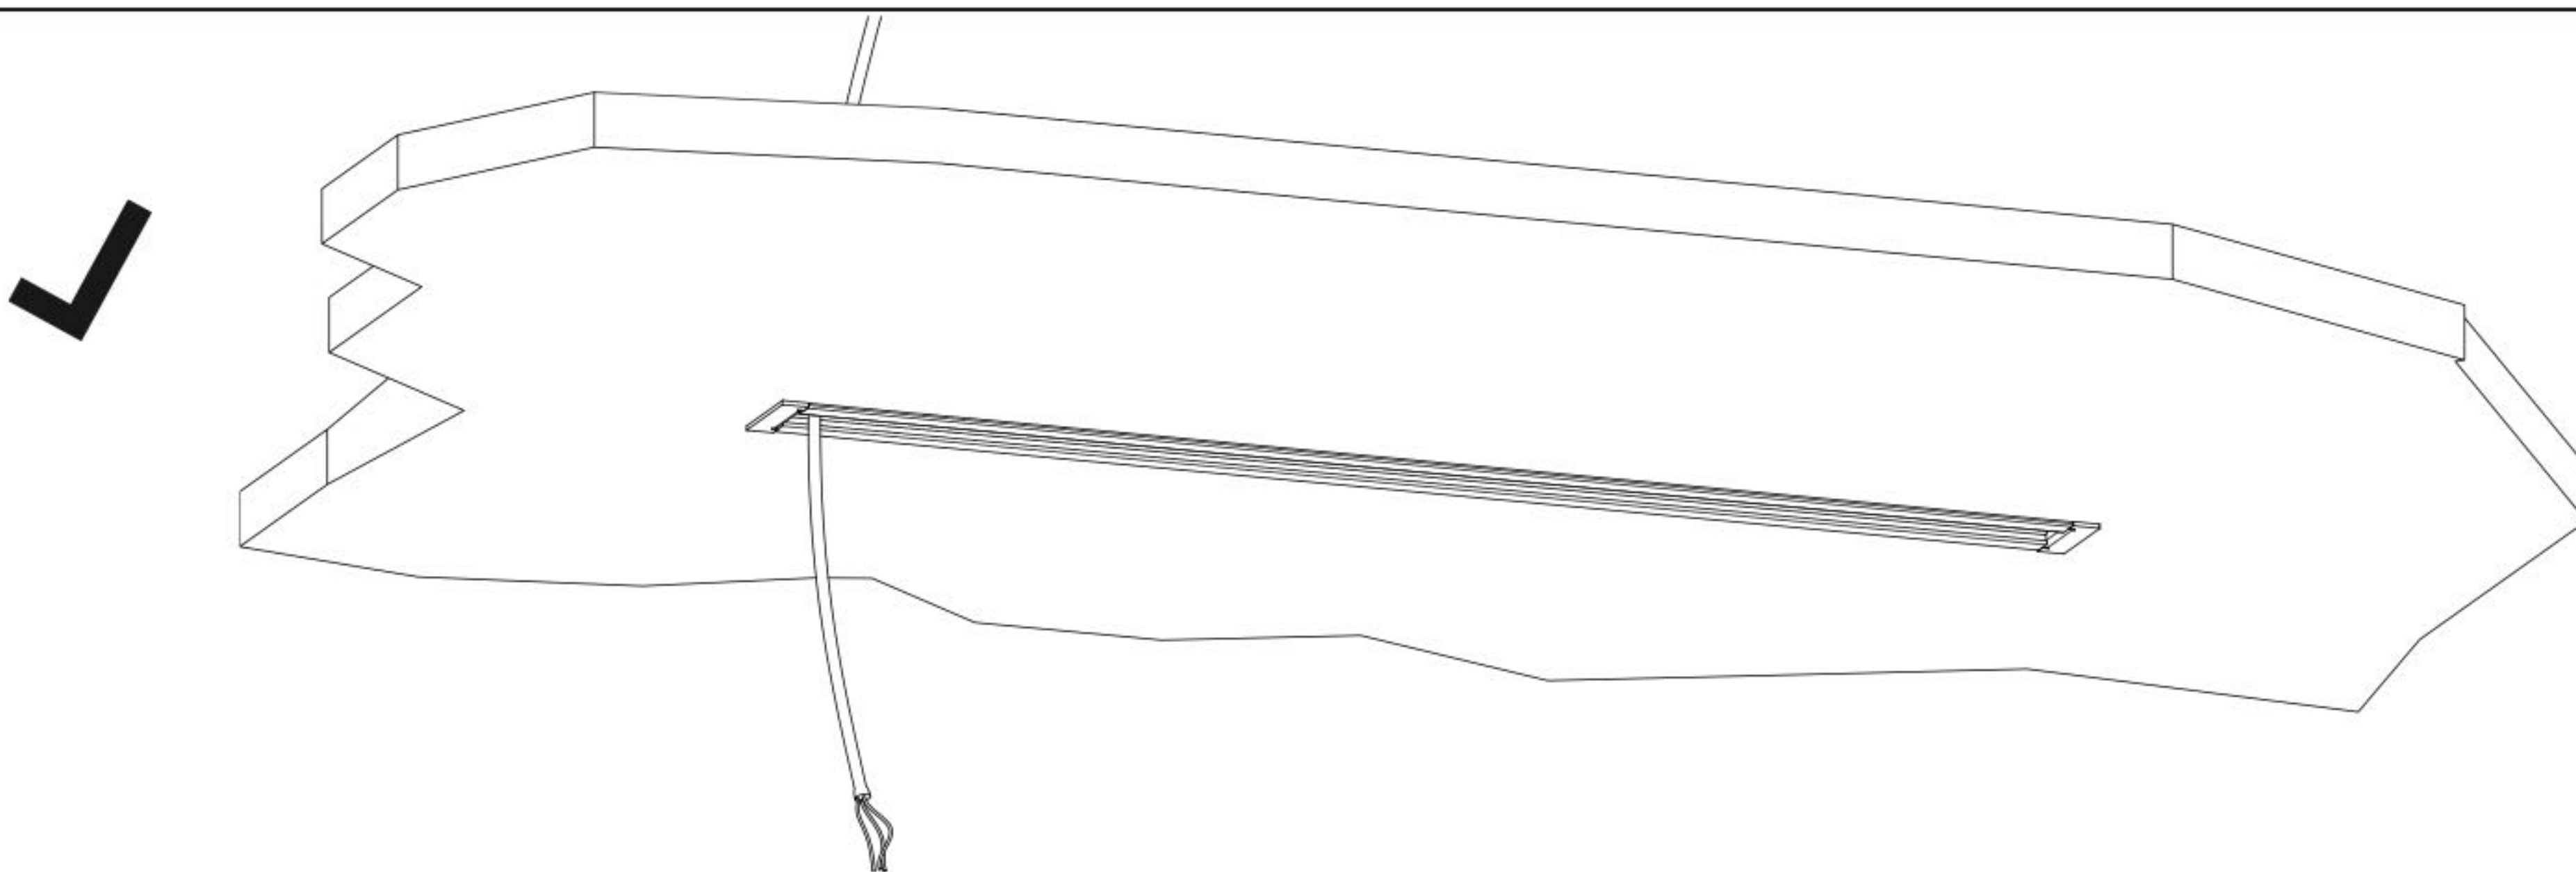


8


3b with rigid suspension sets

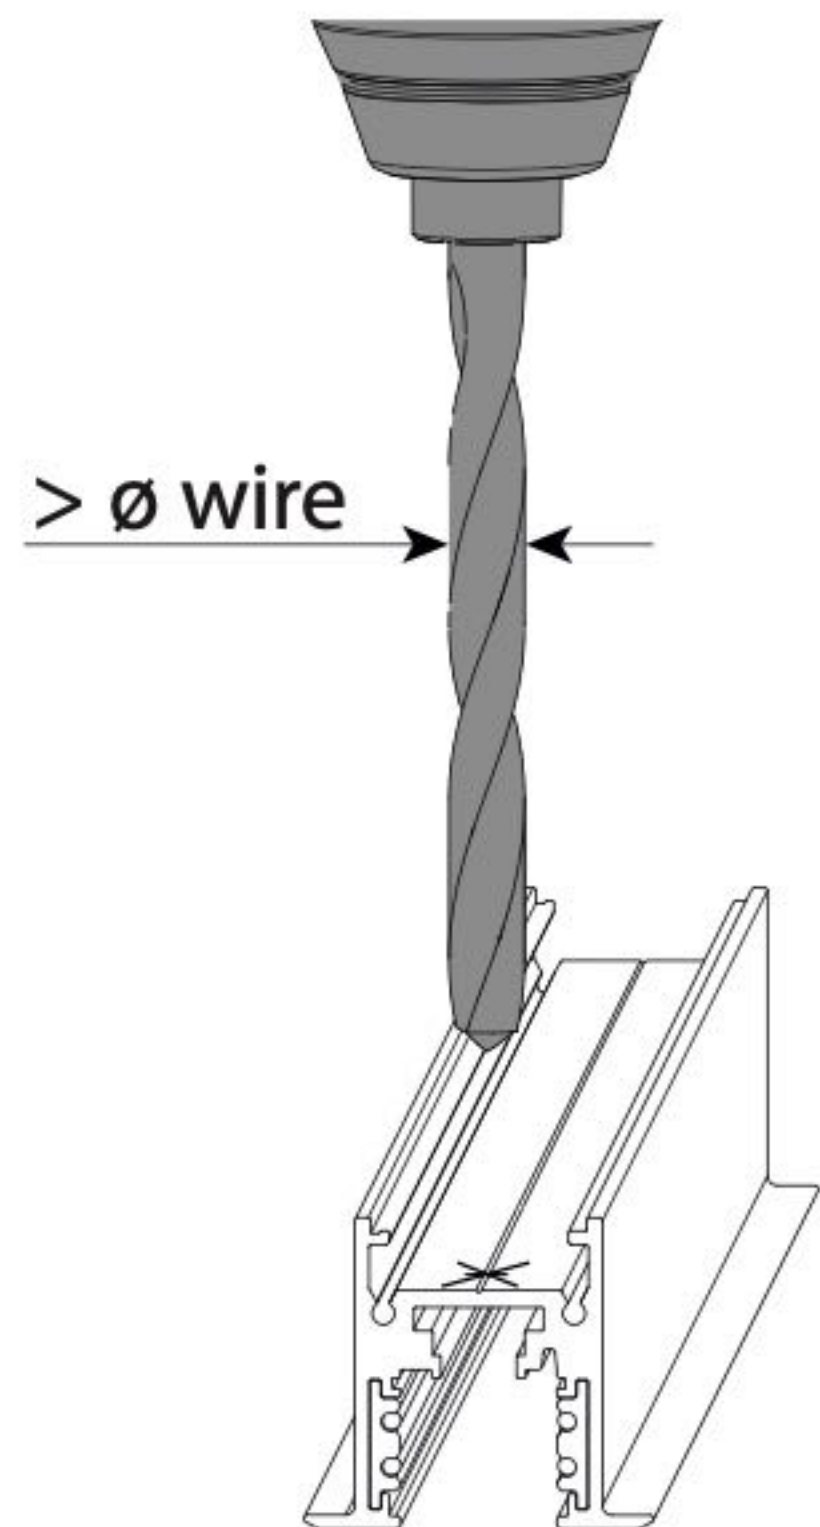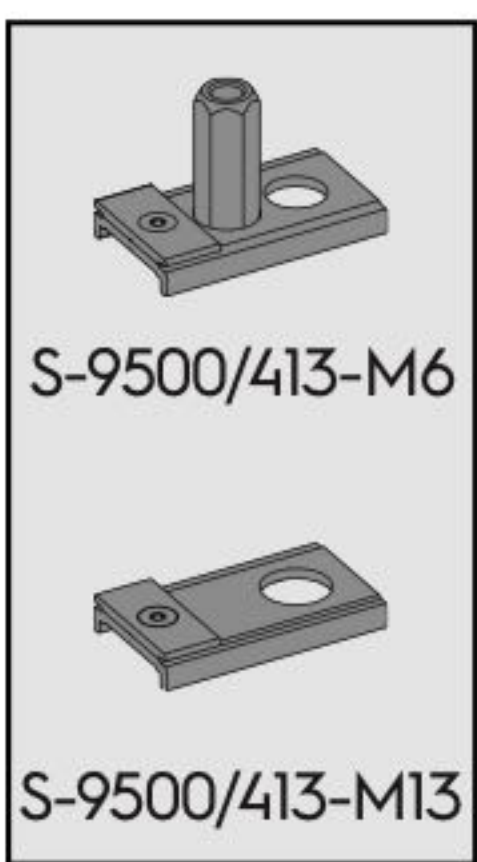


1

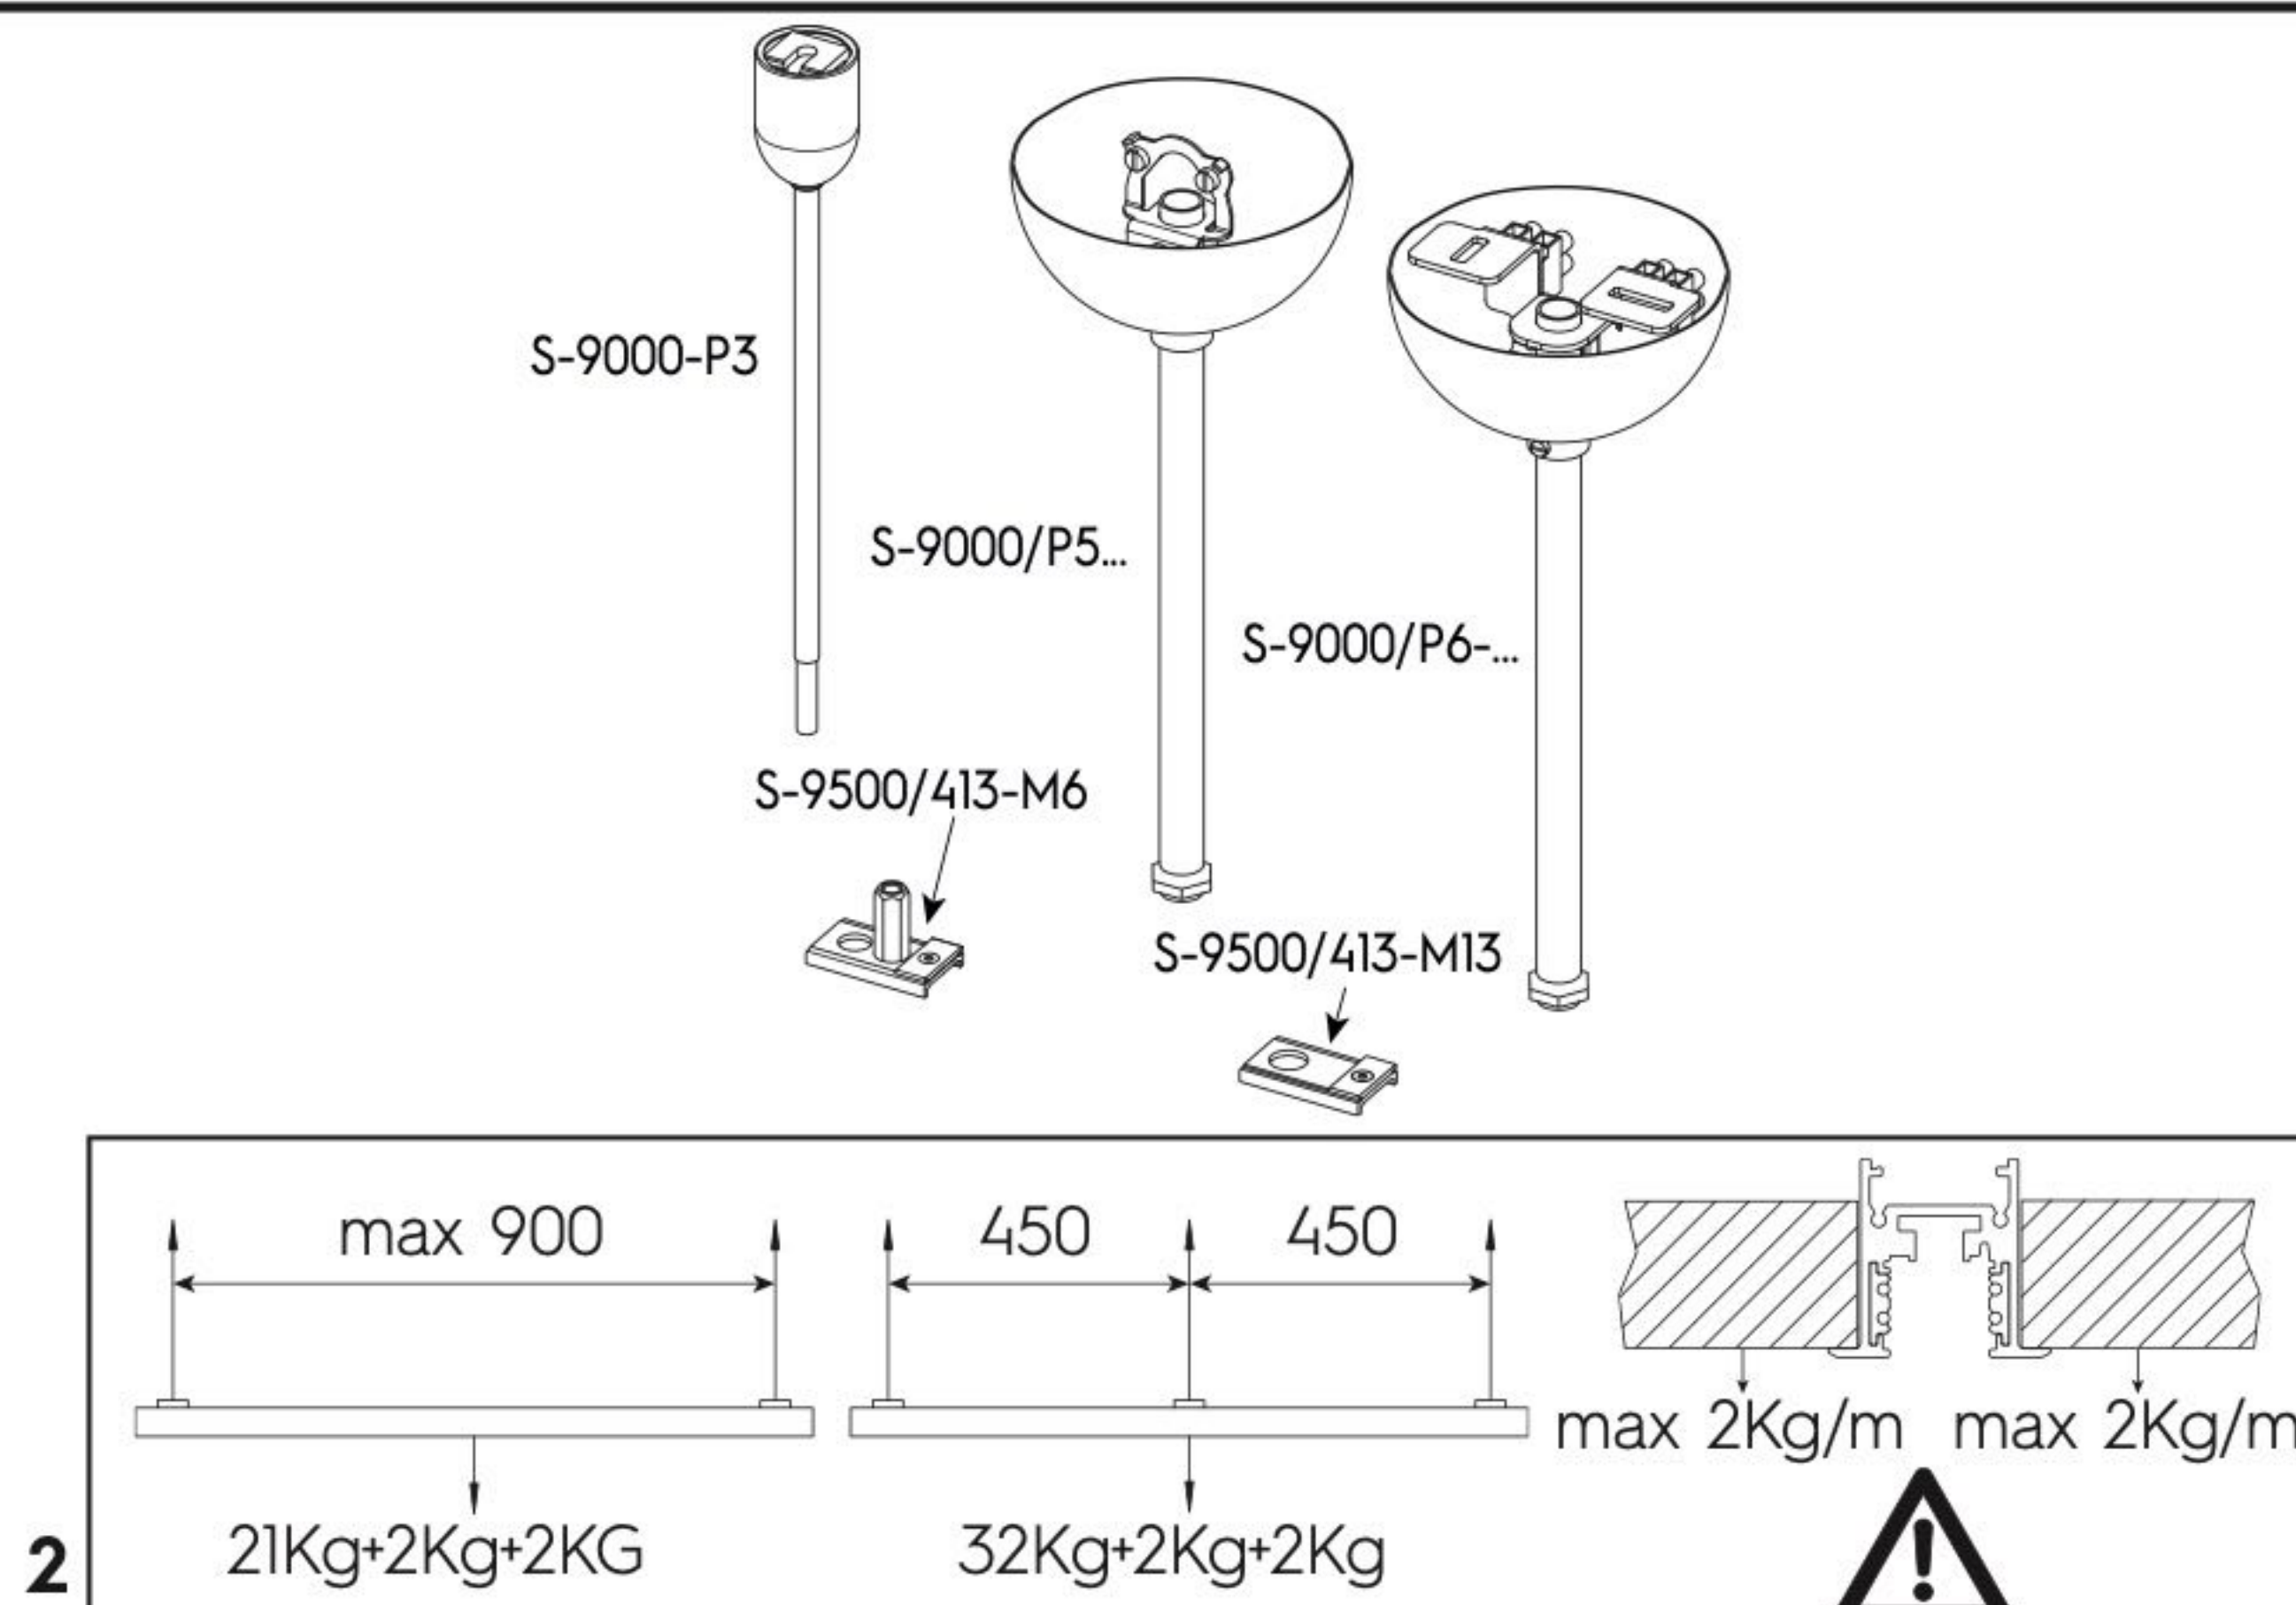


2

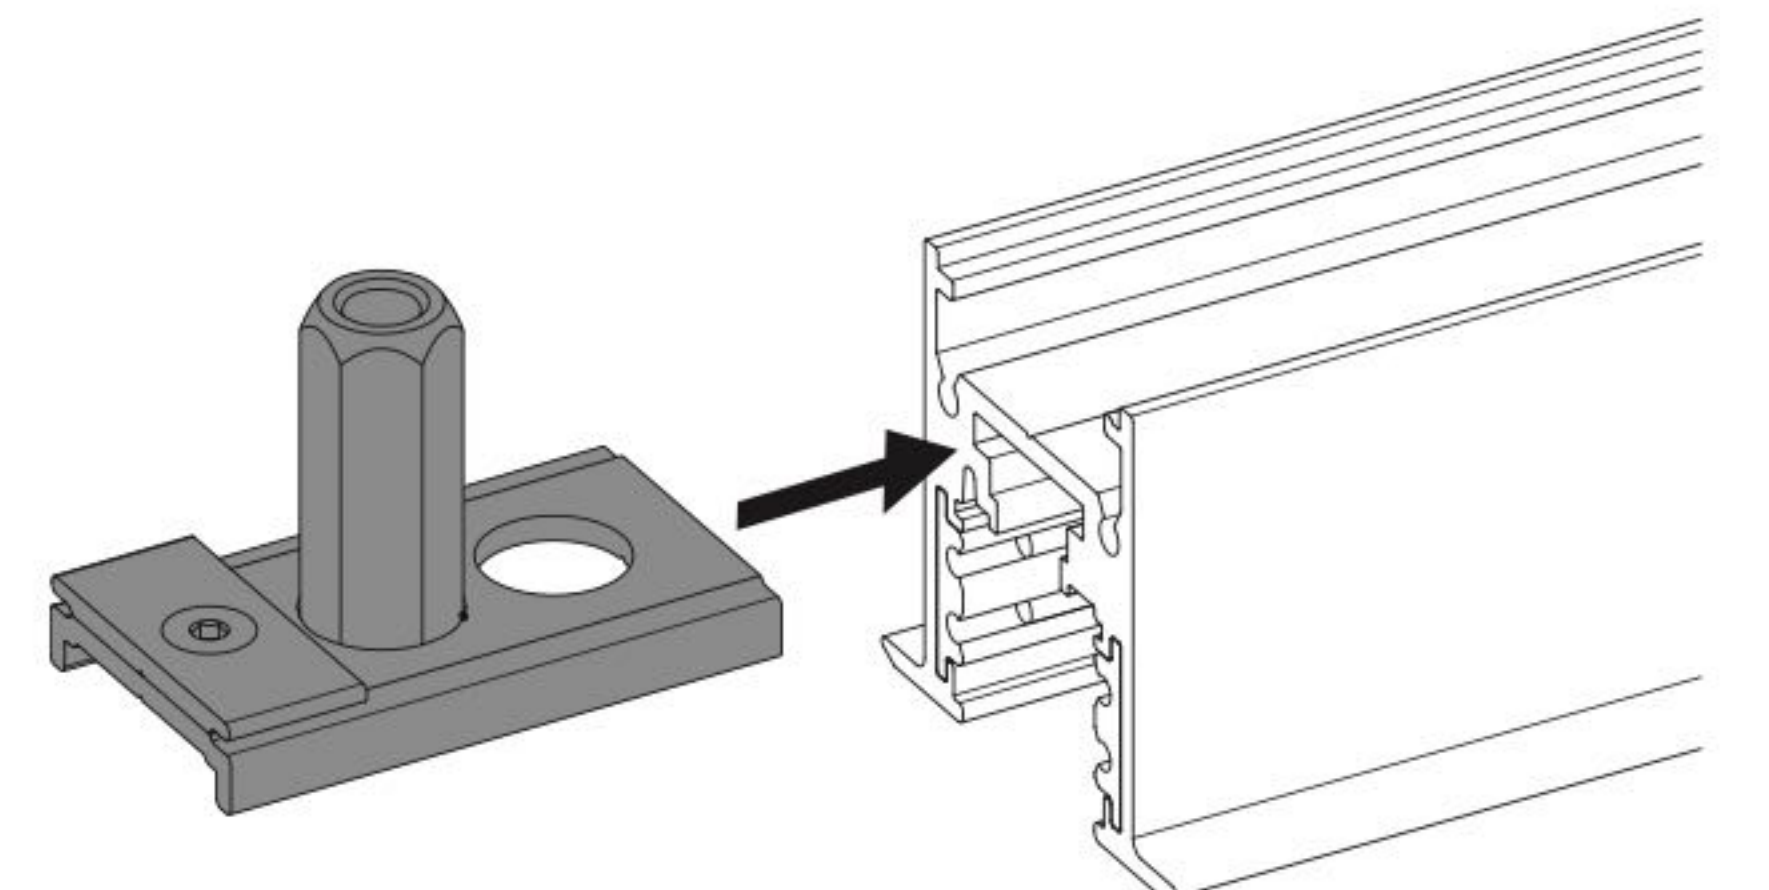


3

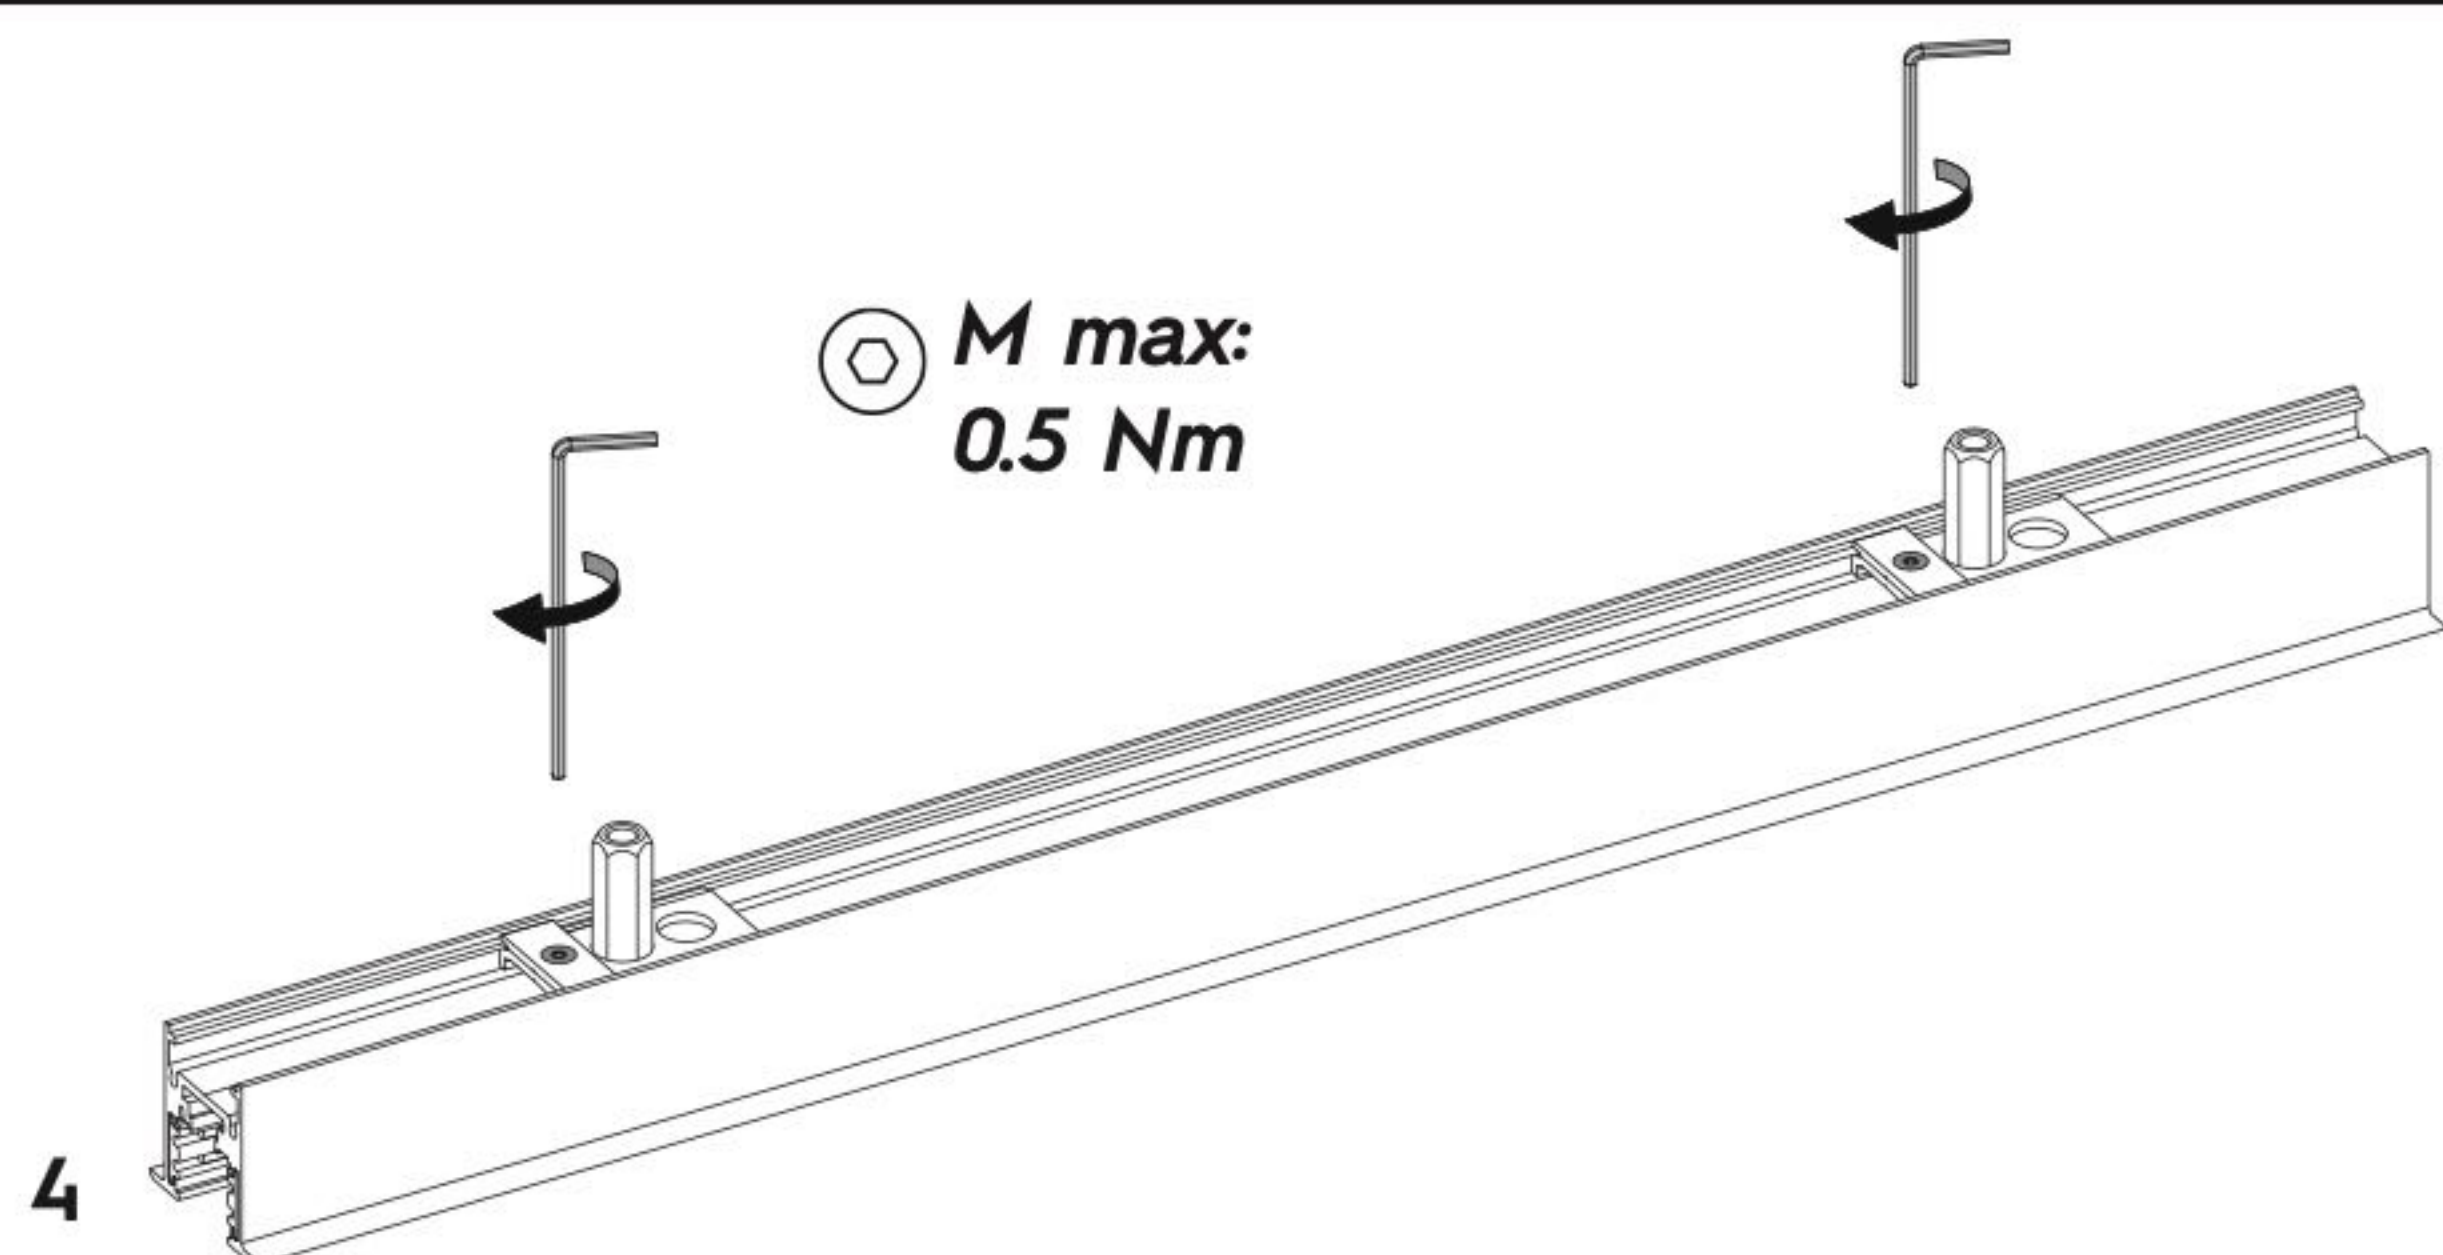


4

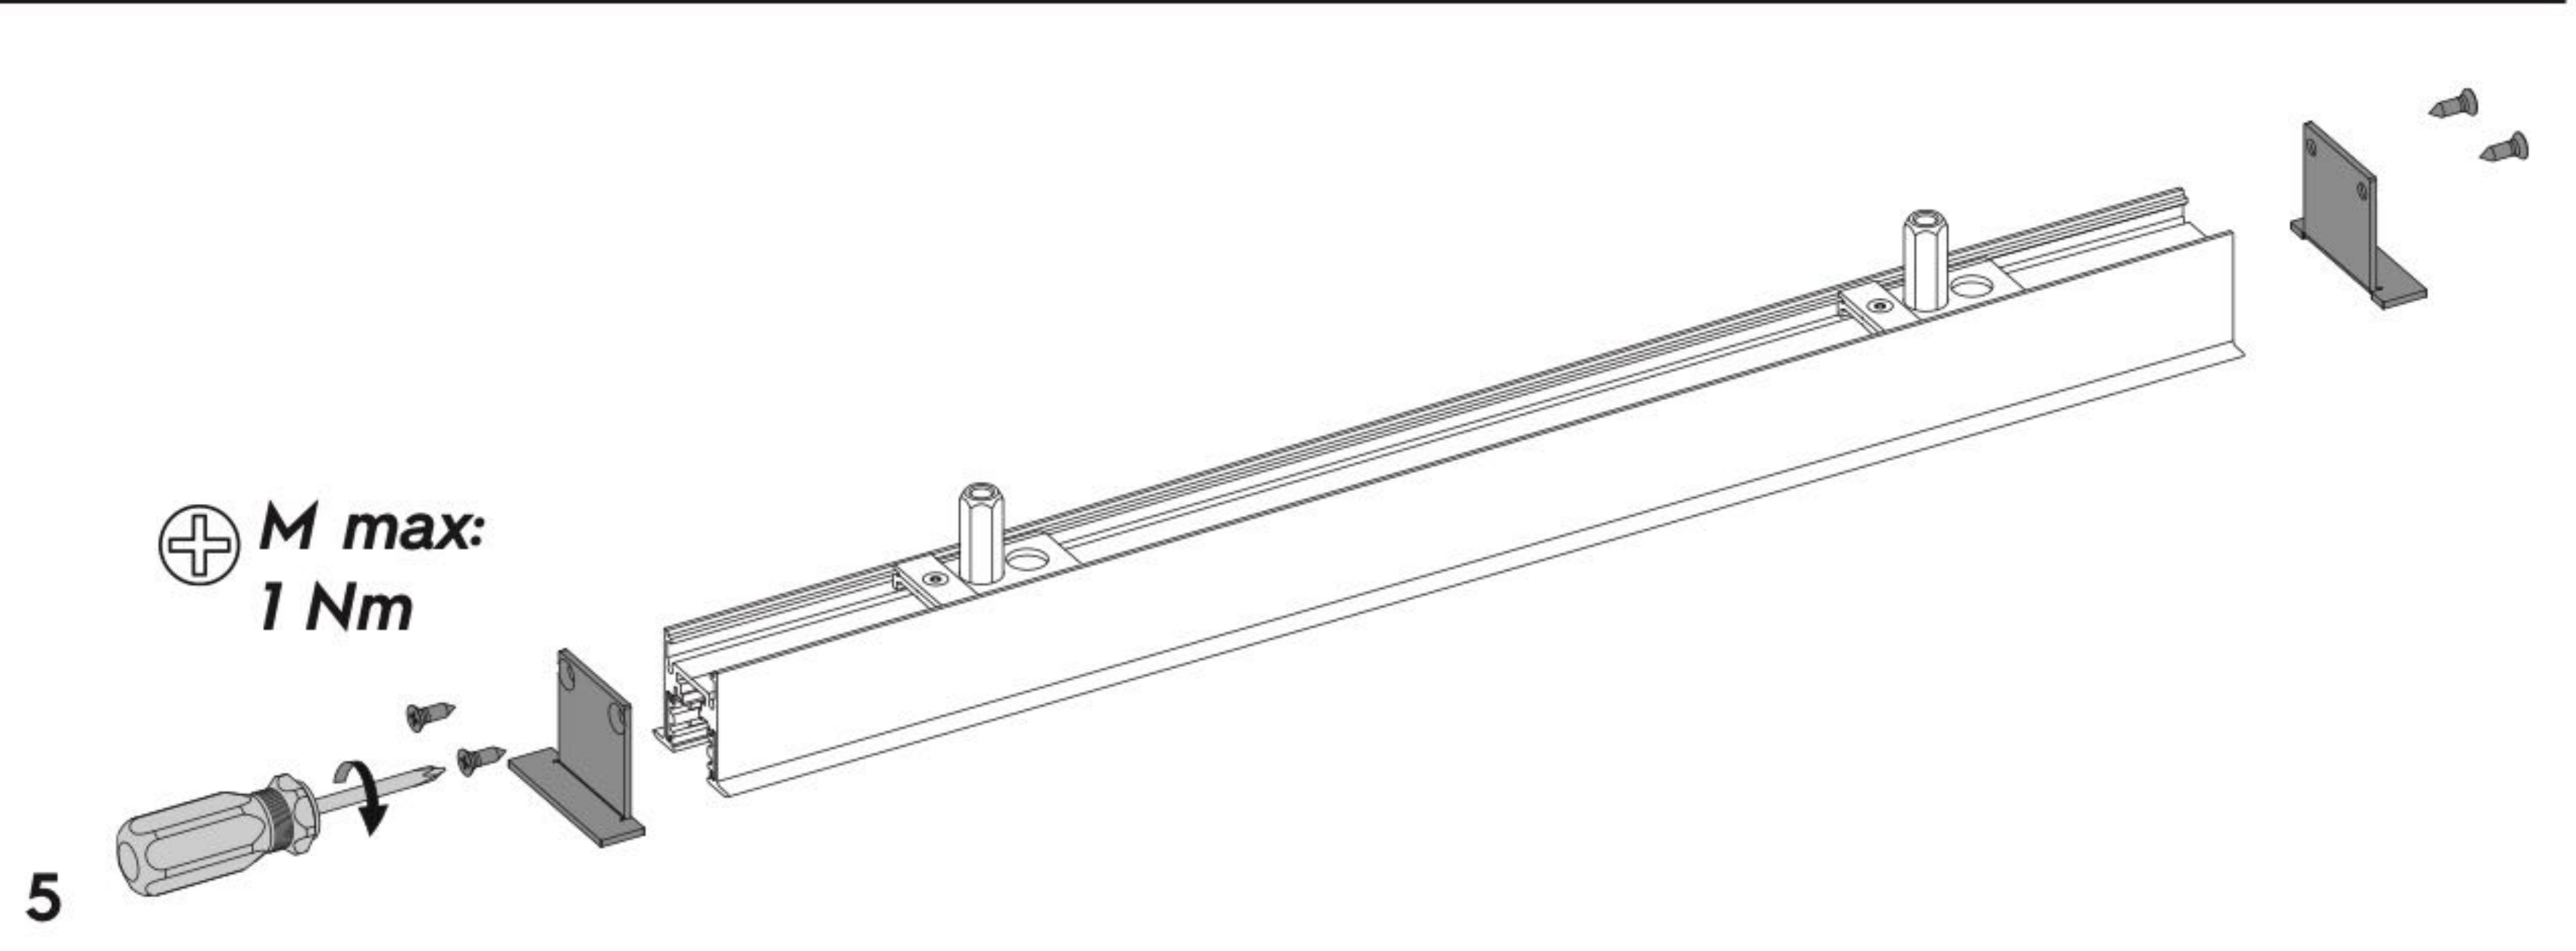


5


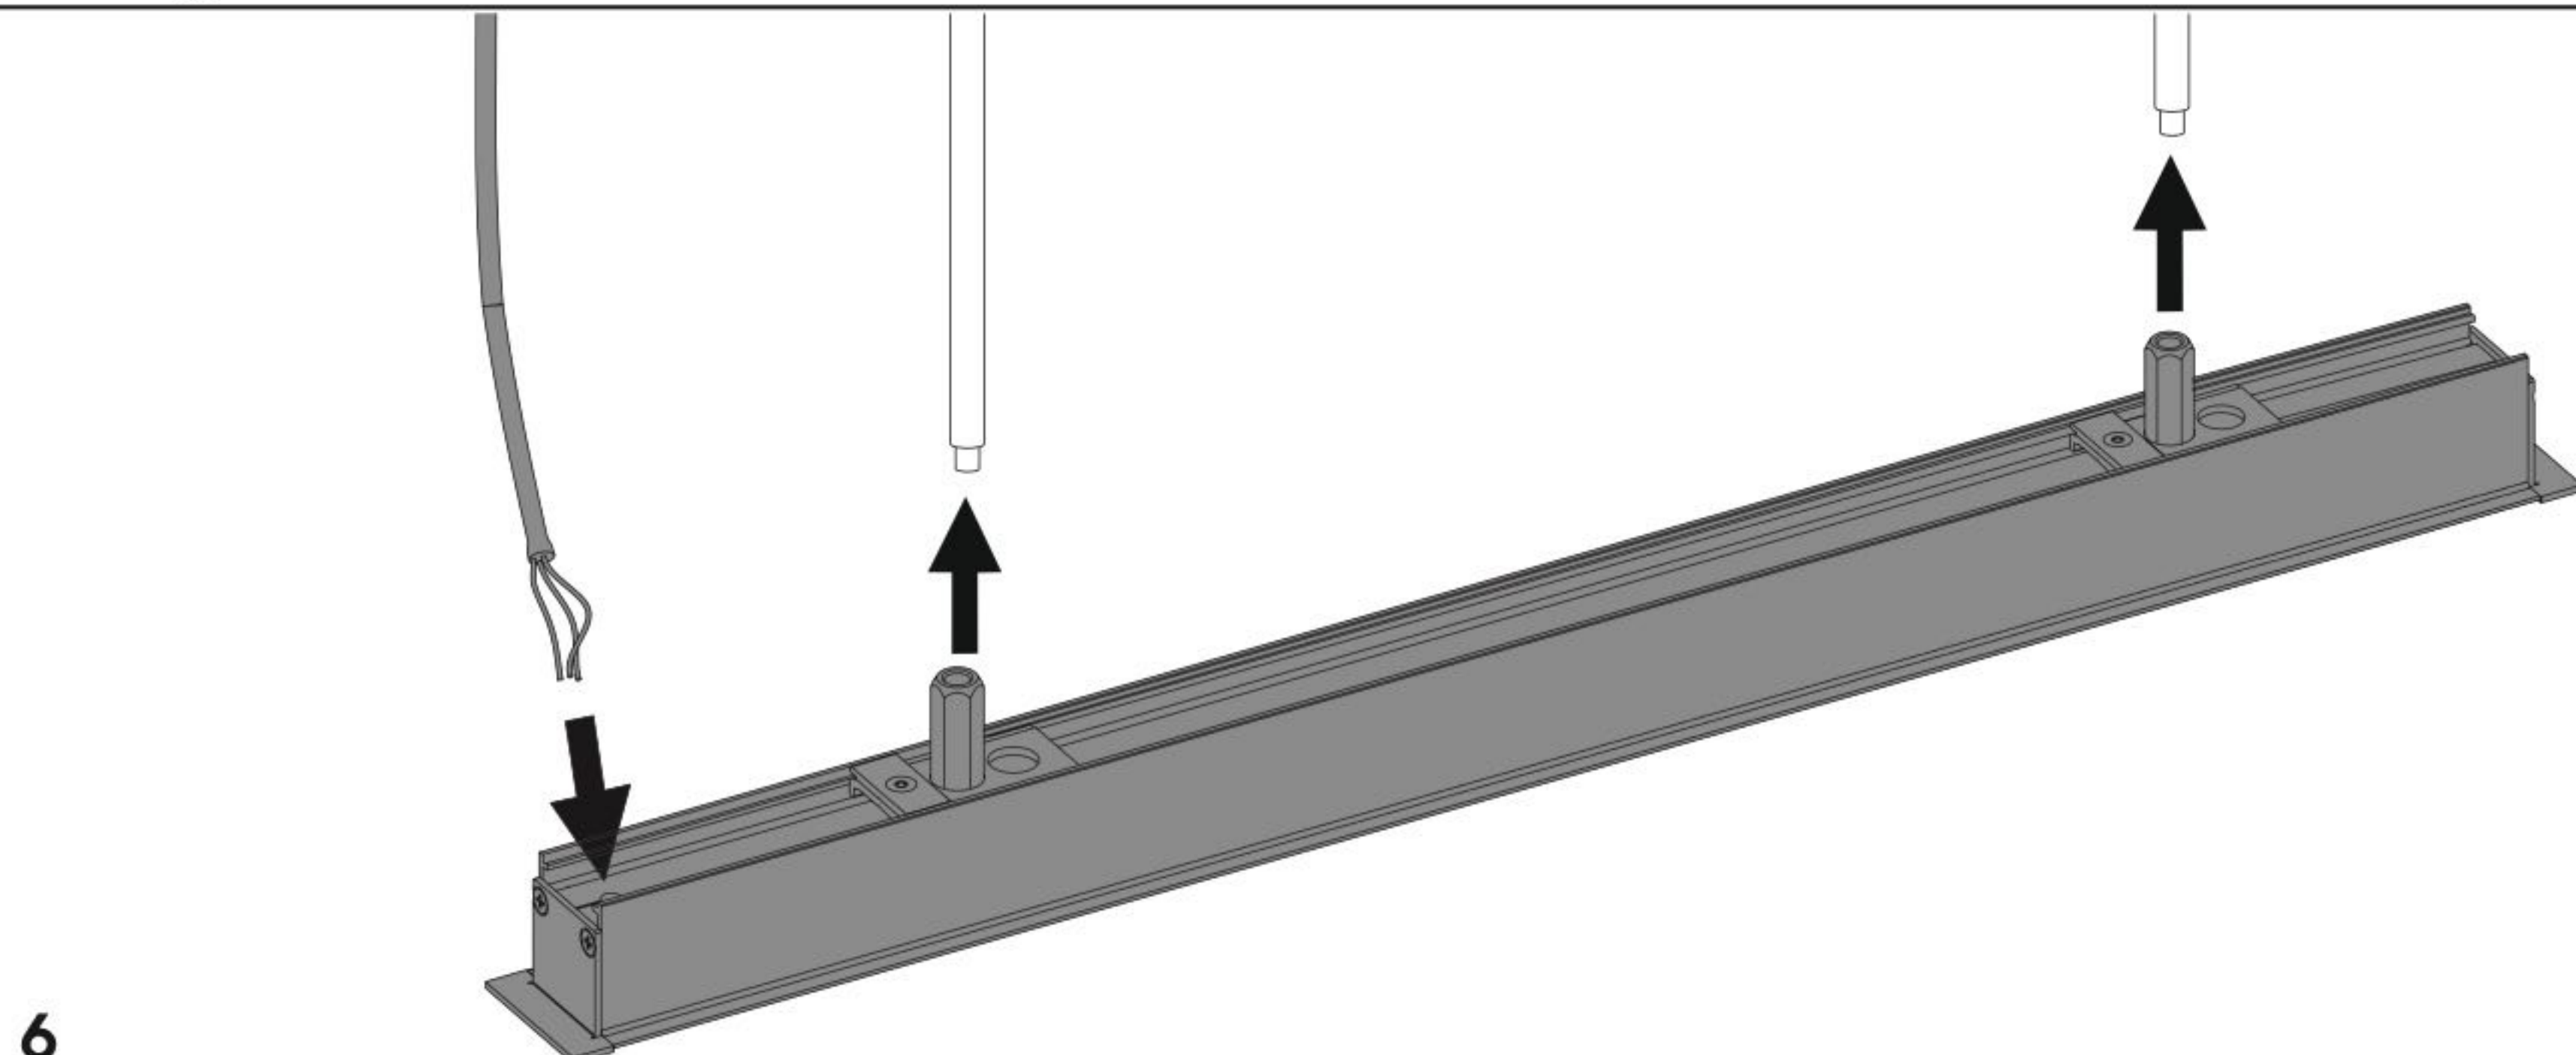


6




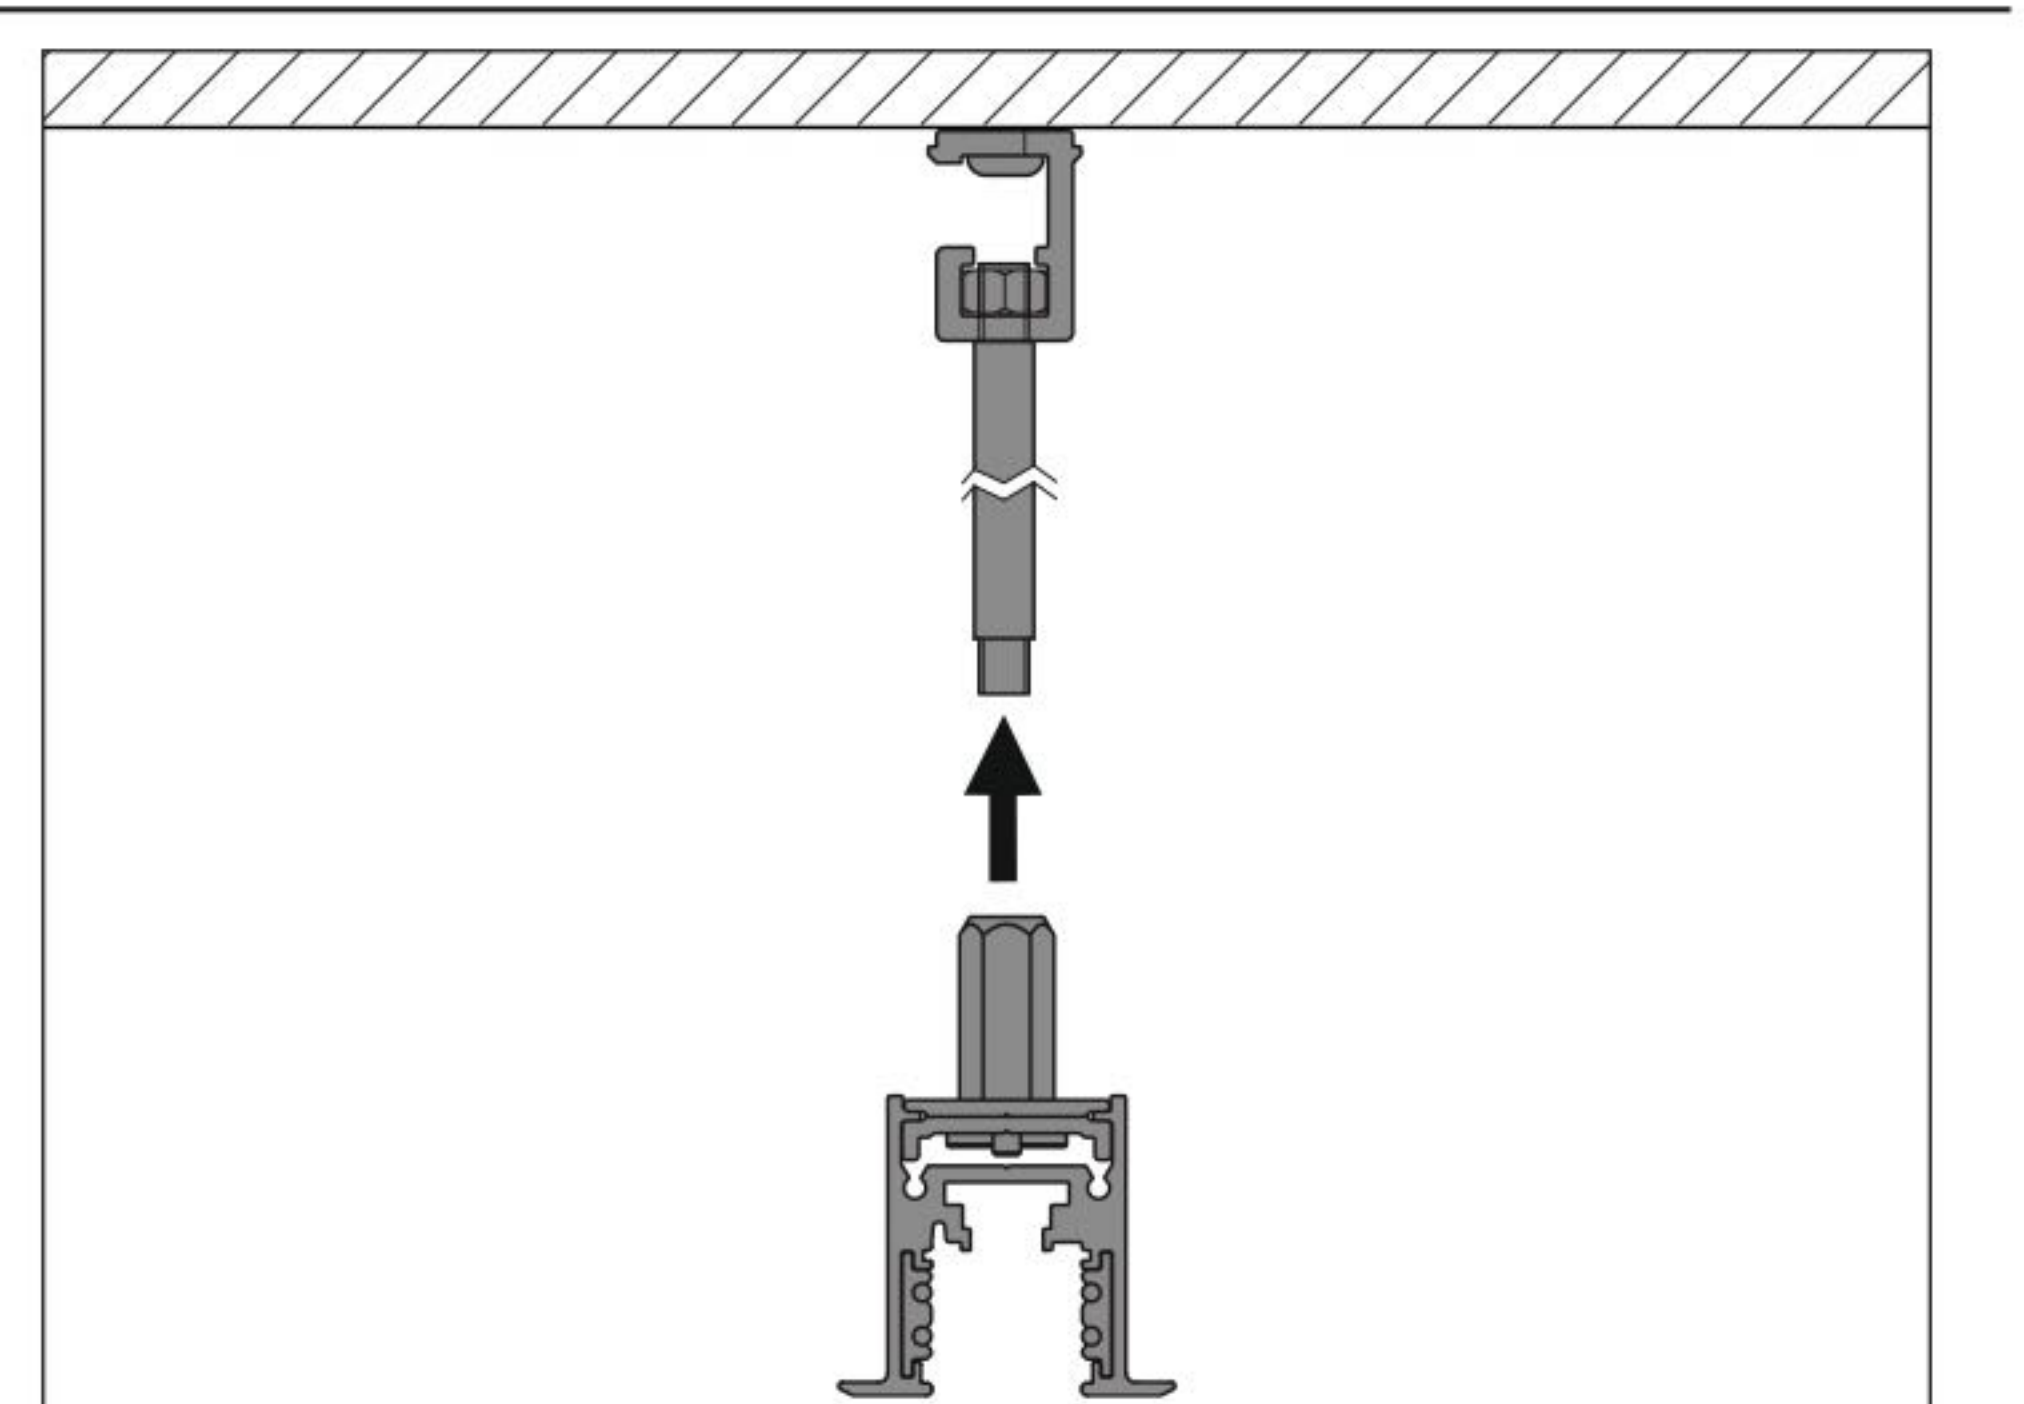


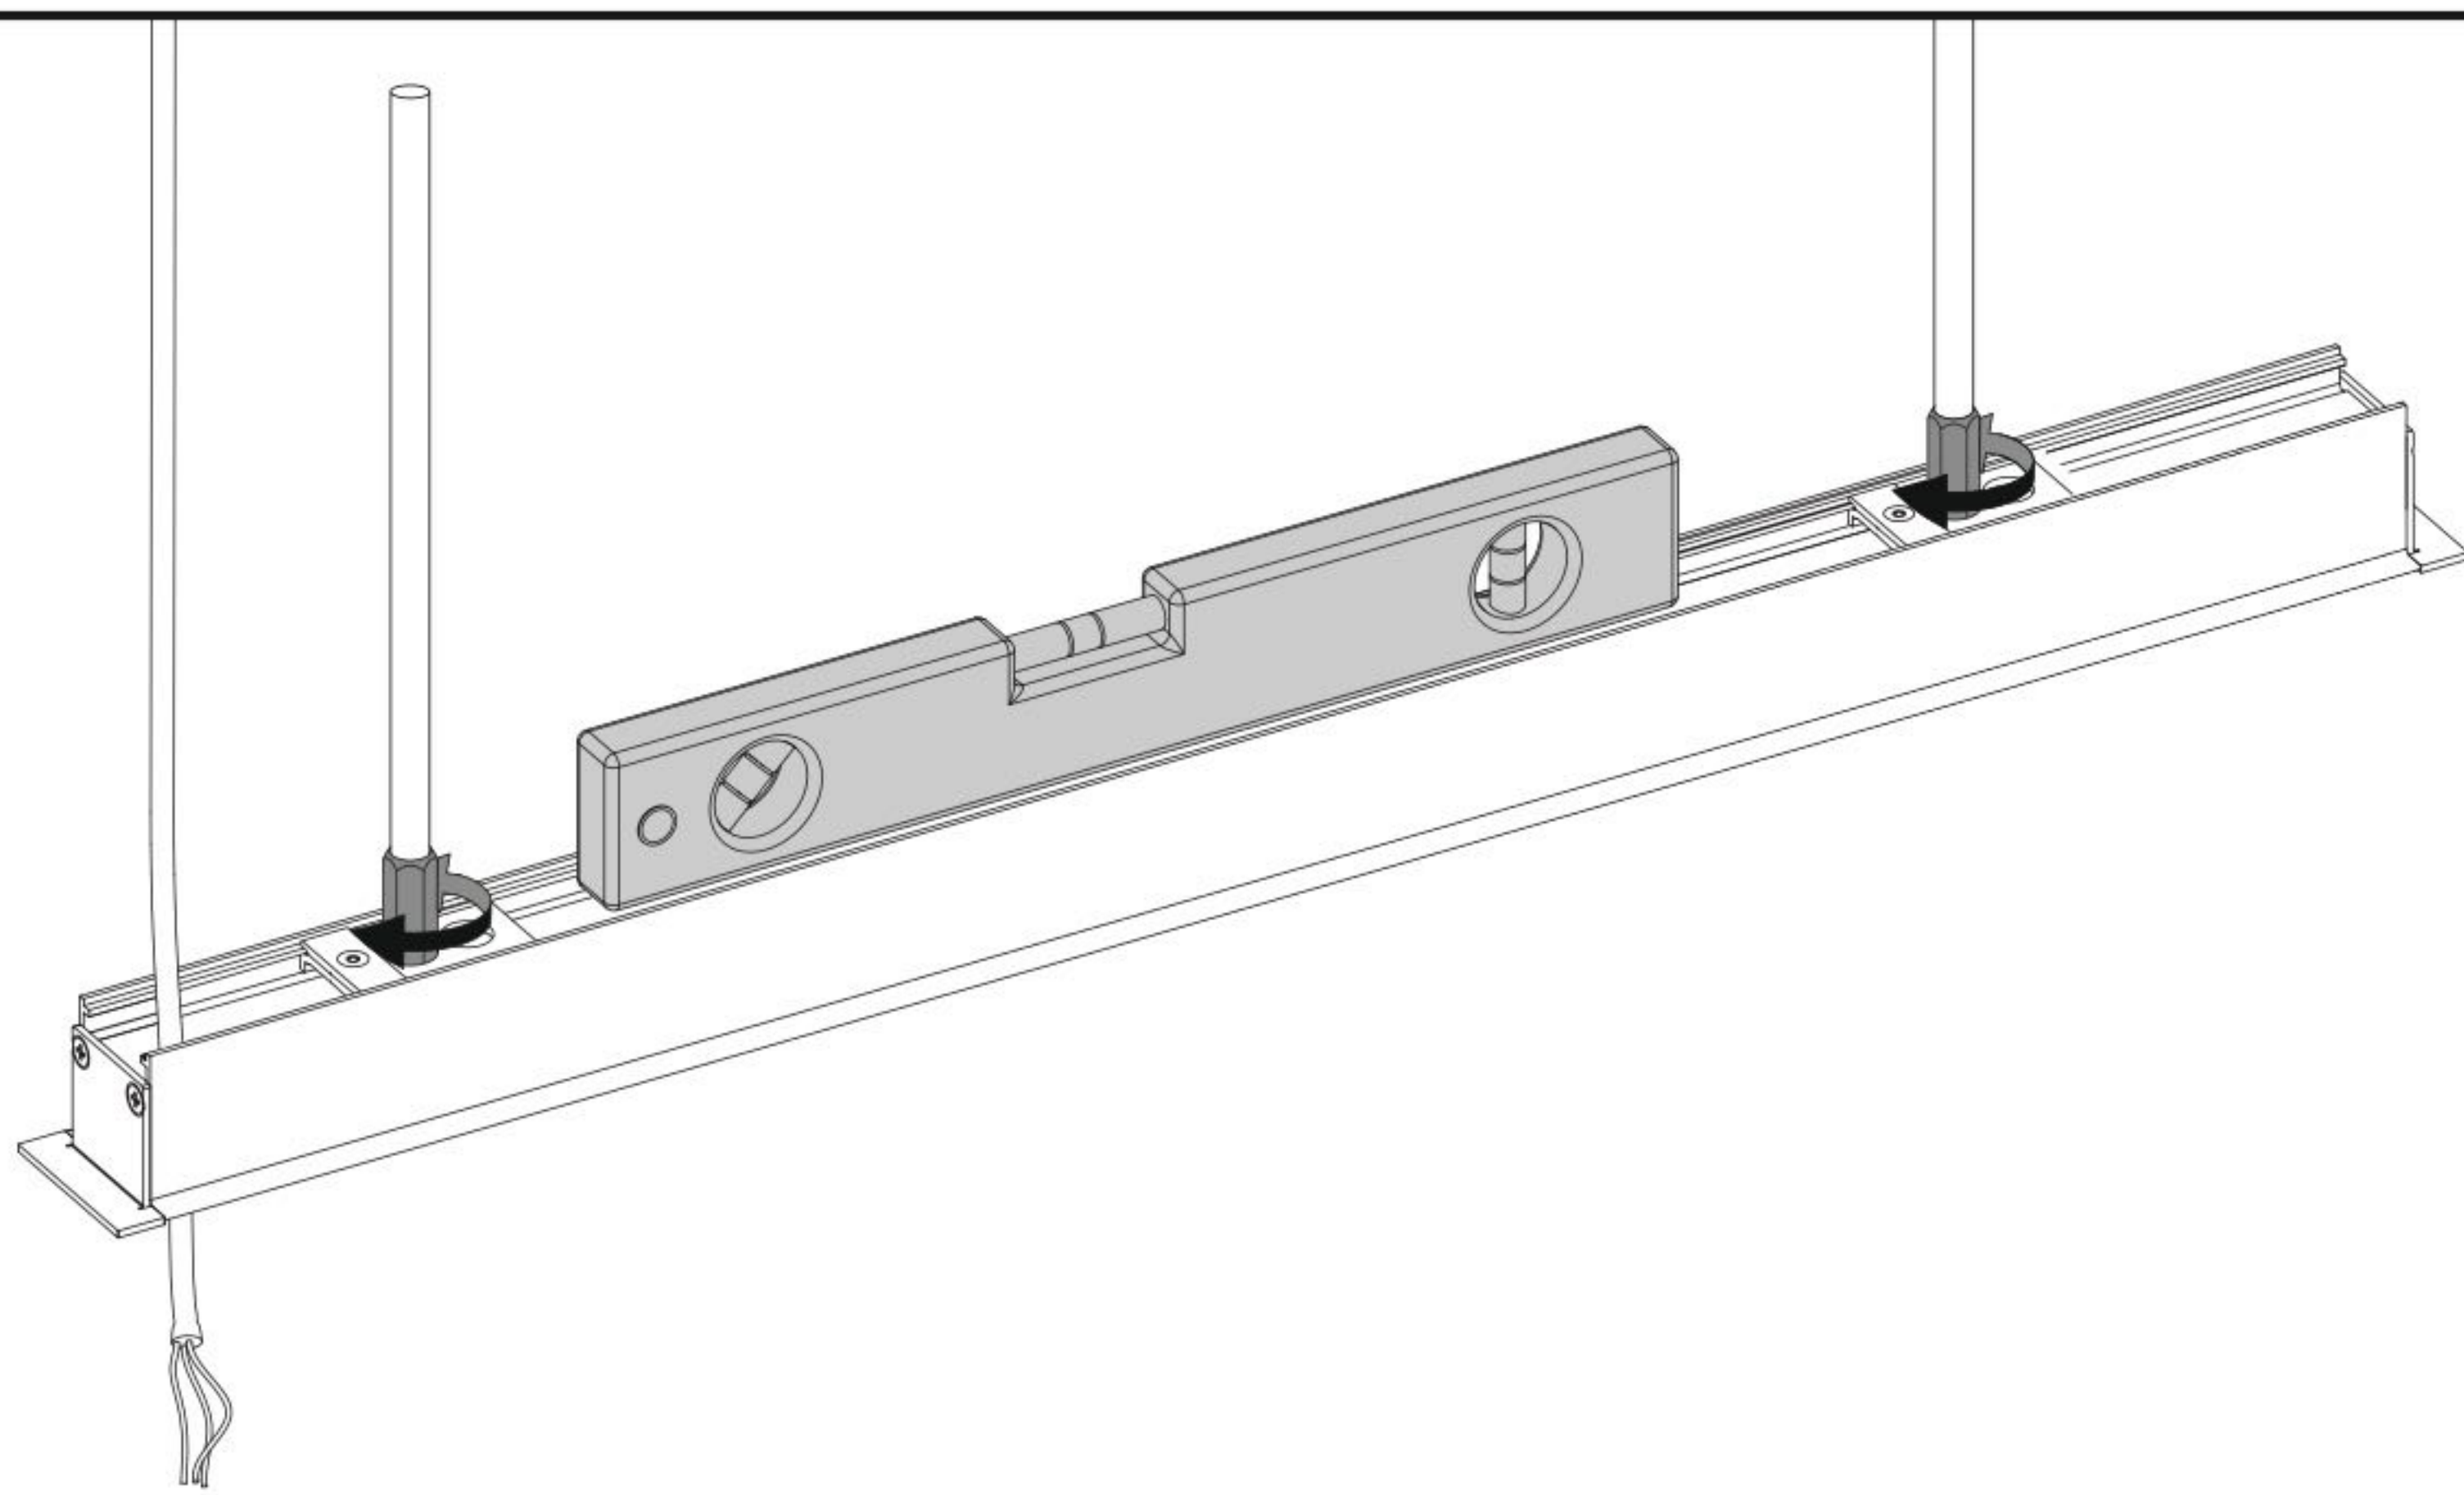

7

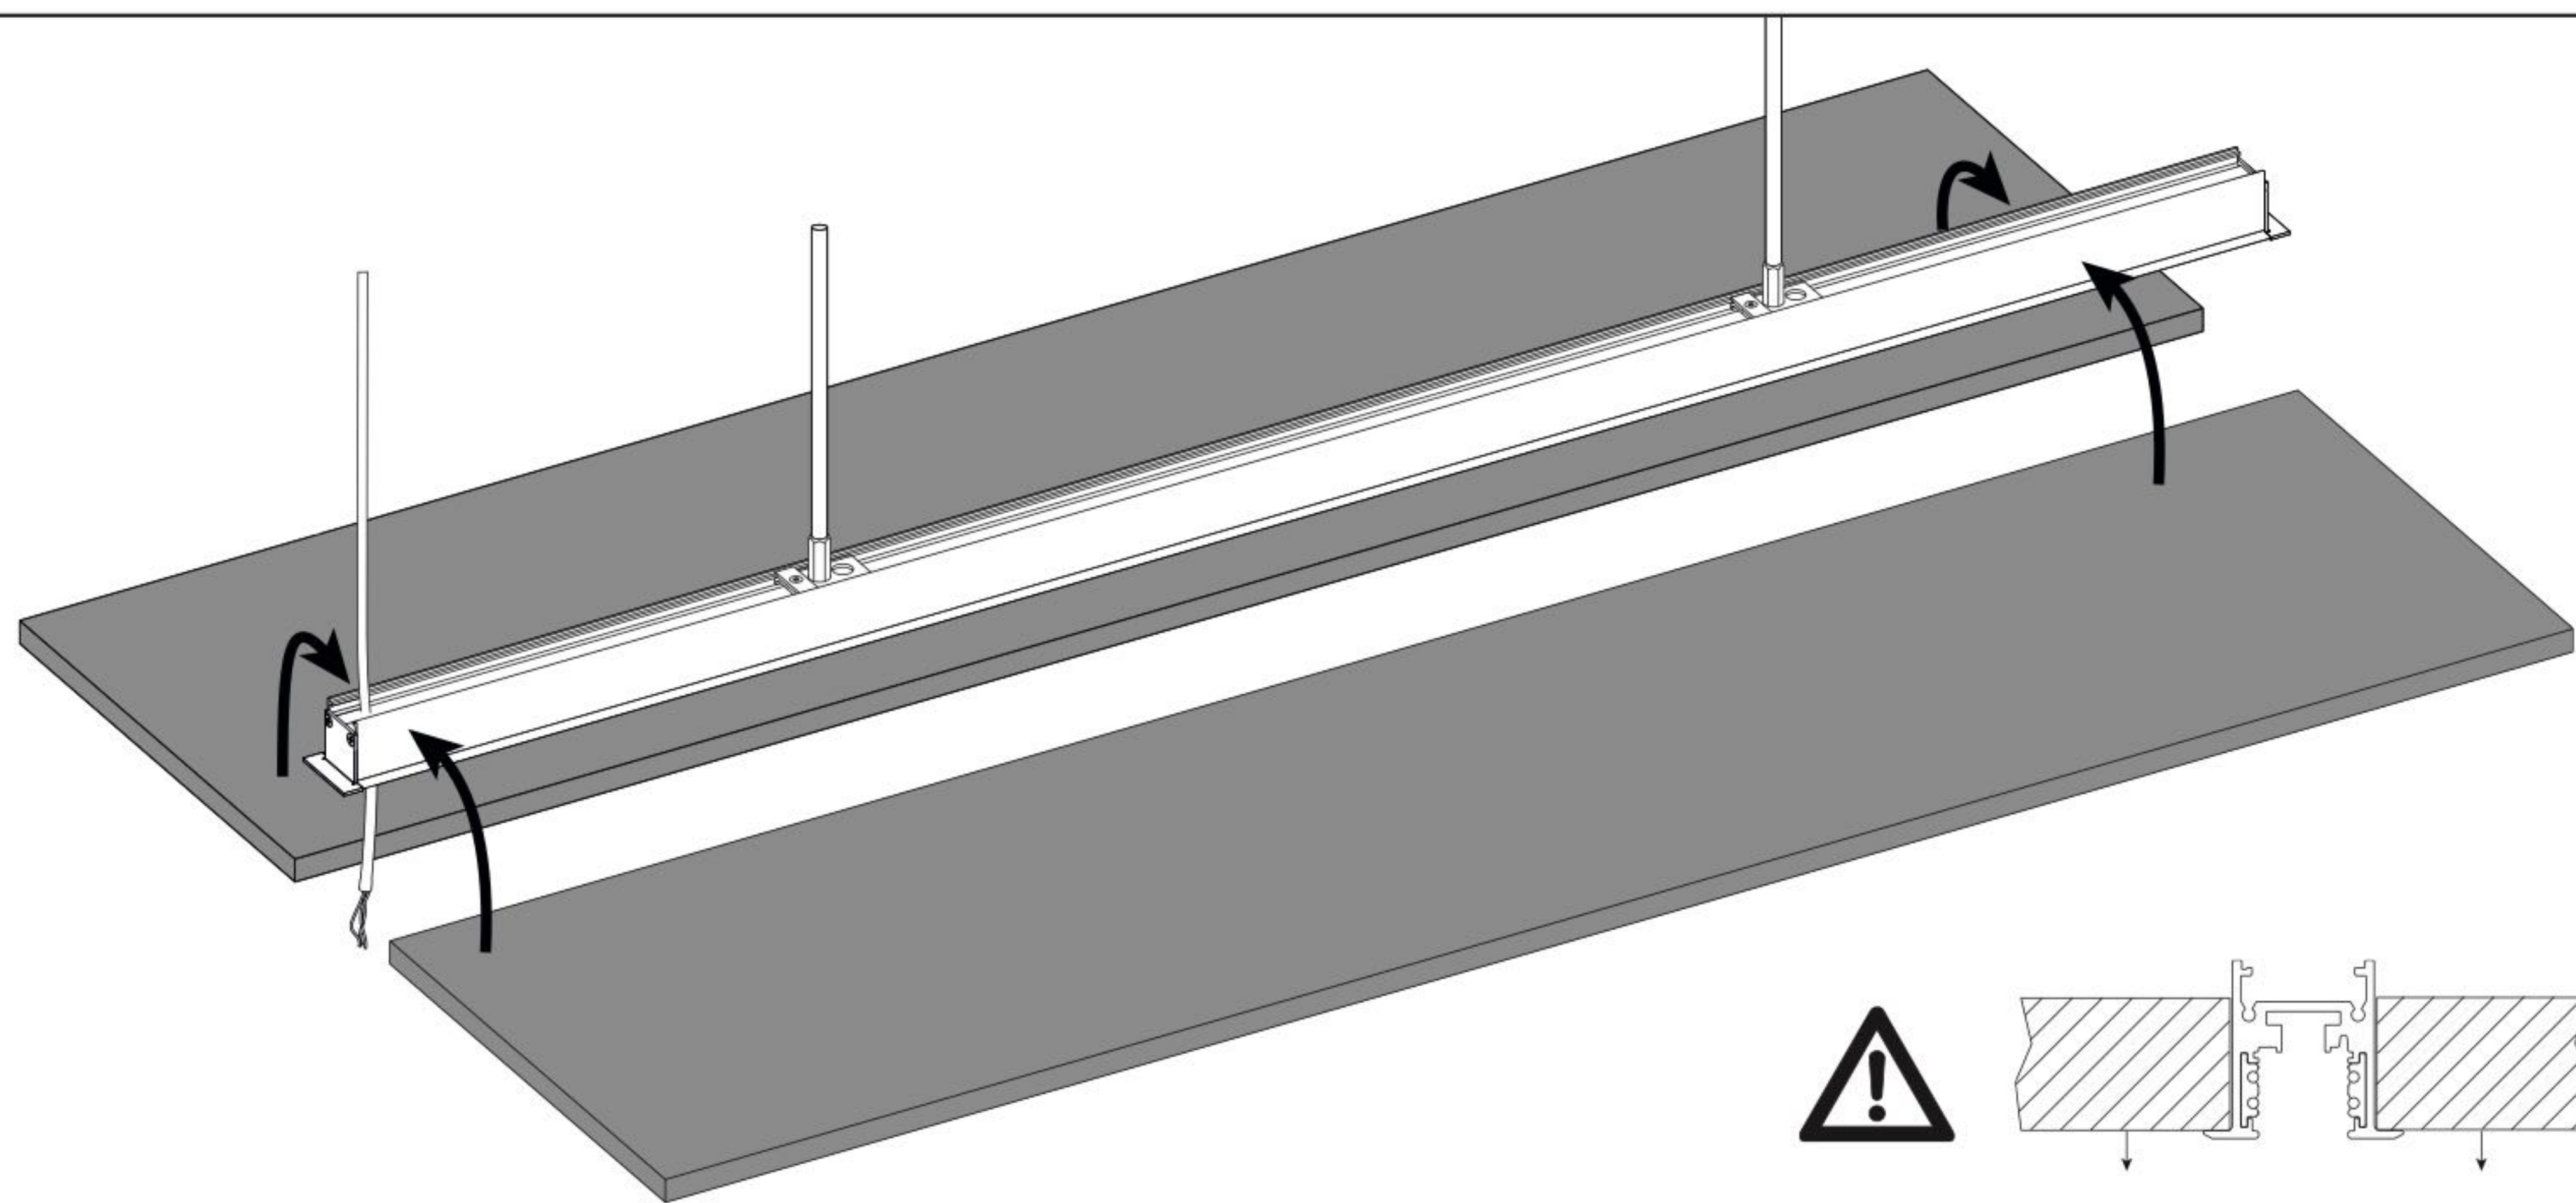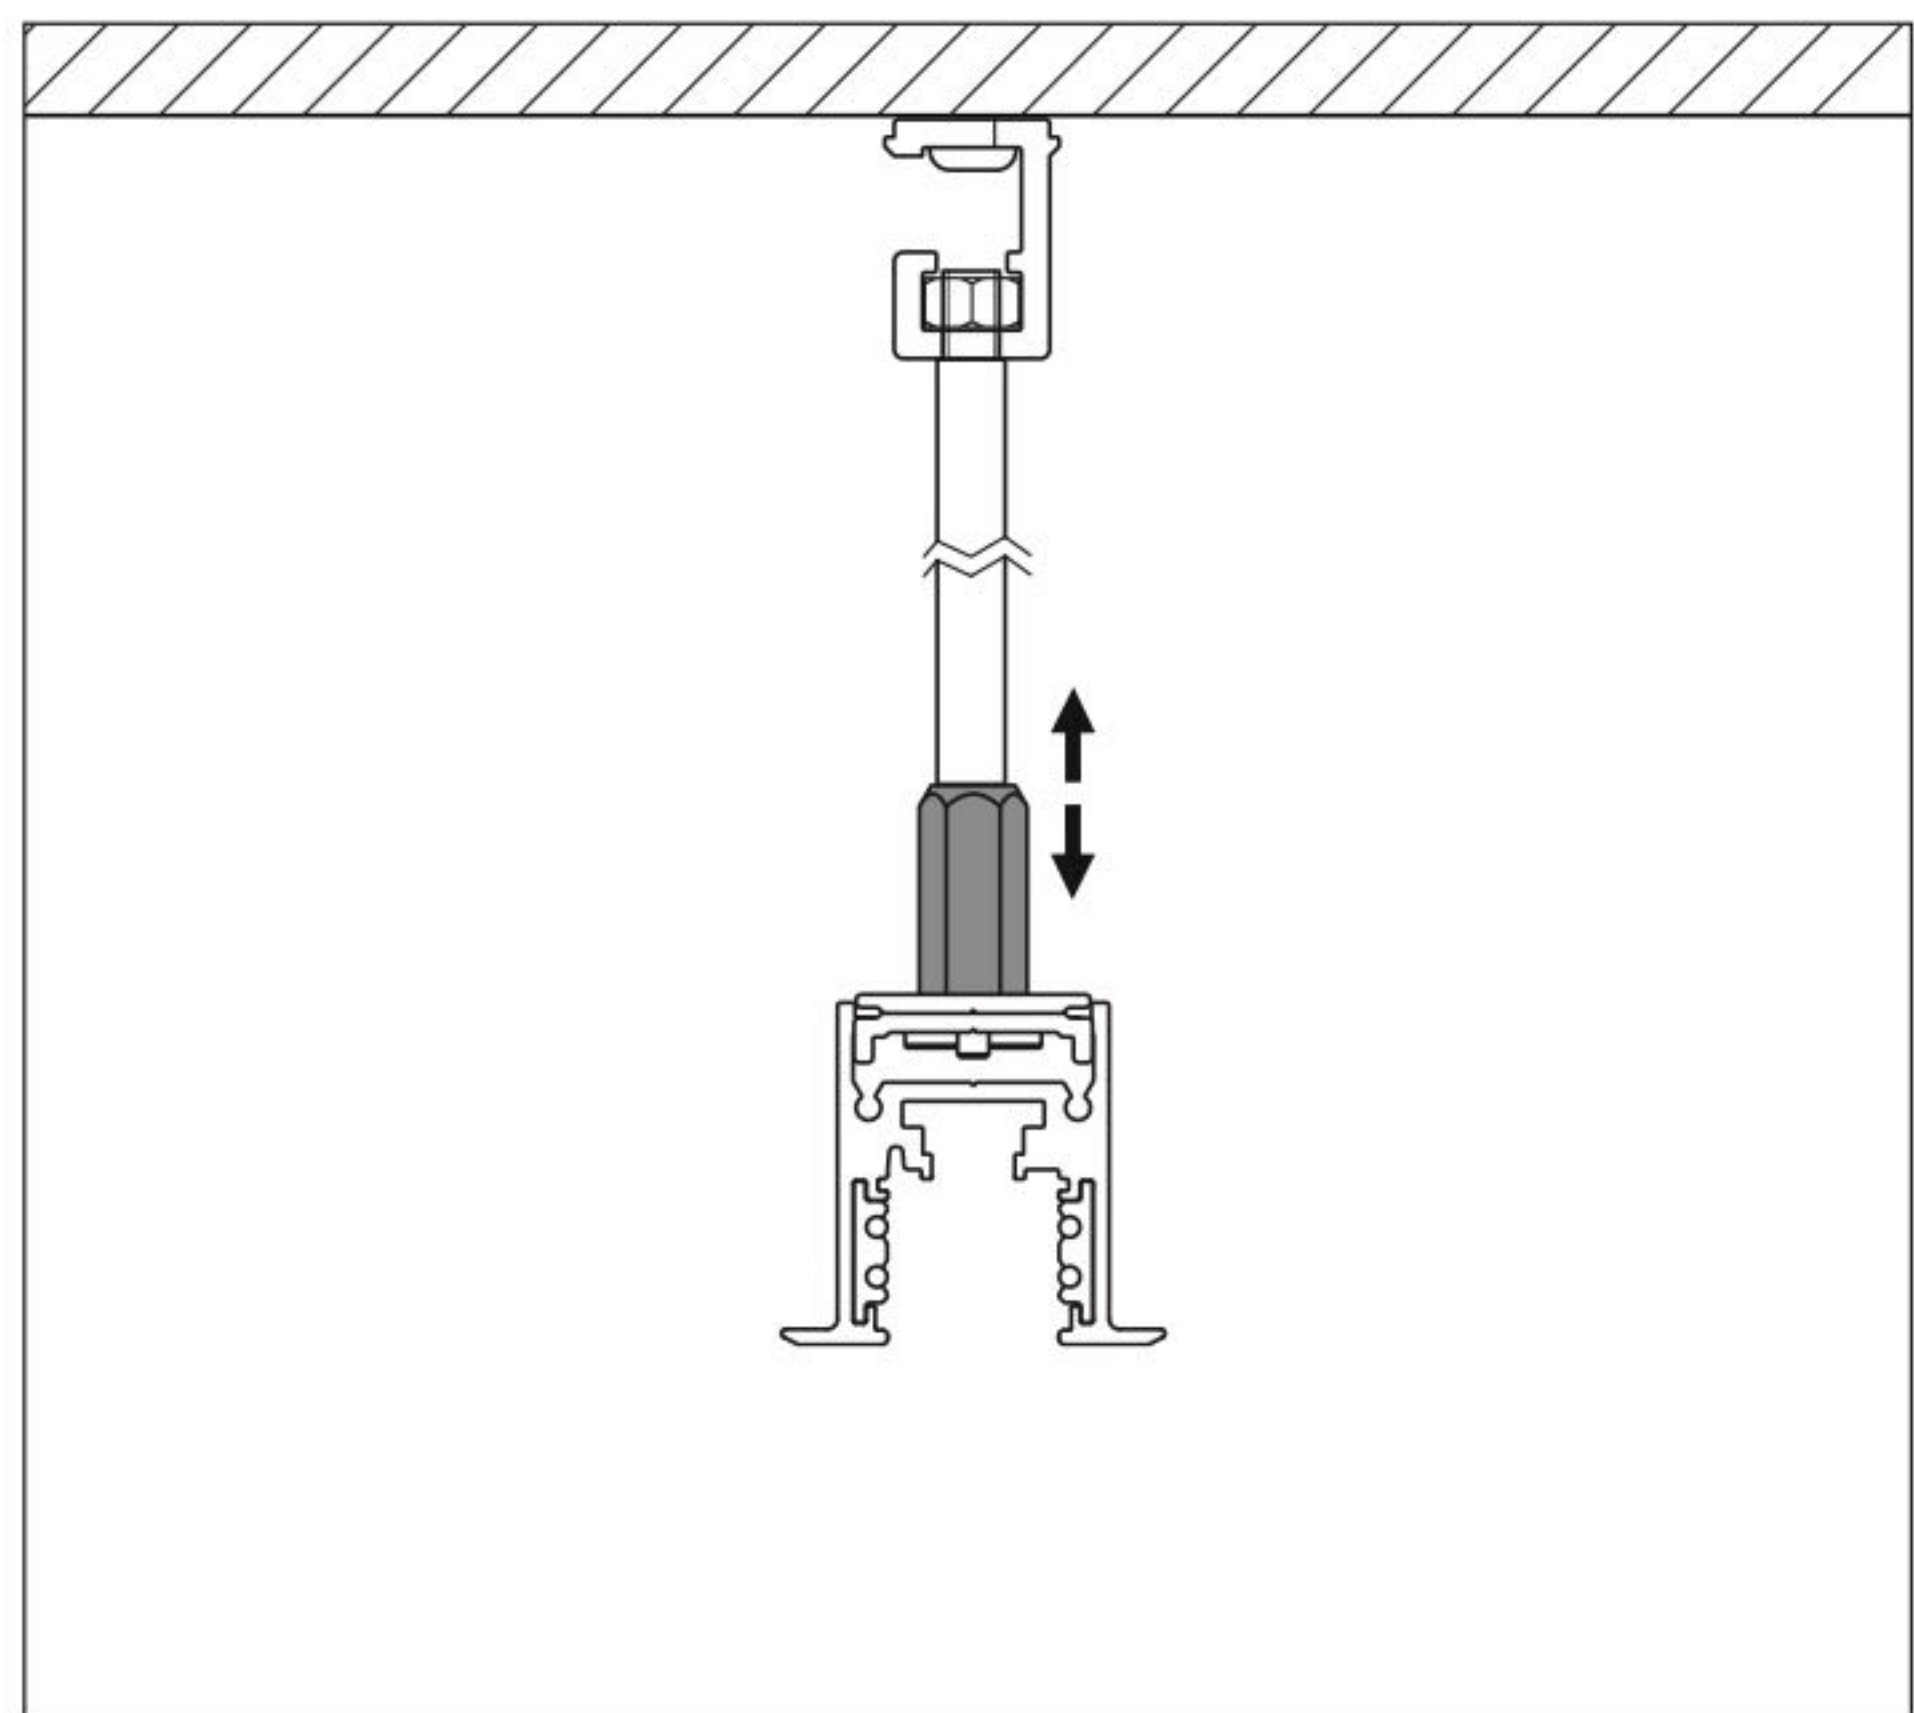


8

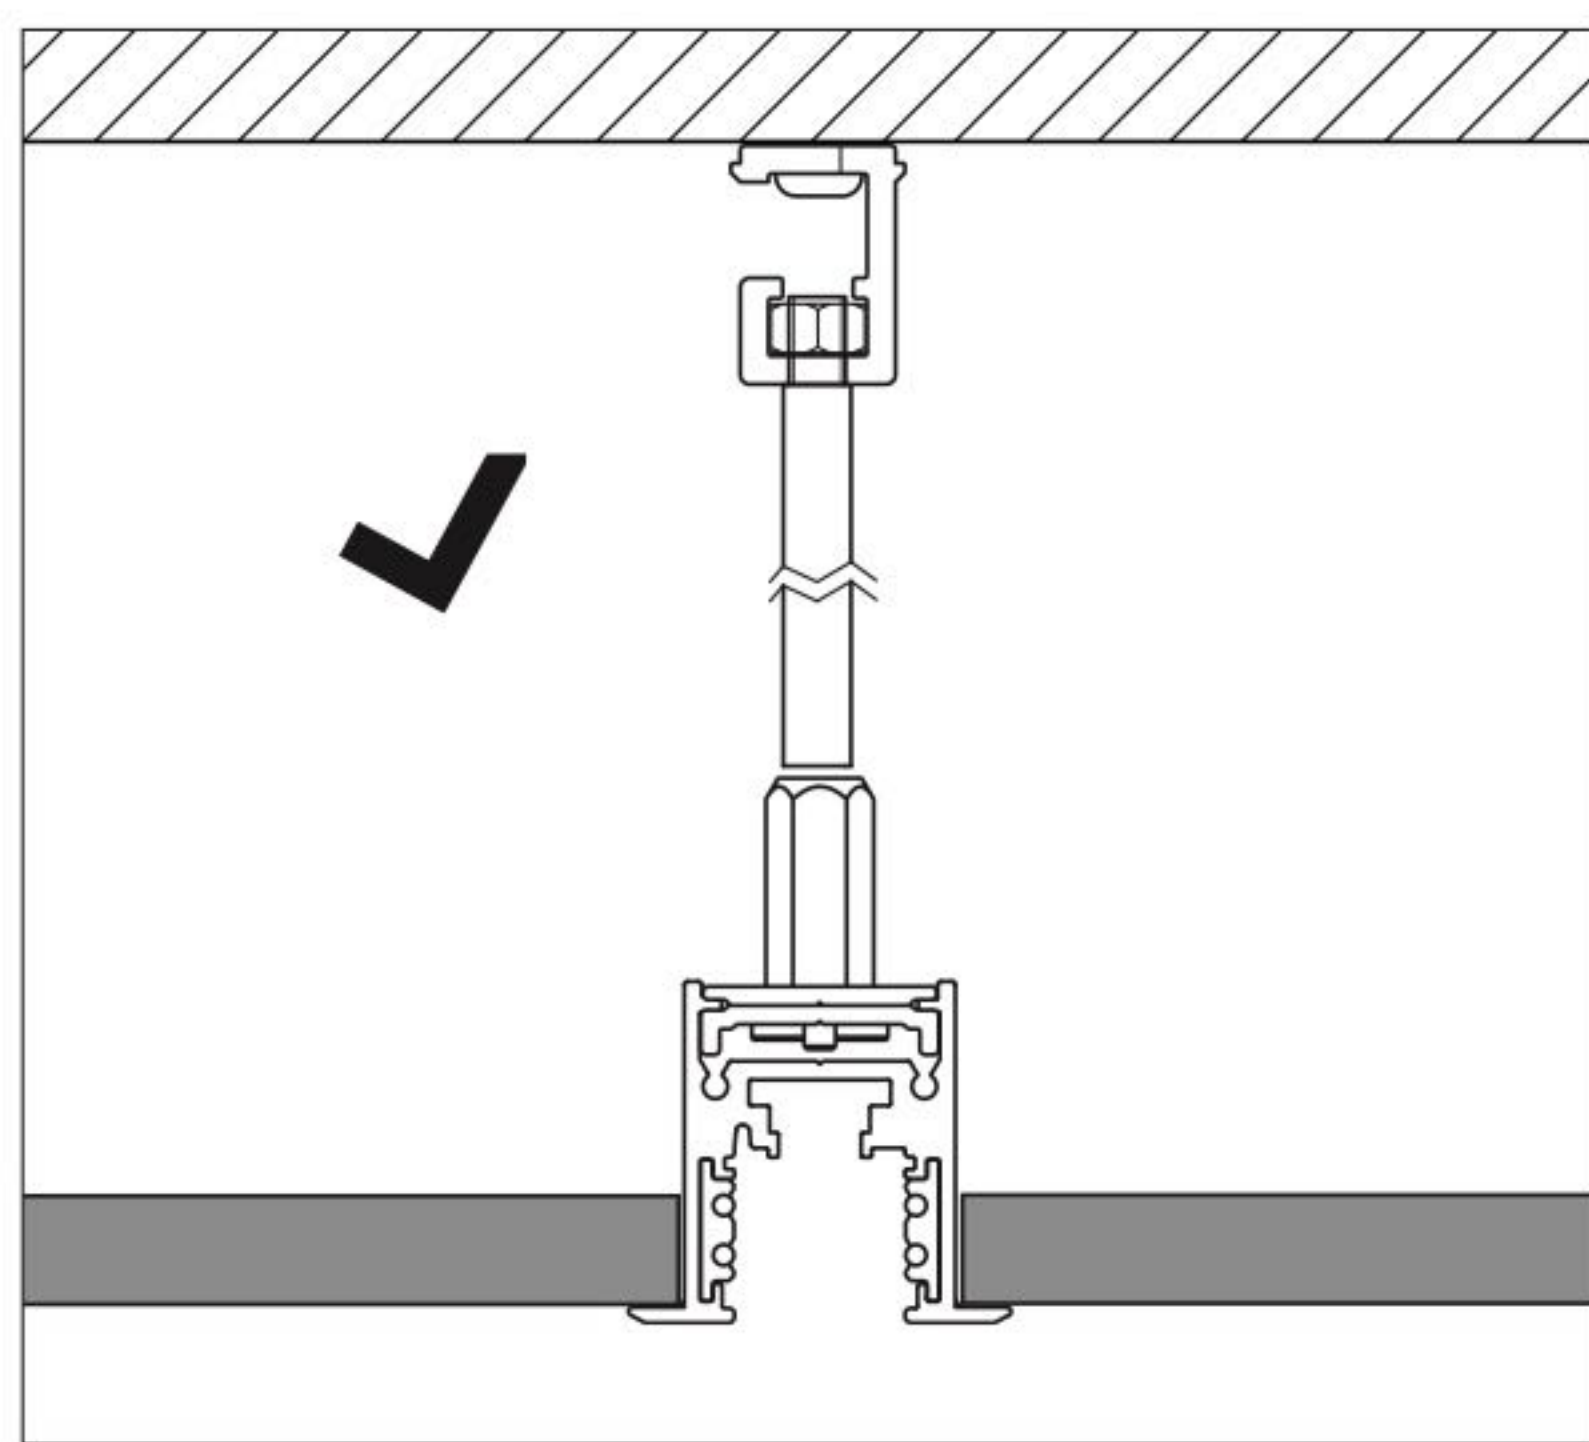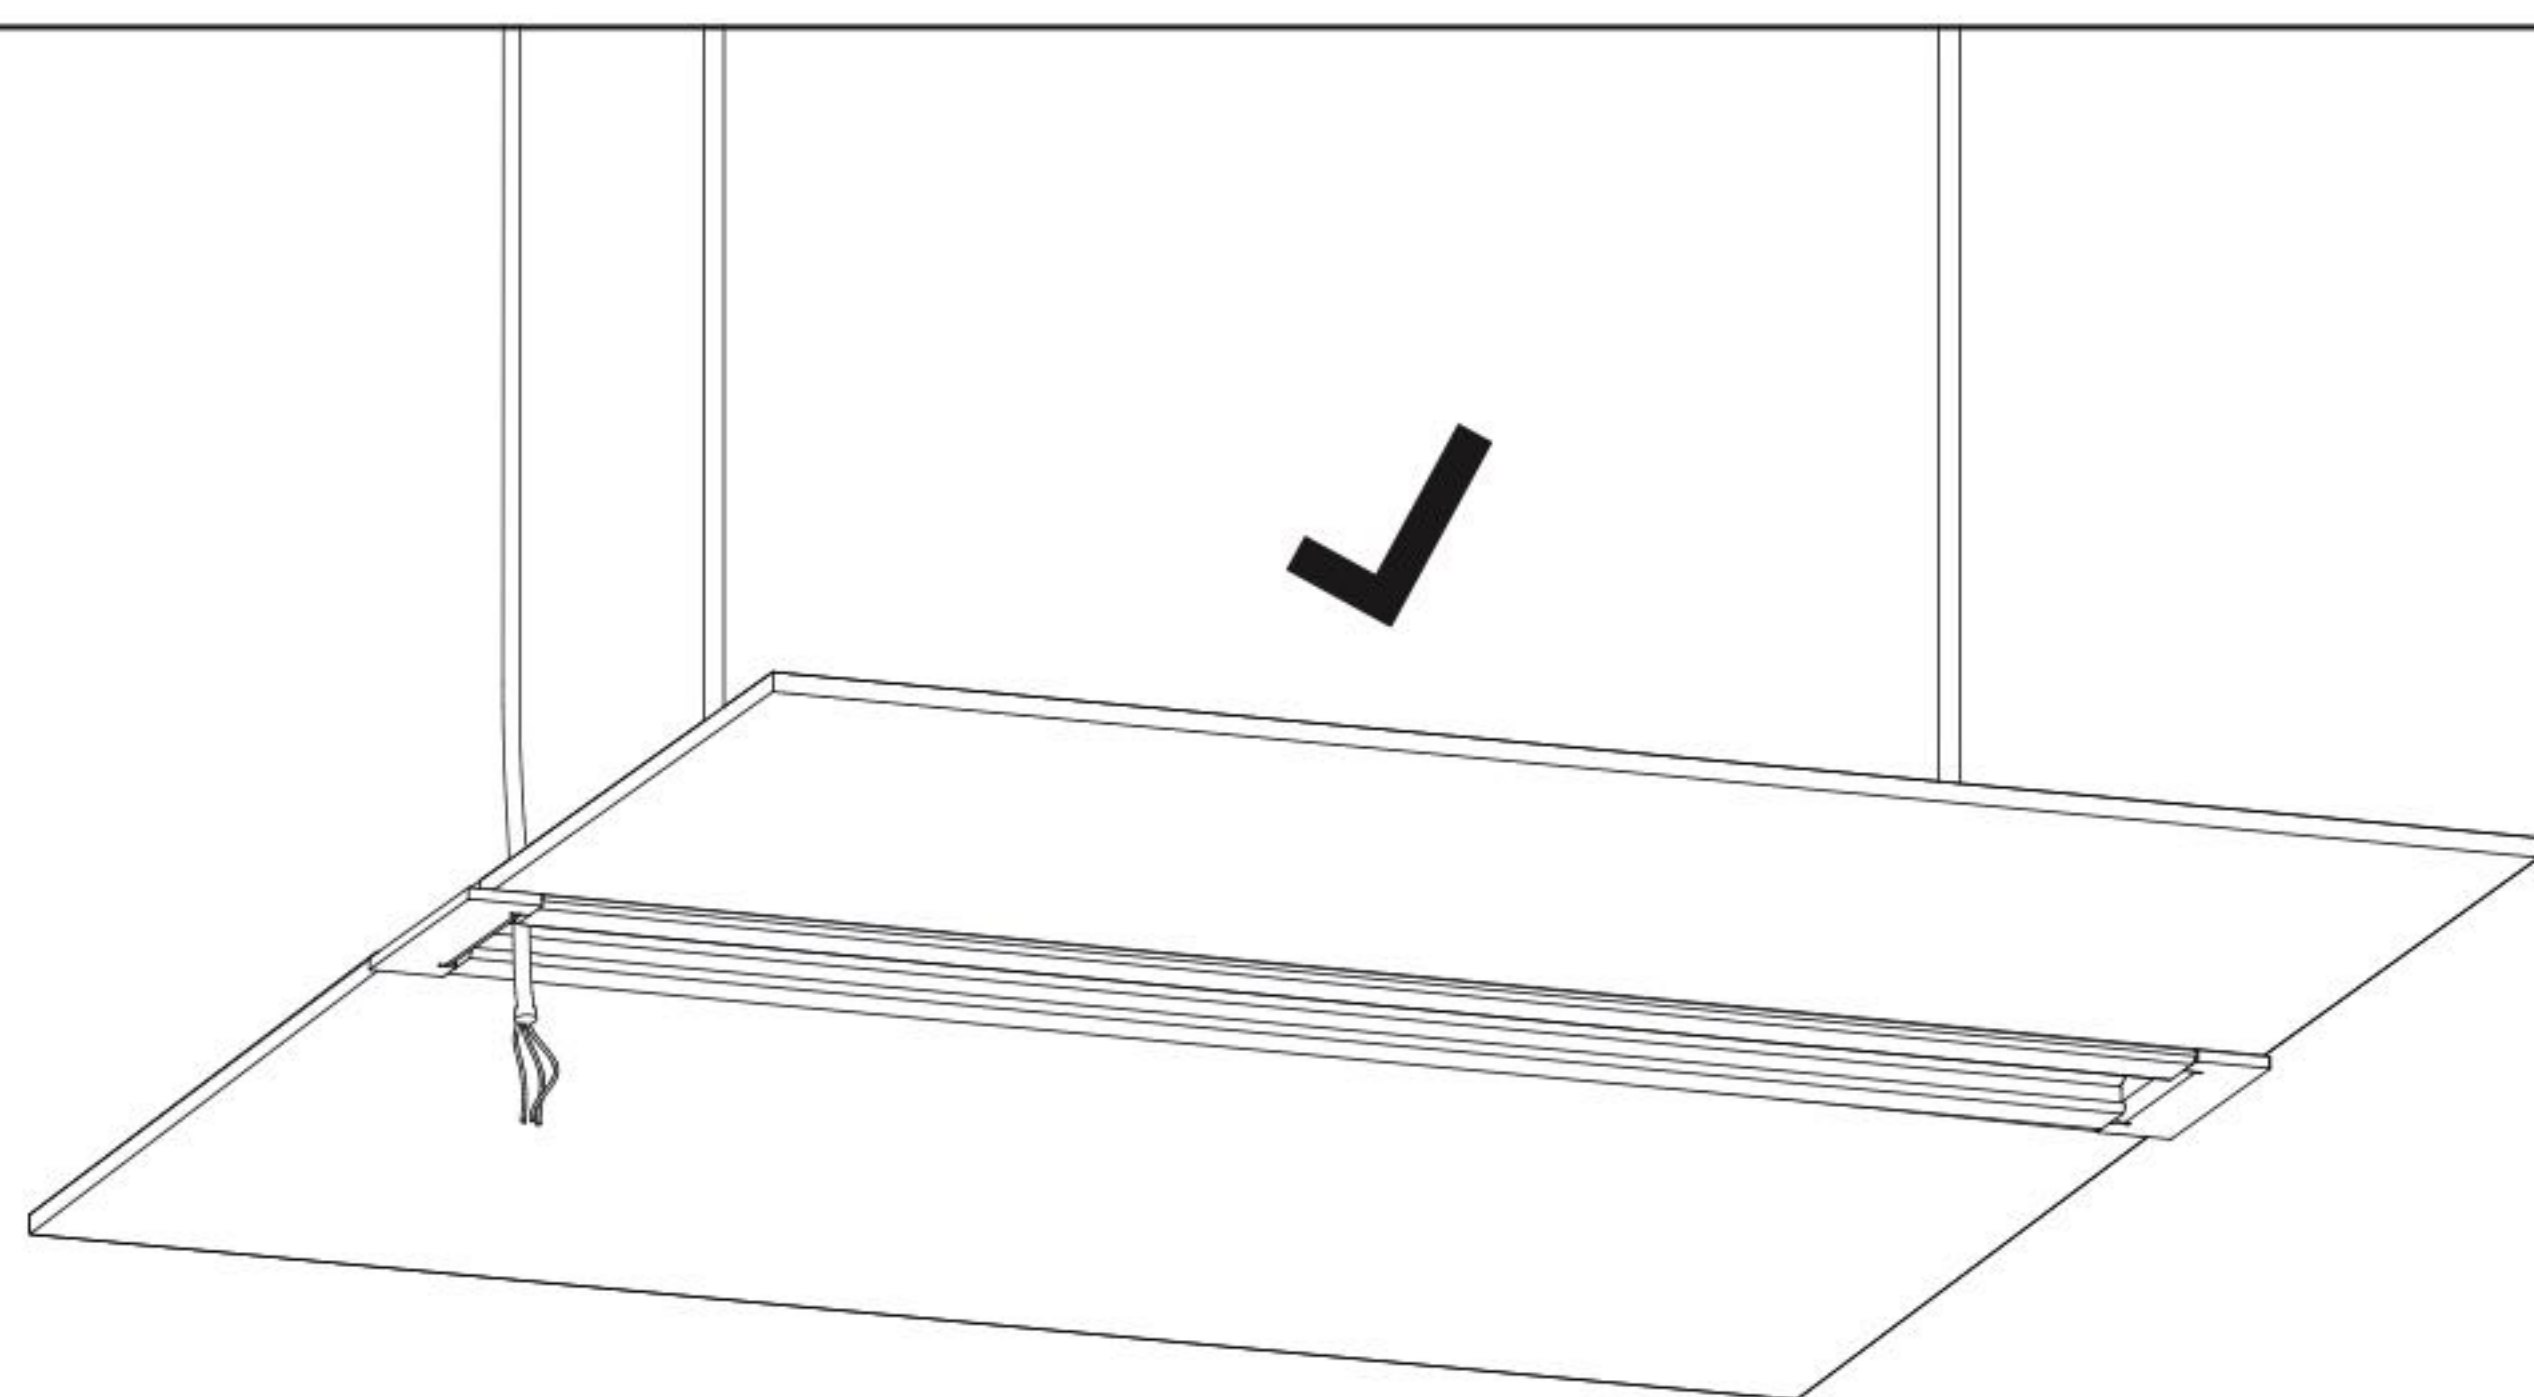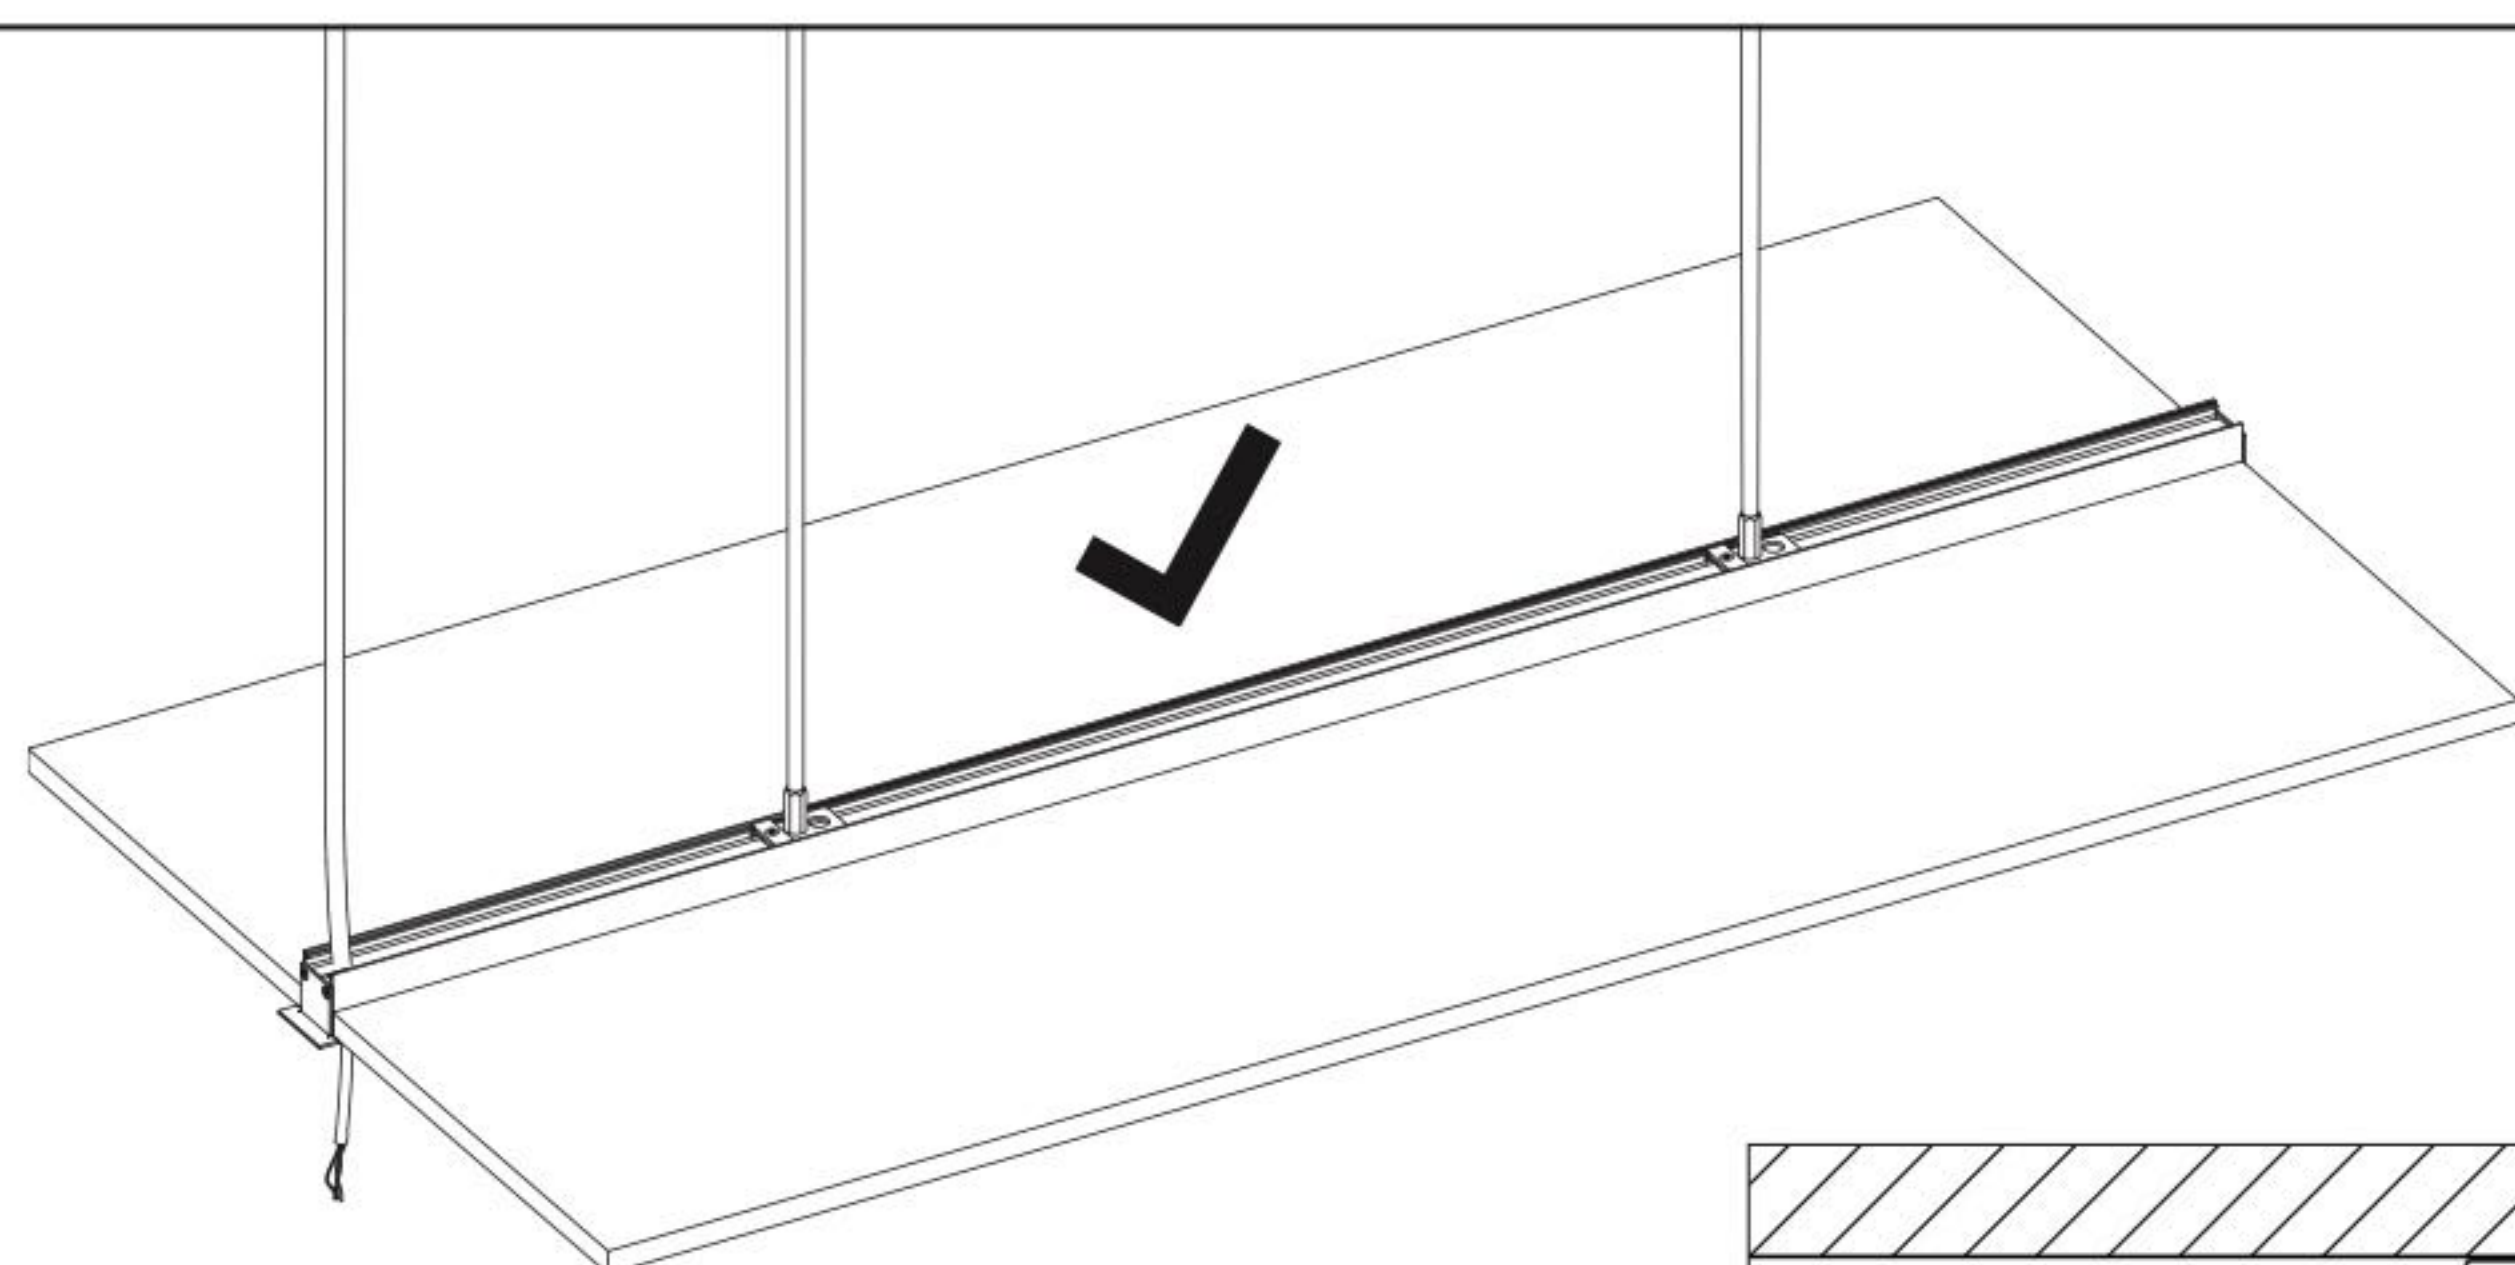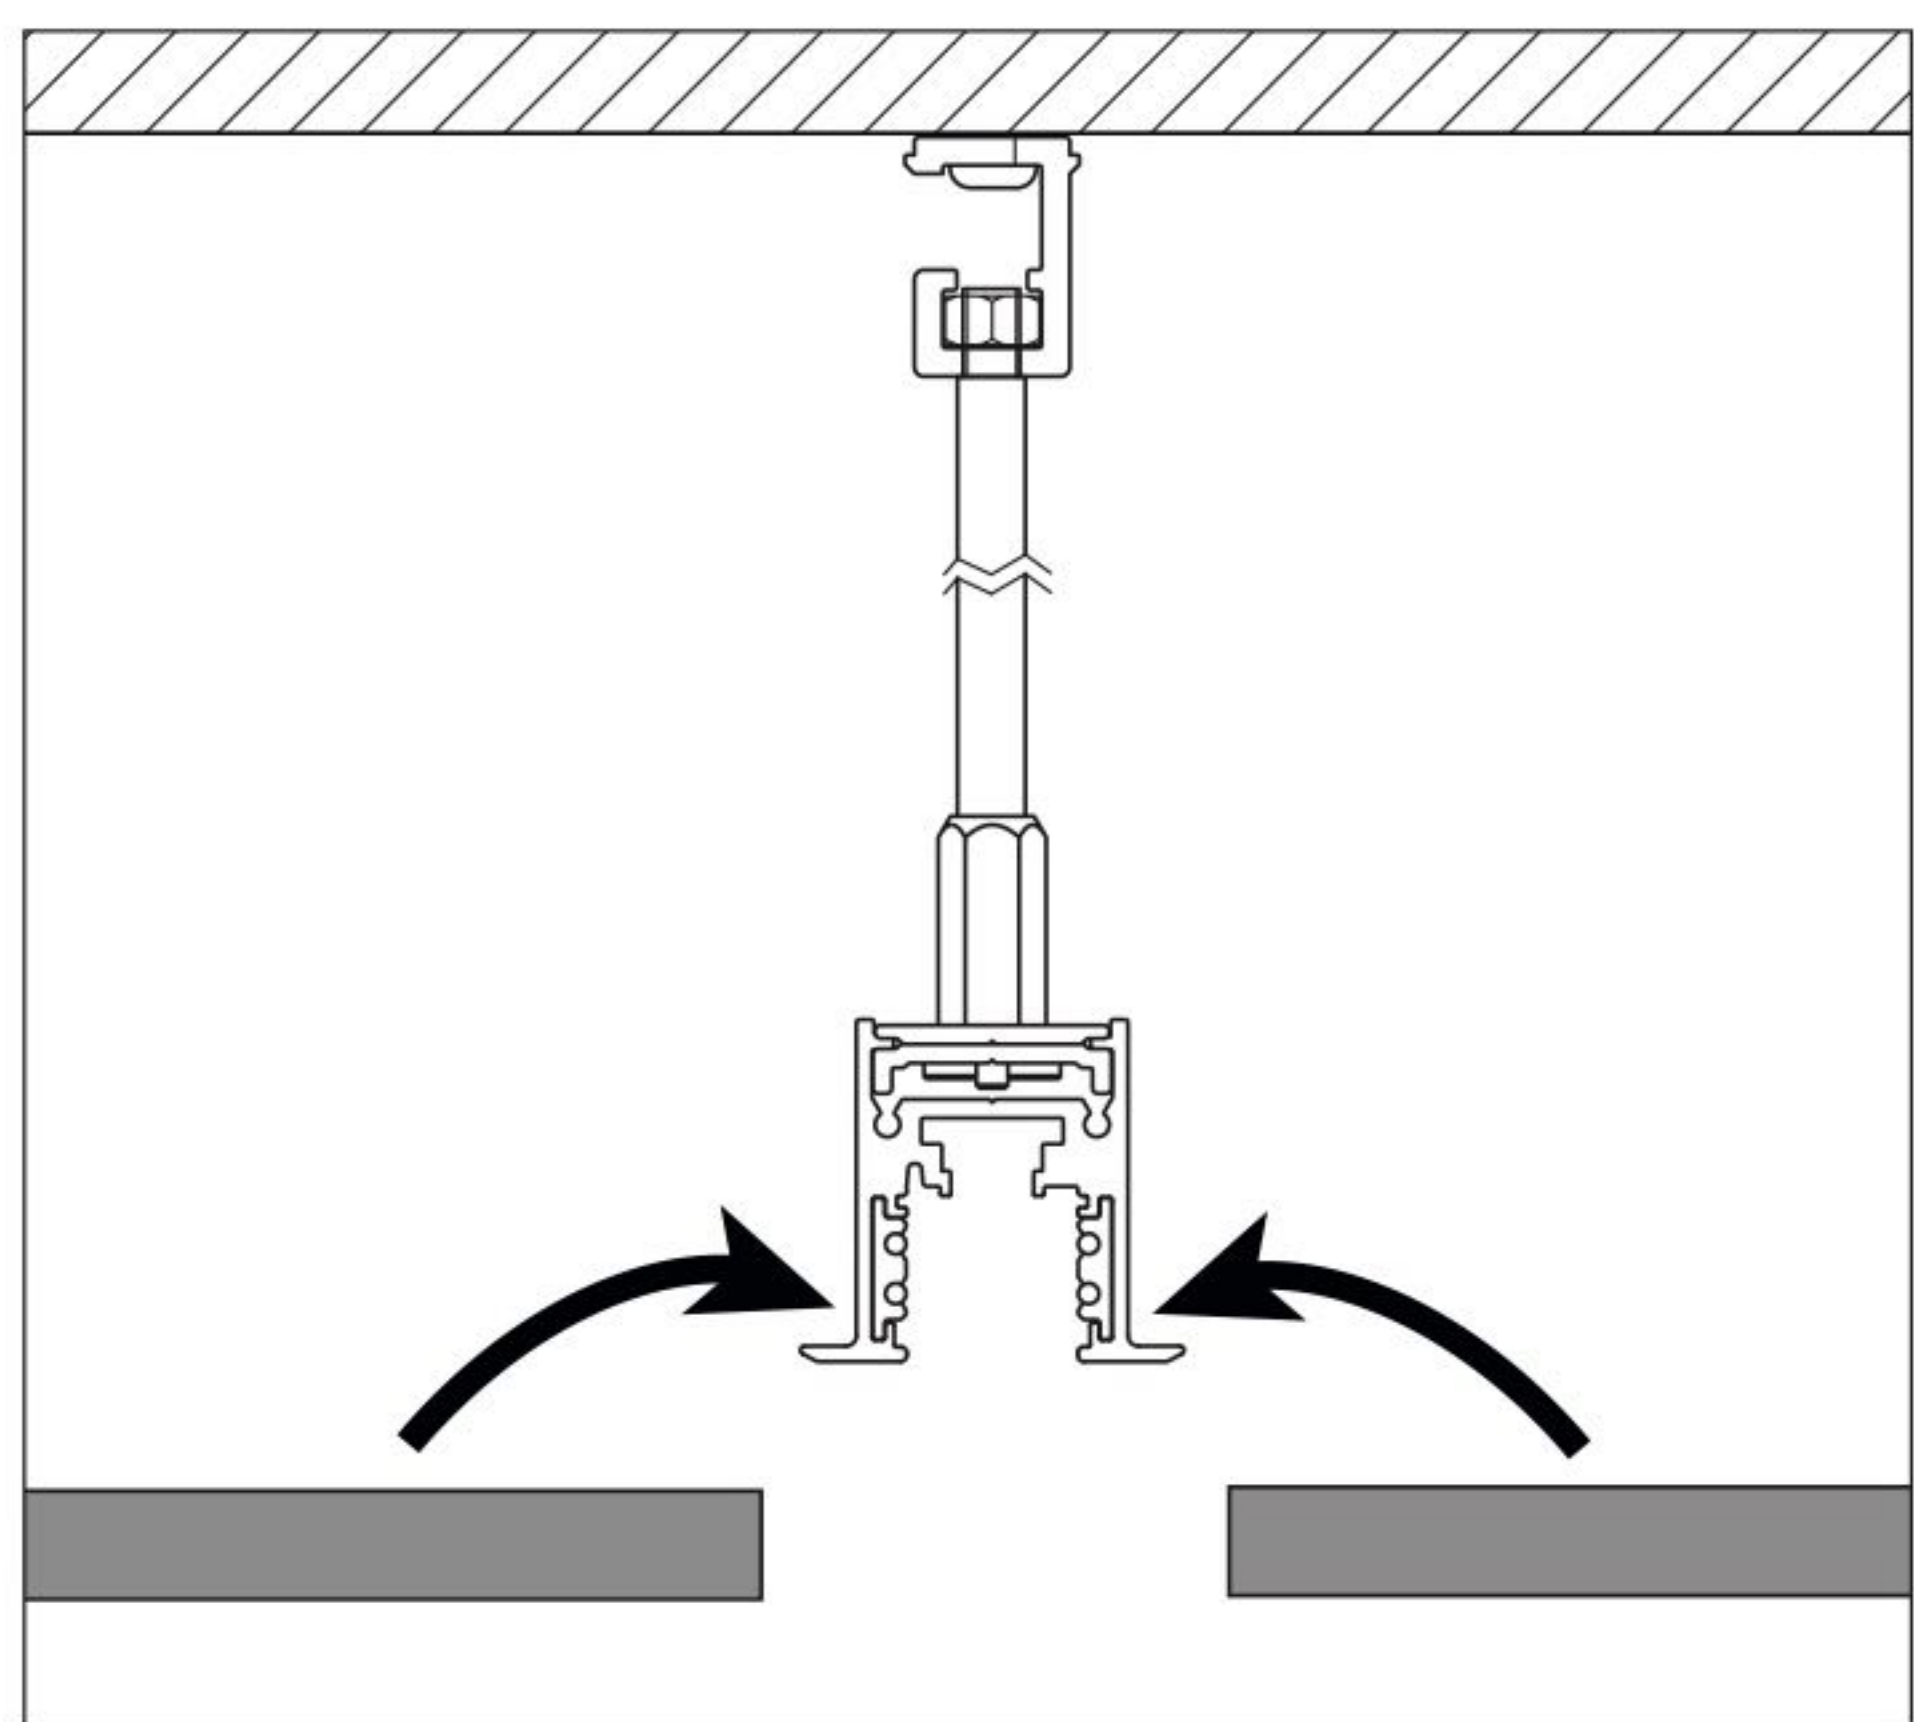


9

3c with brackets/clamps




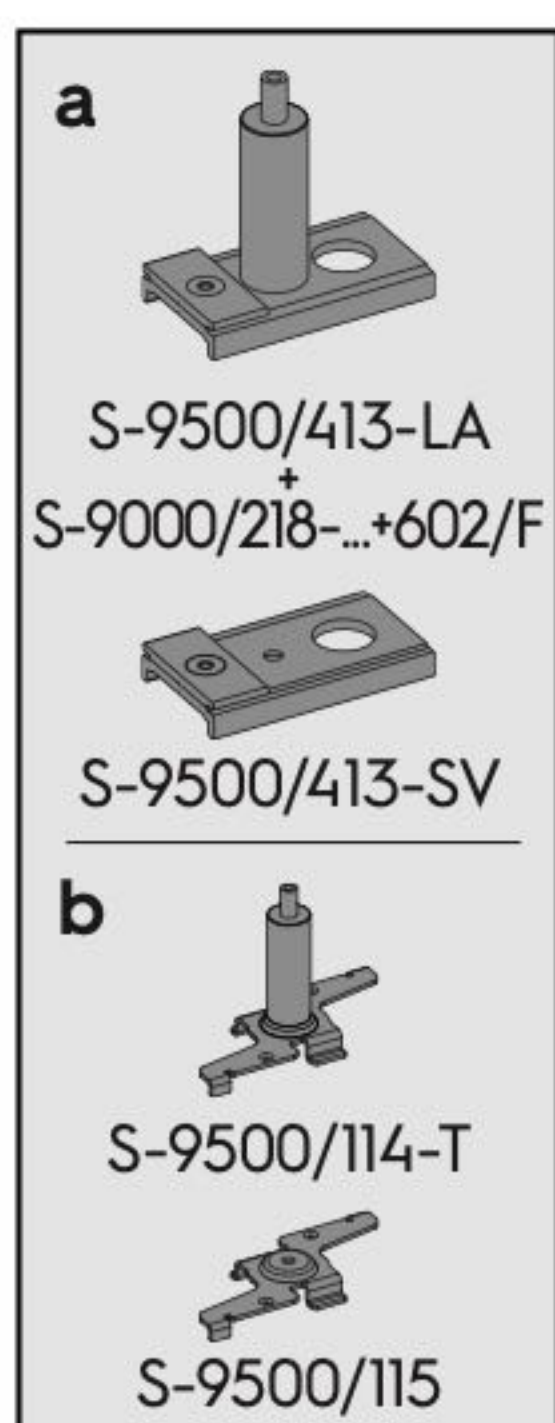


1

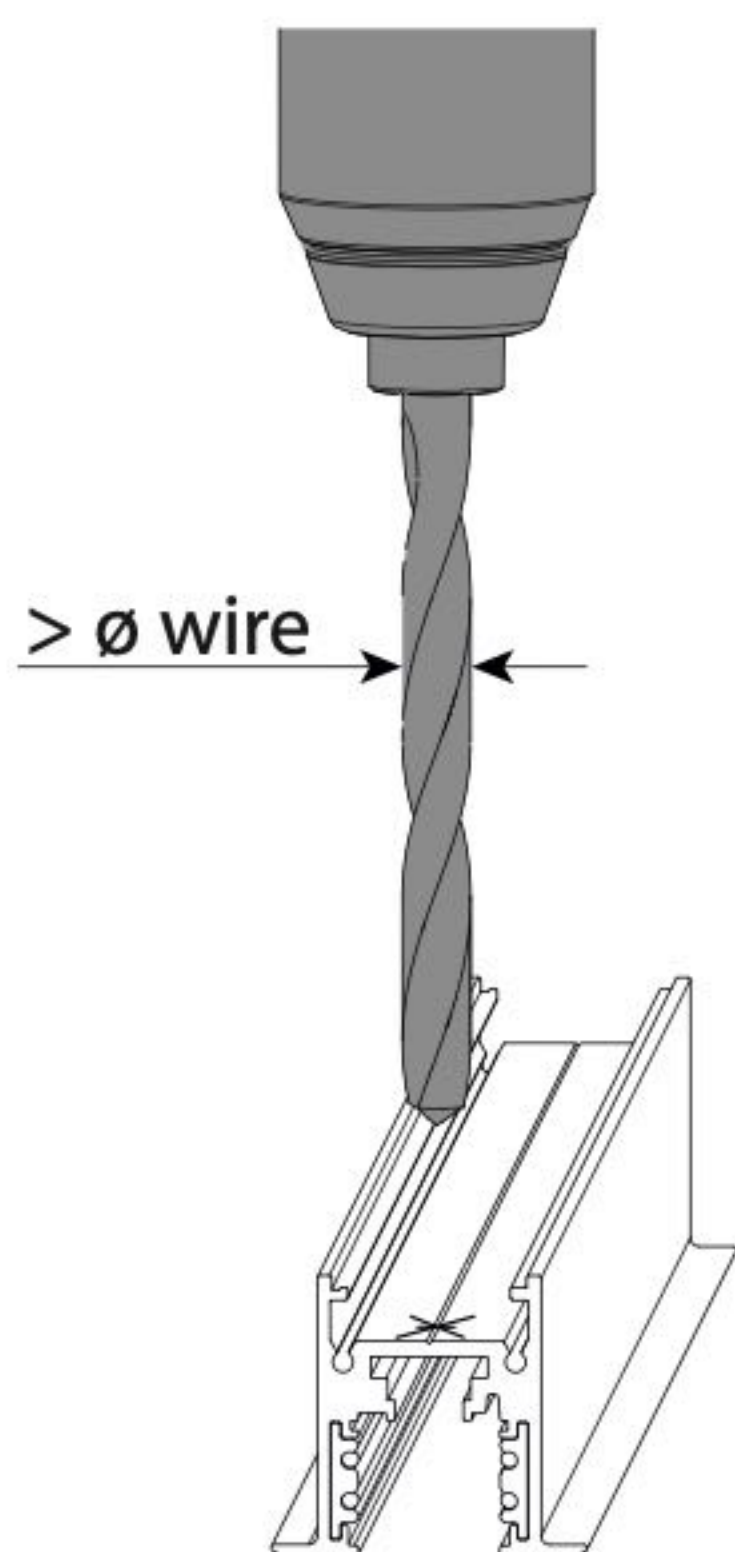


2


9500-KIT1-...

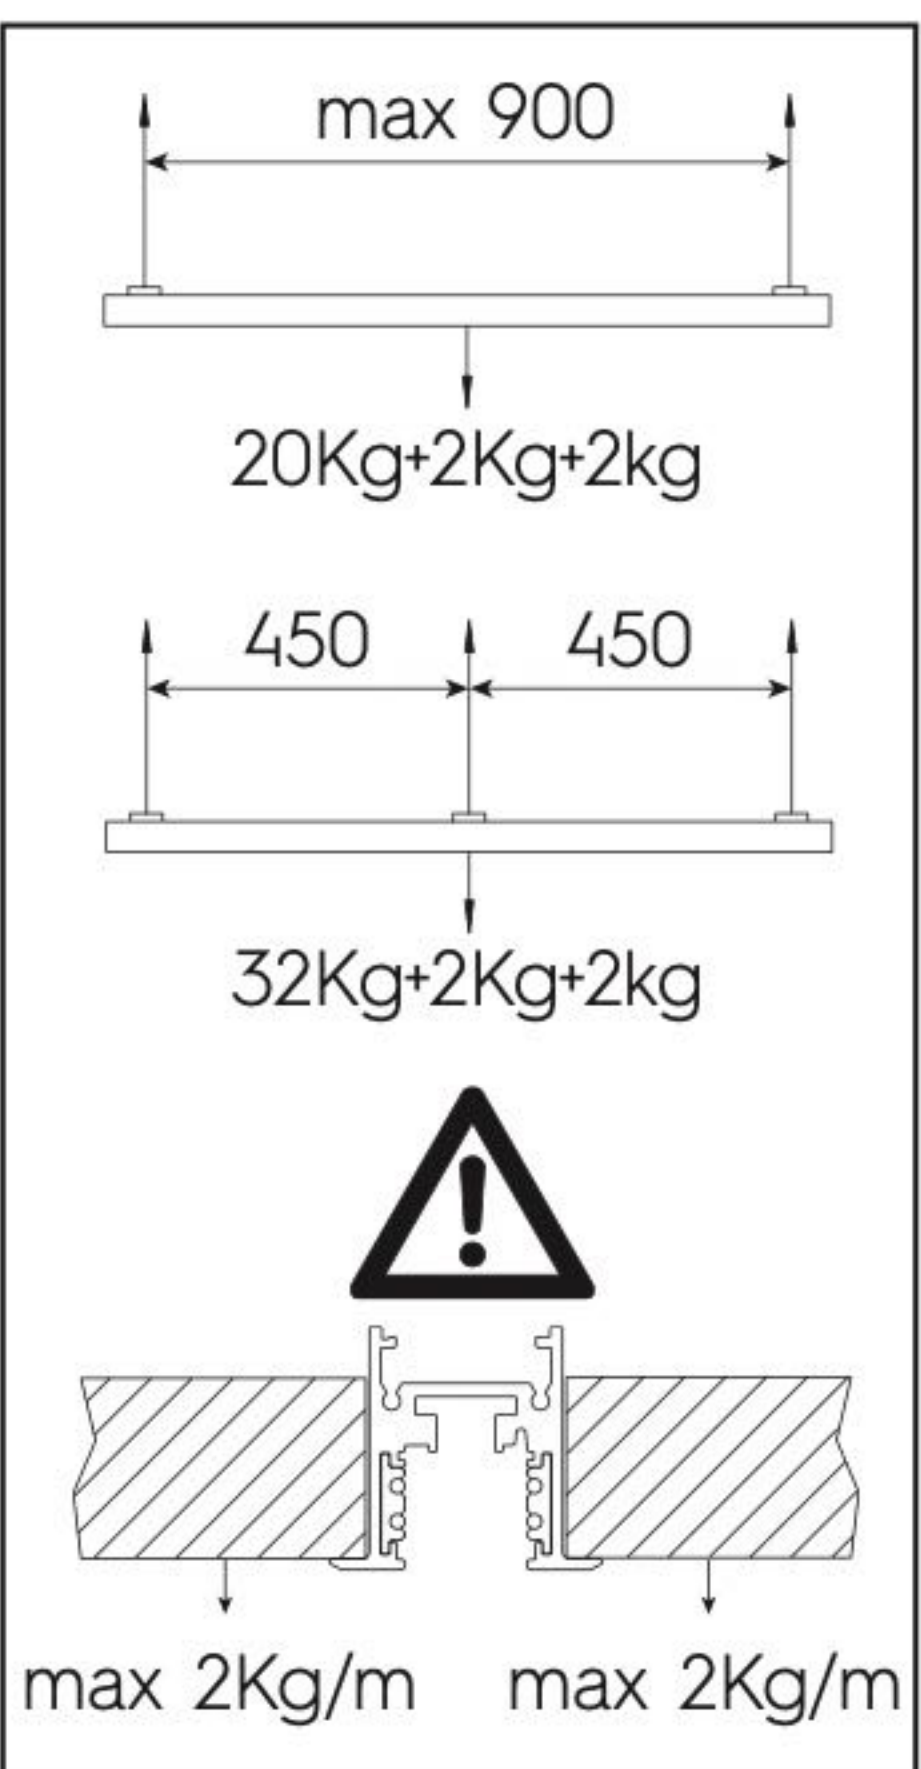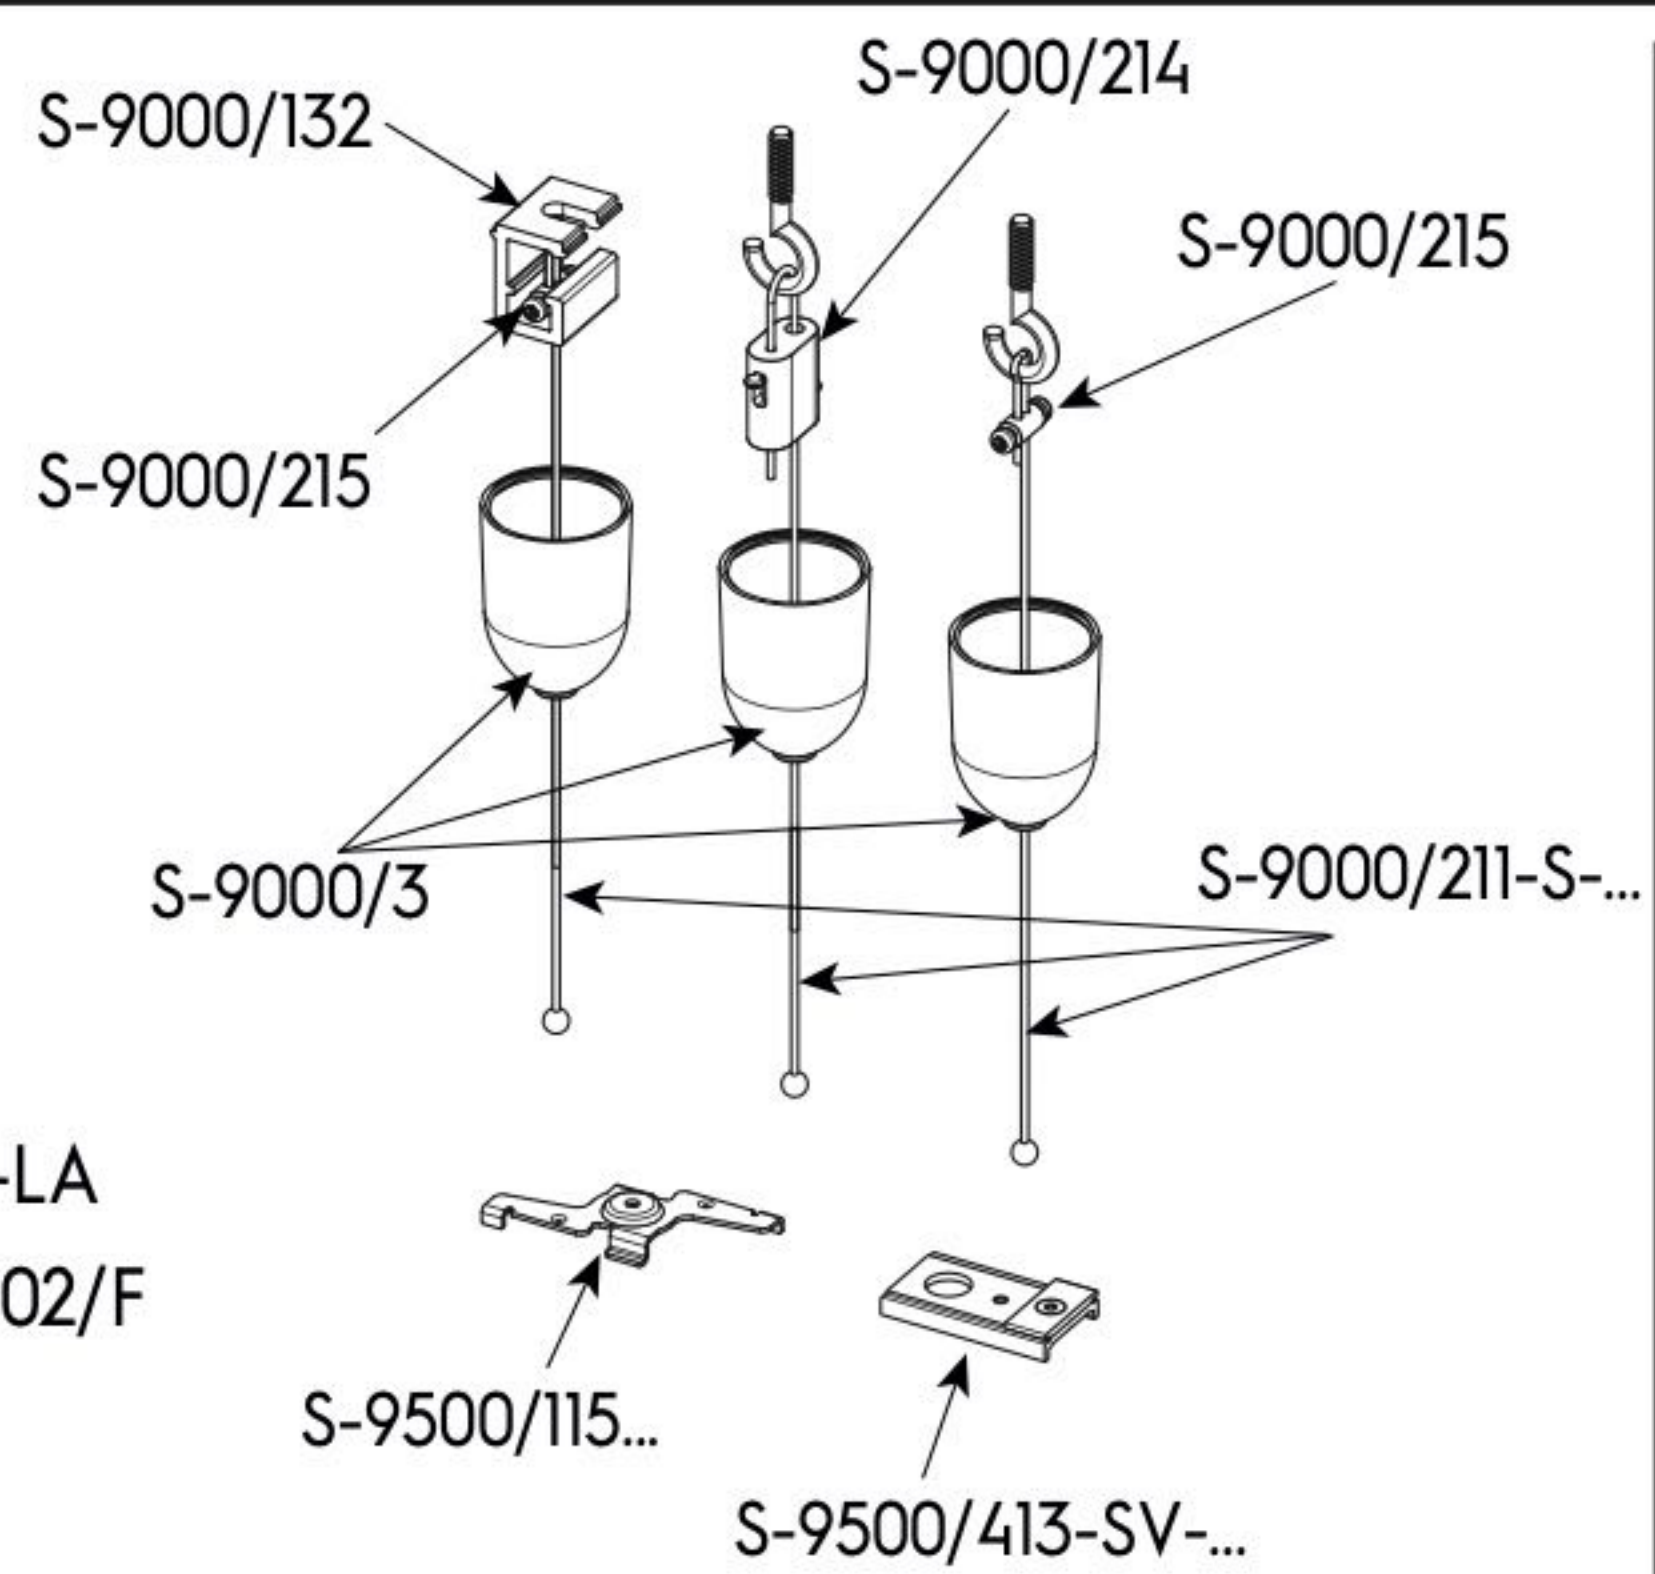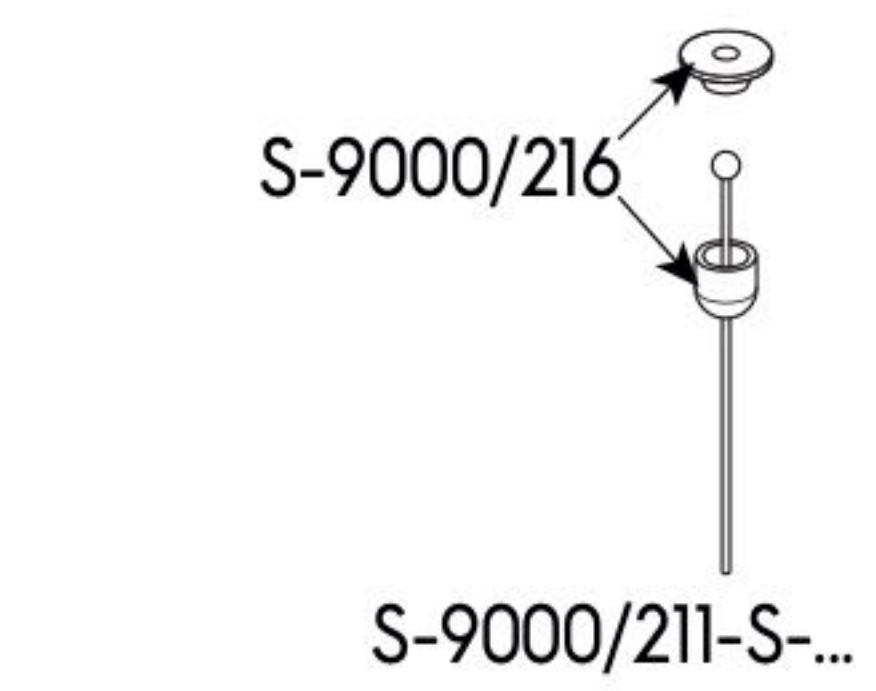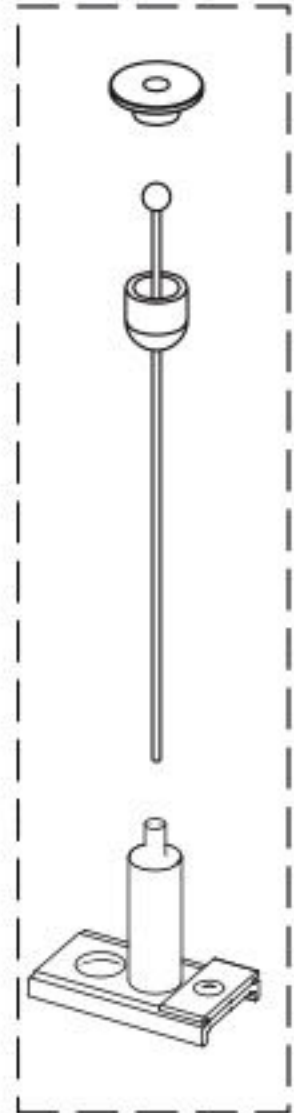


3a

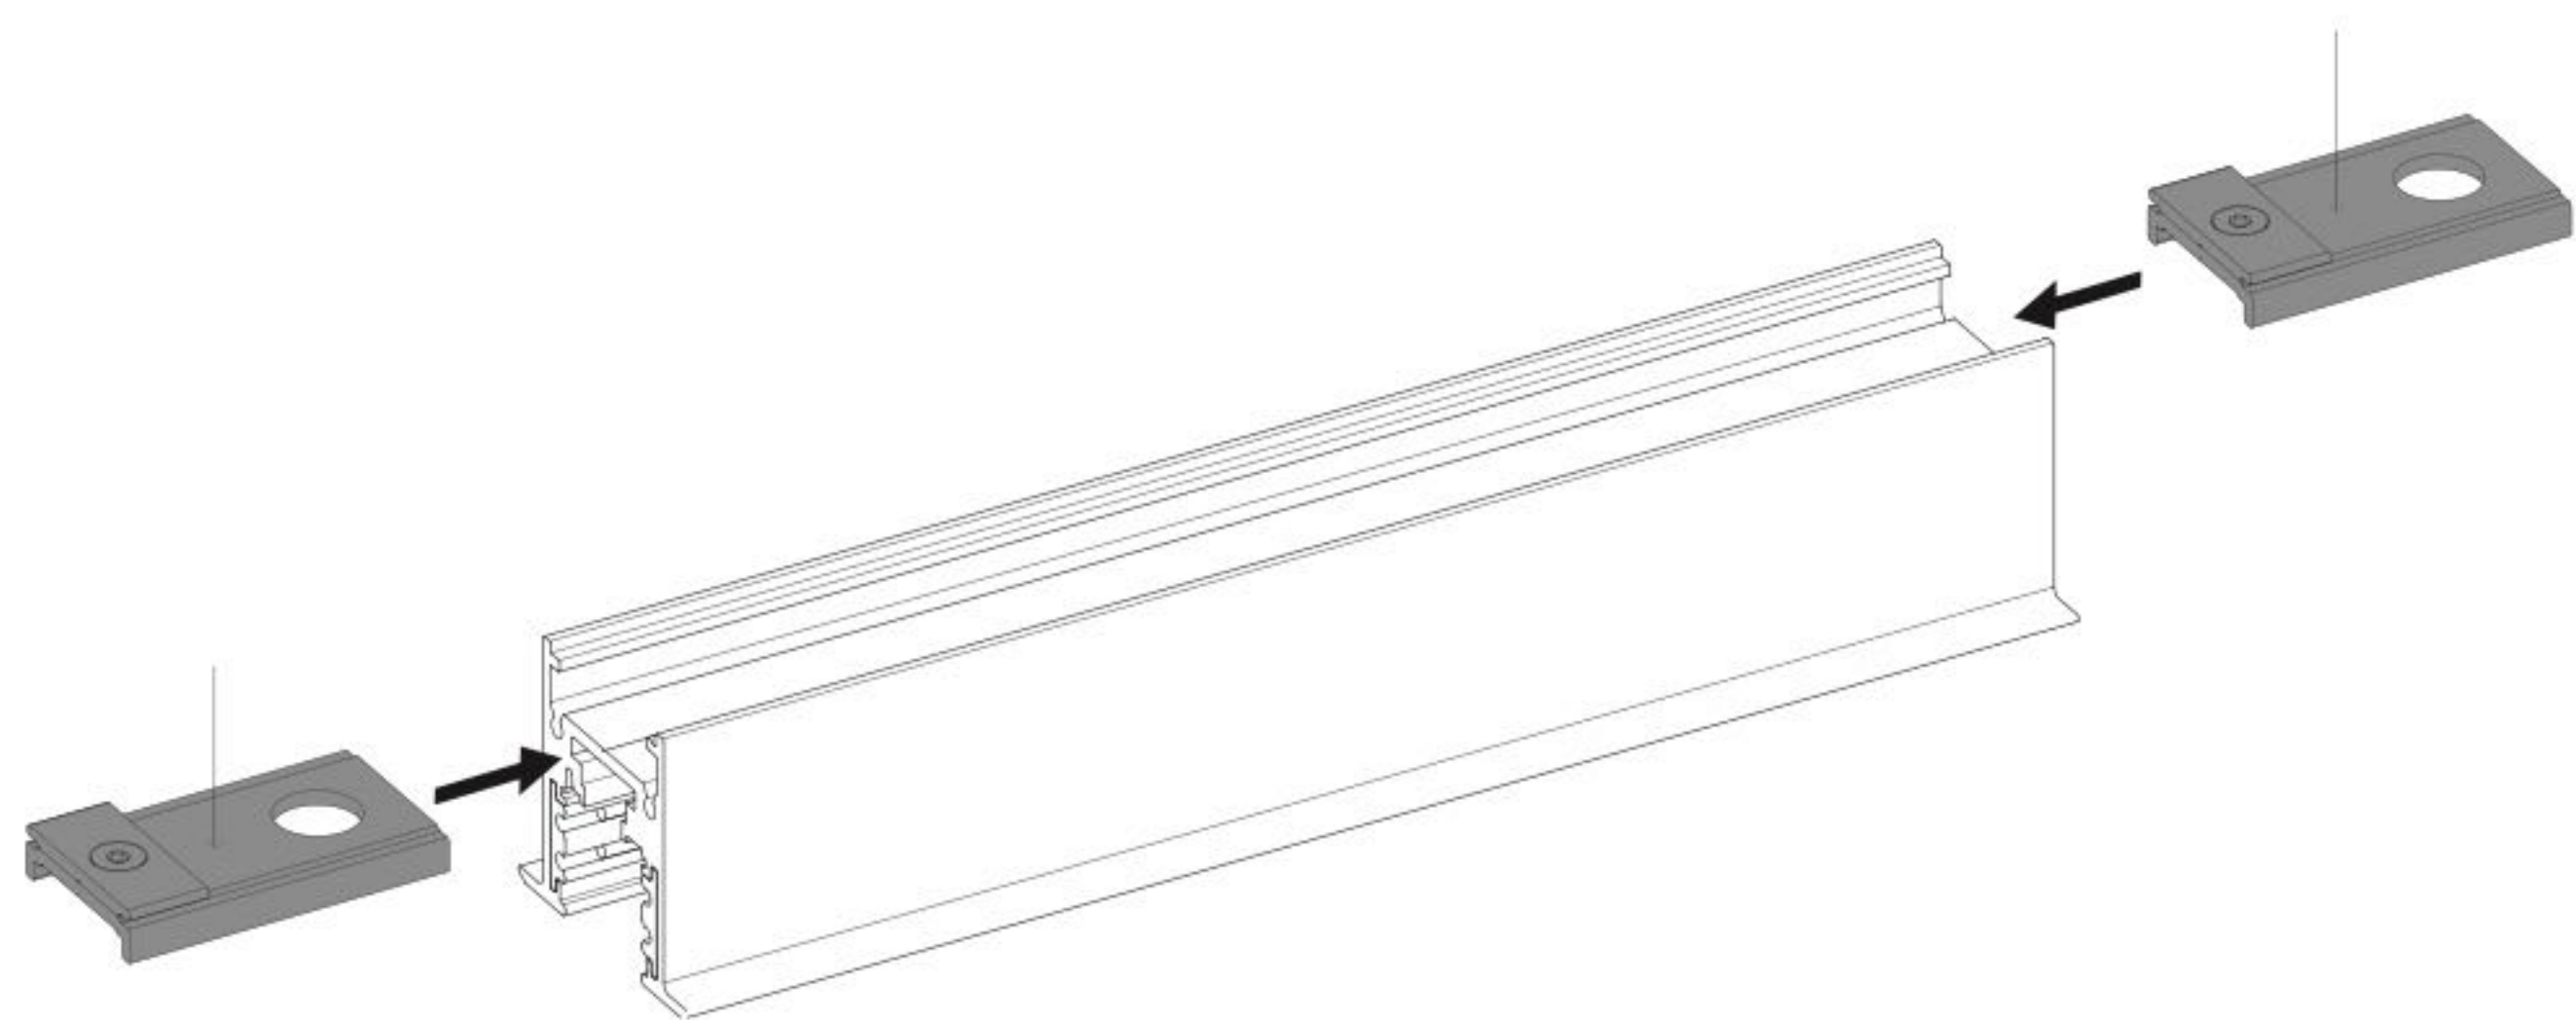


4a

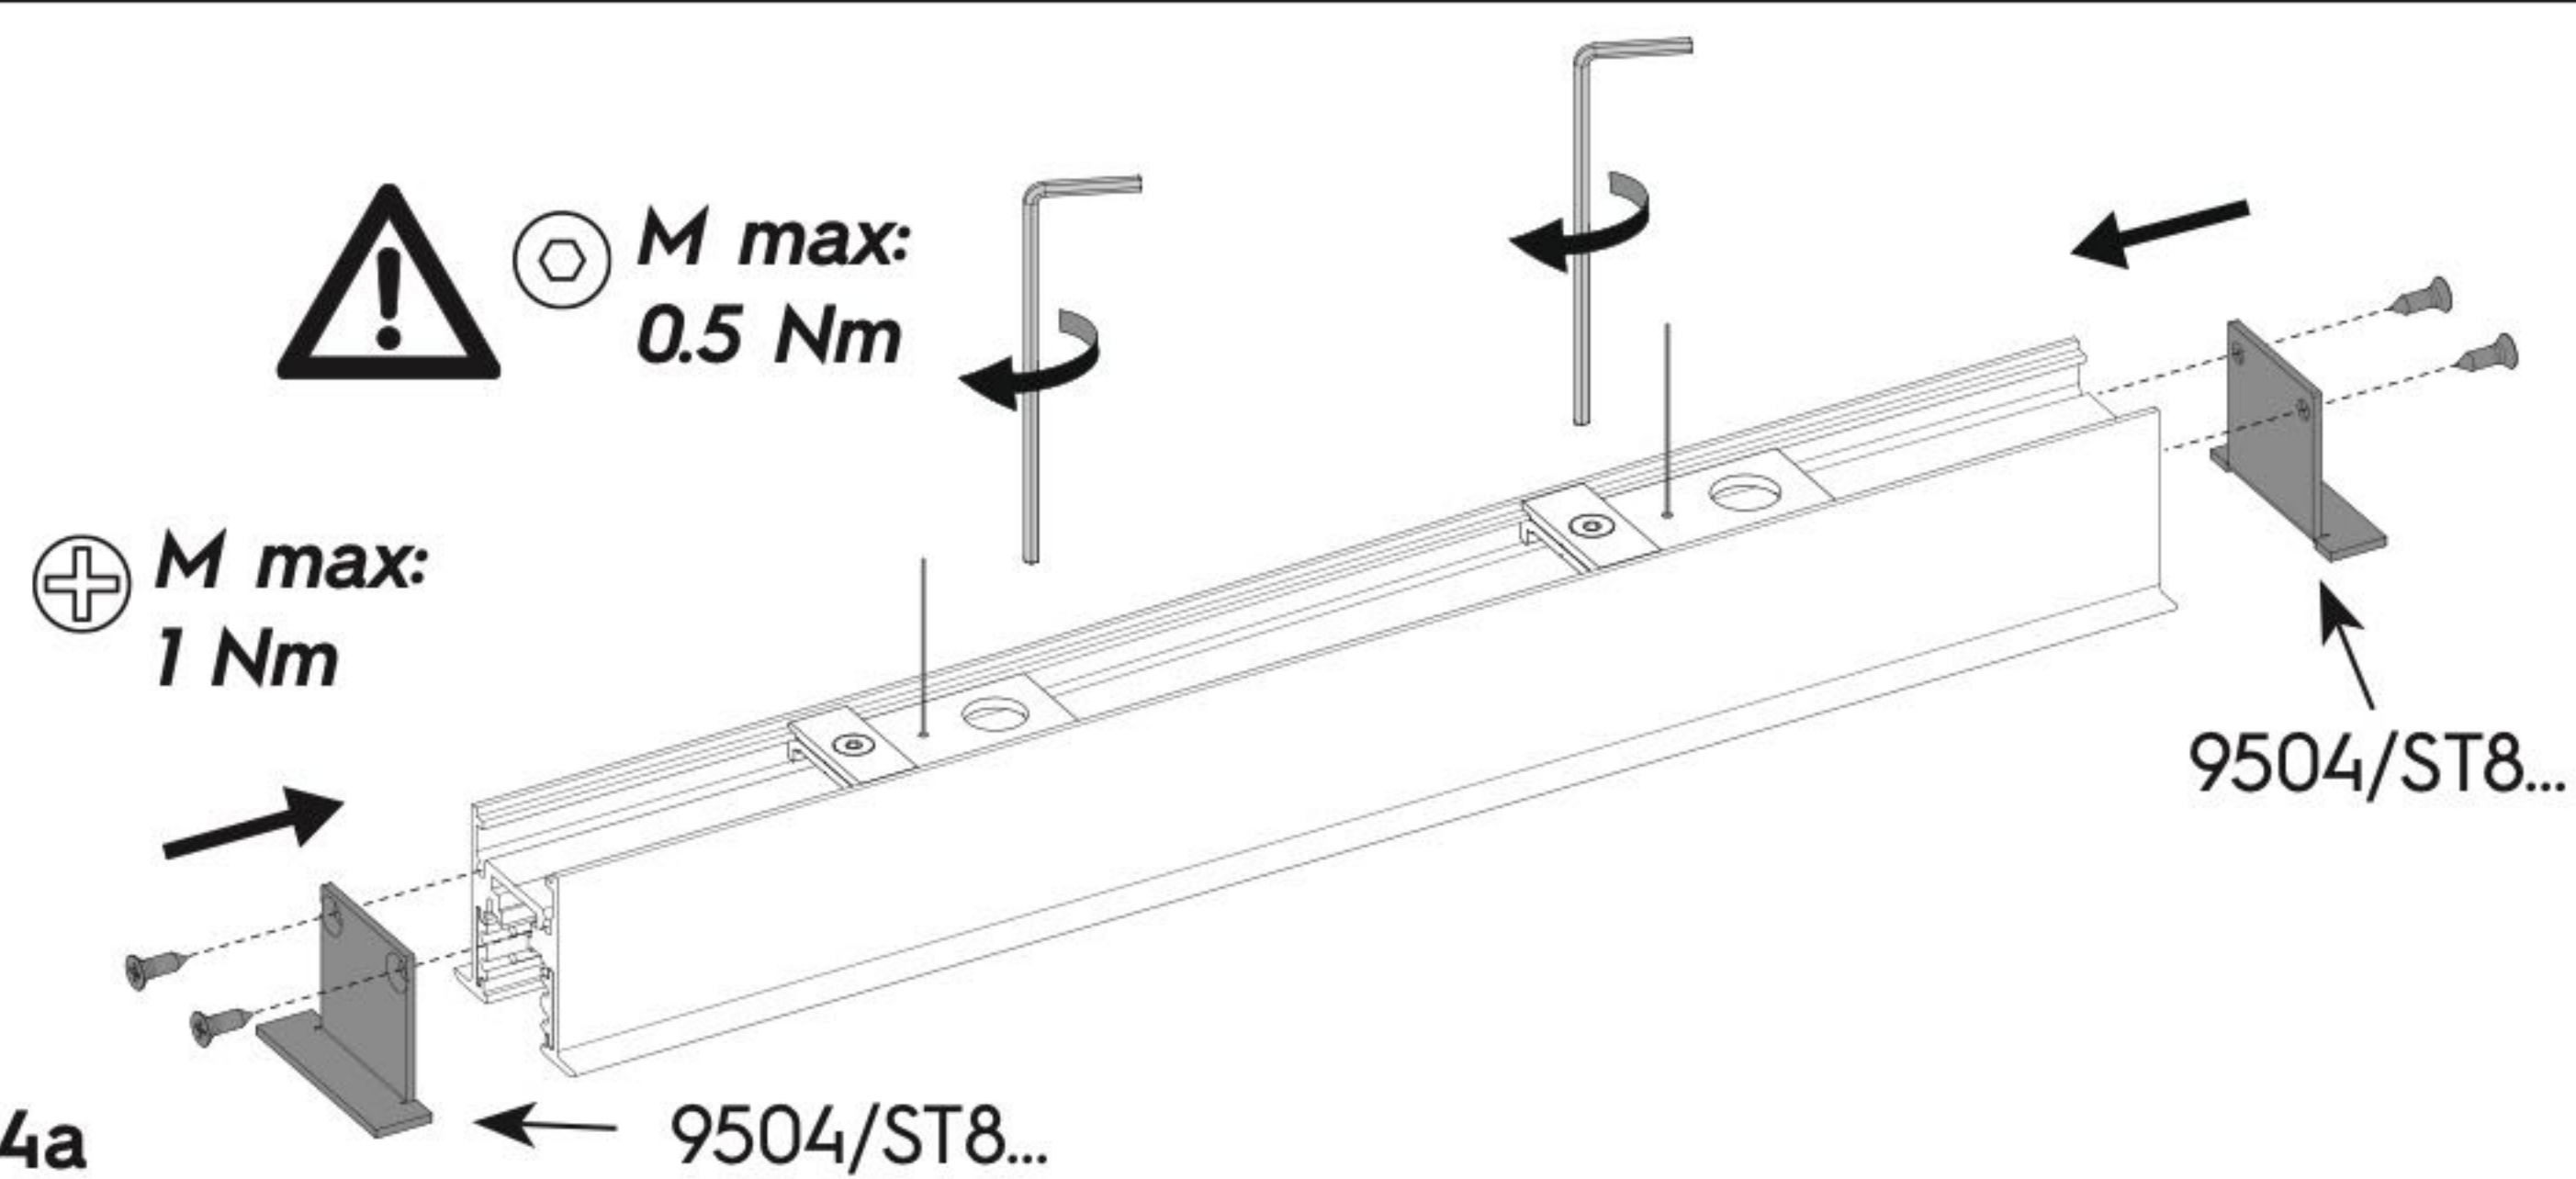


3b

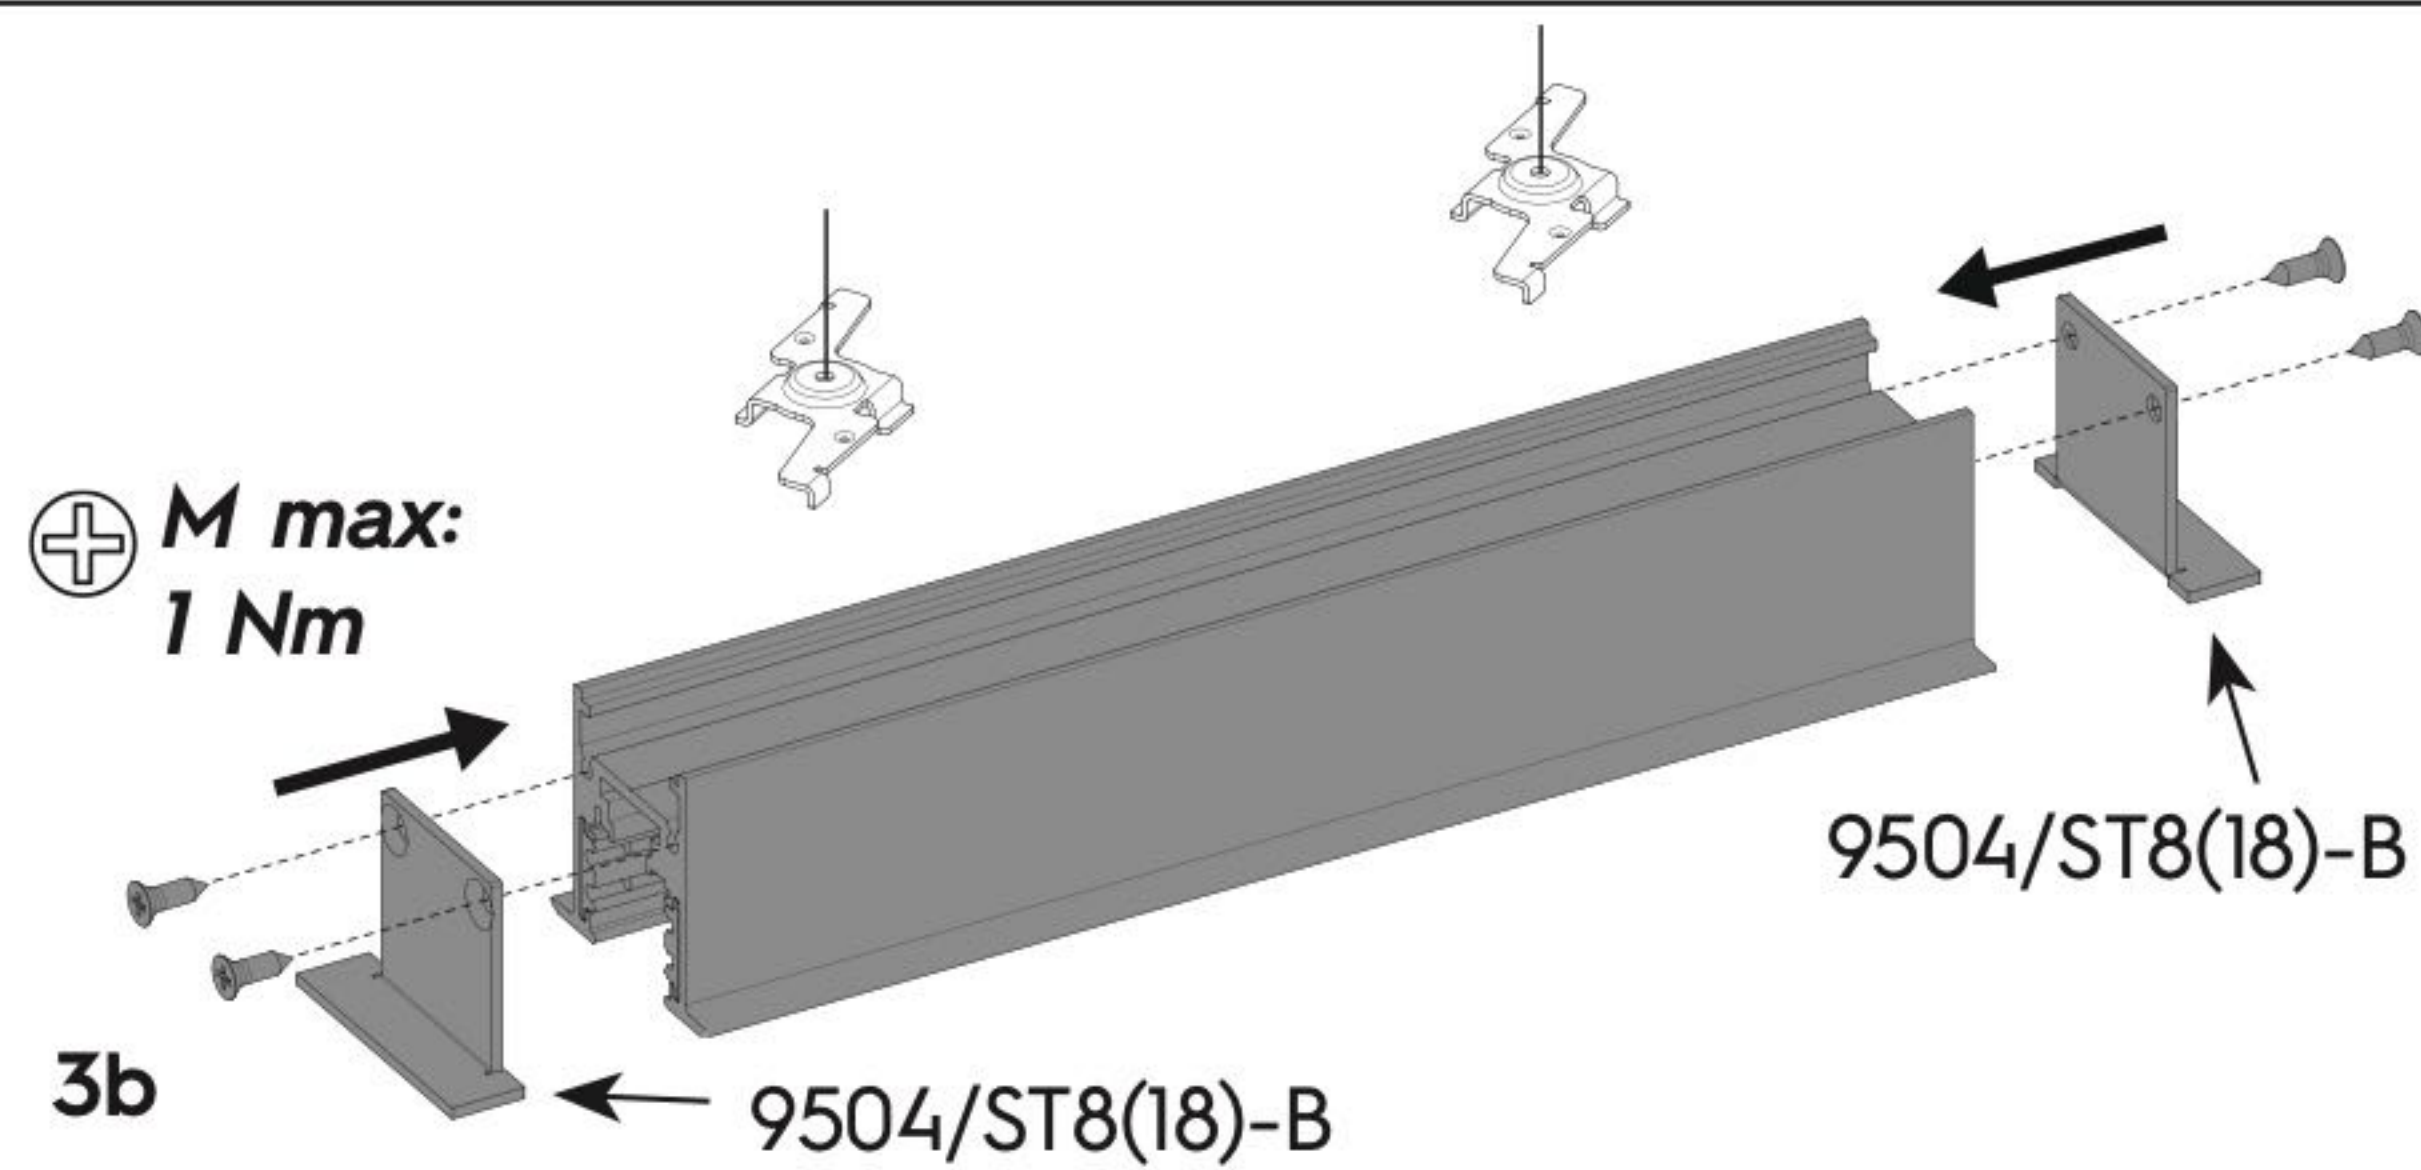



4b

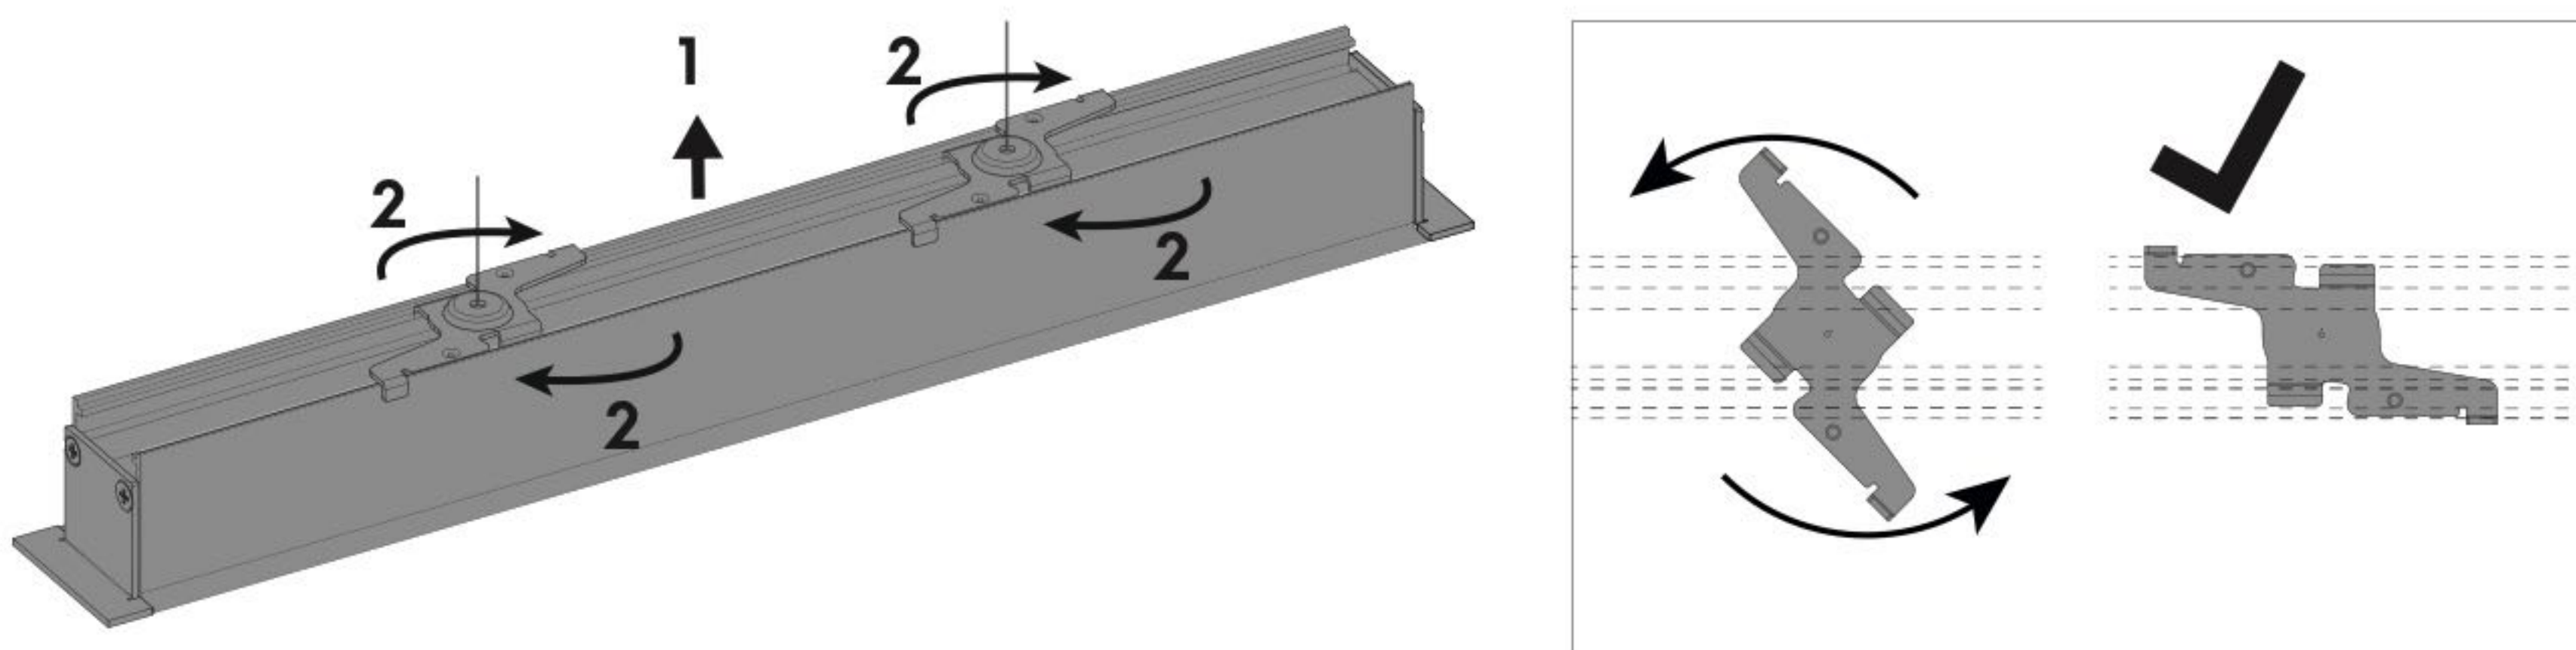






4 - IN ROW USE

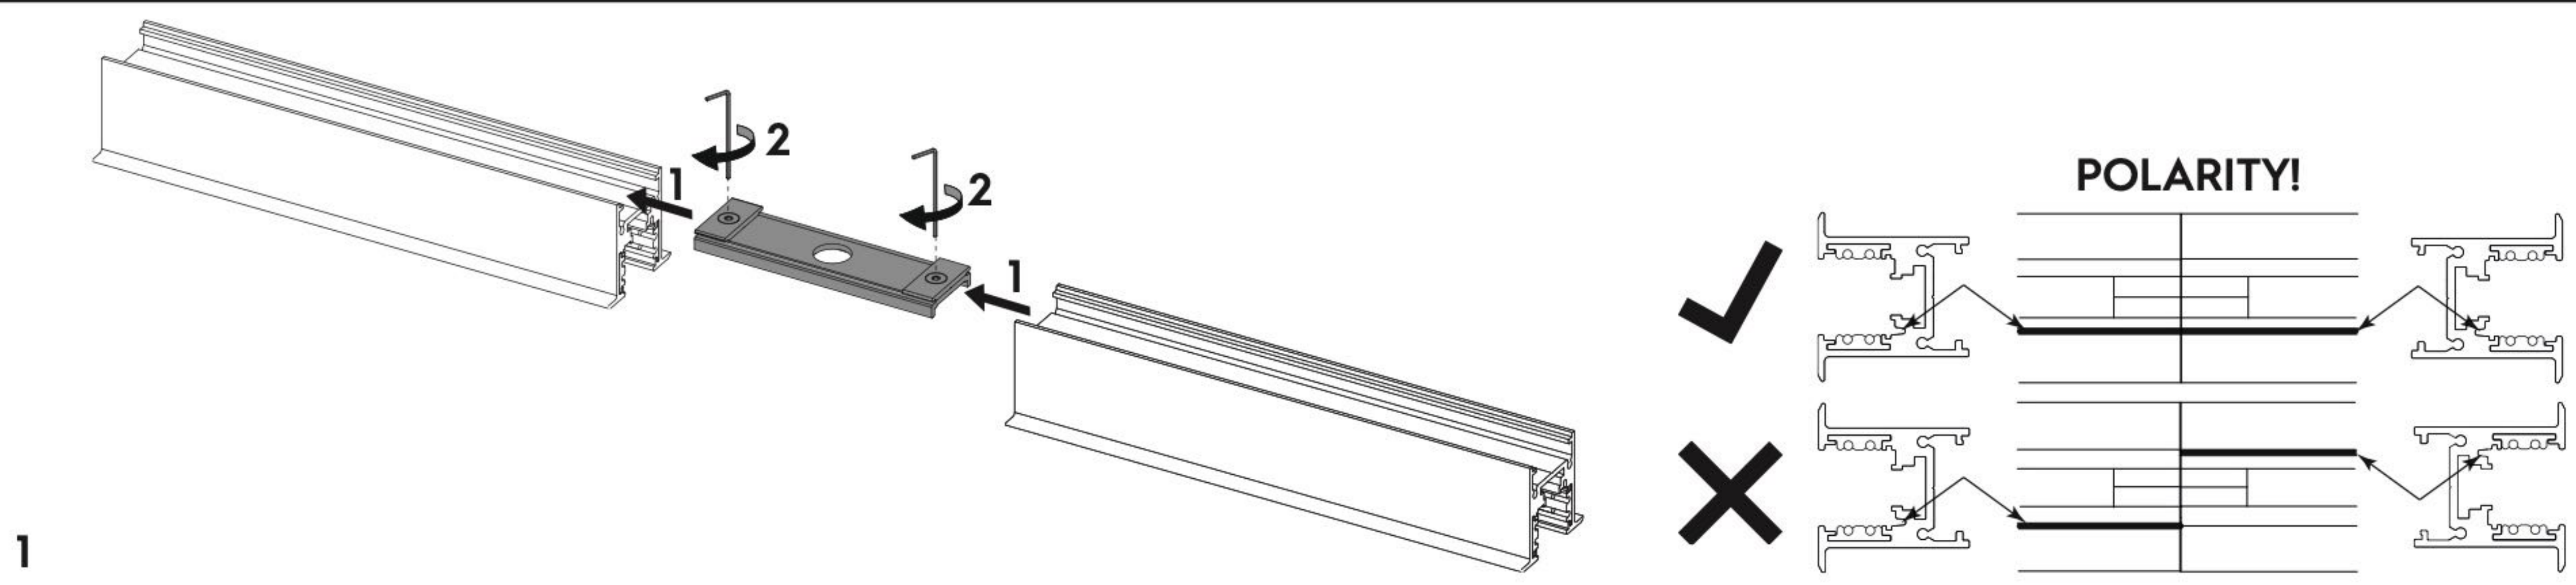





2

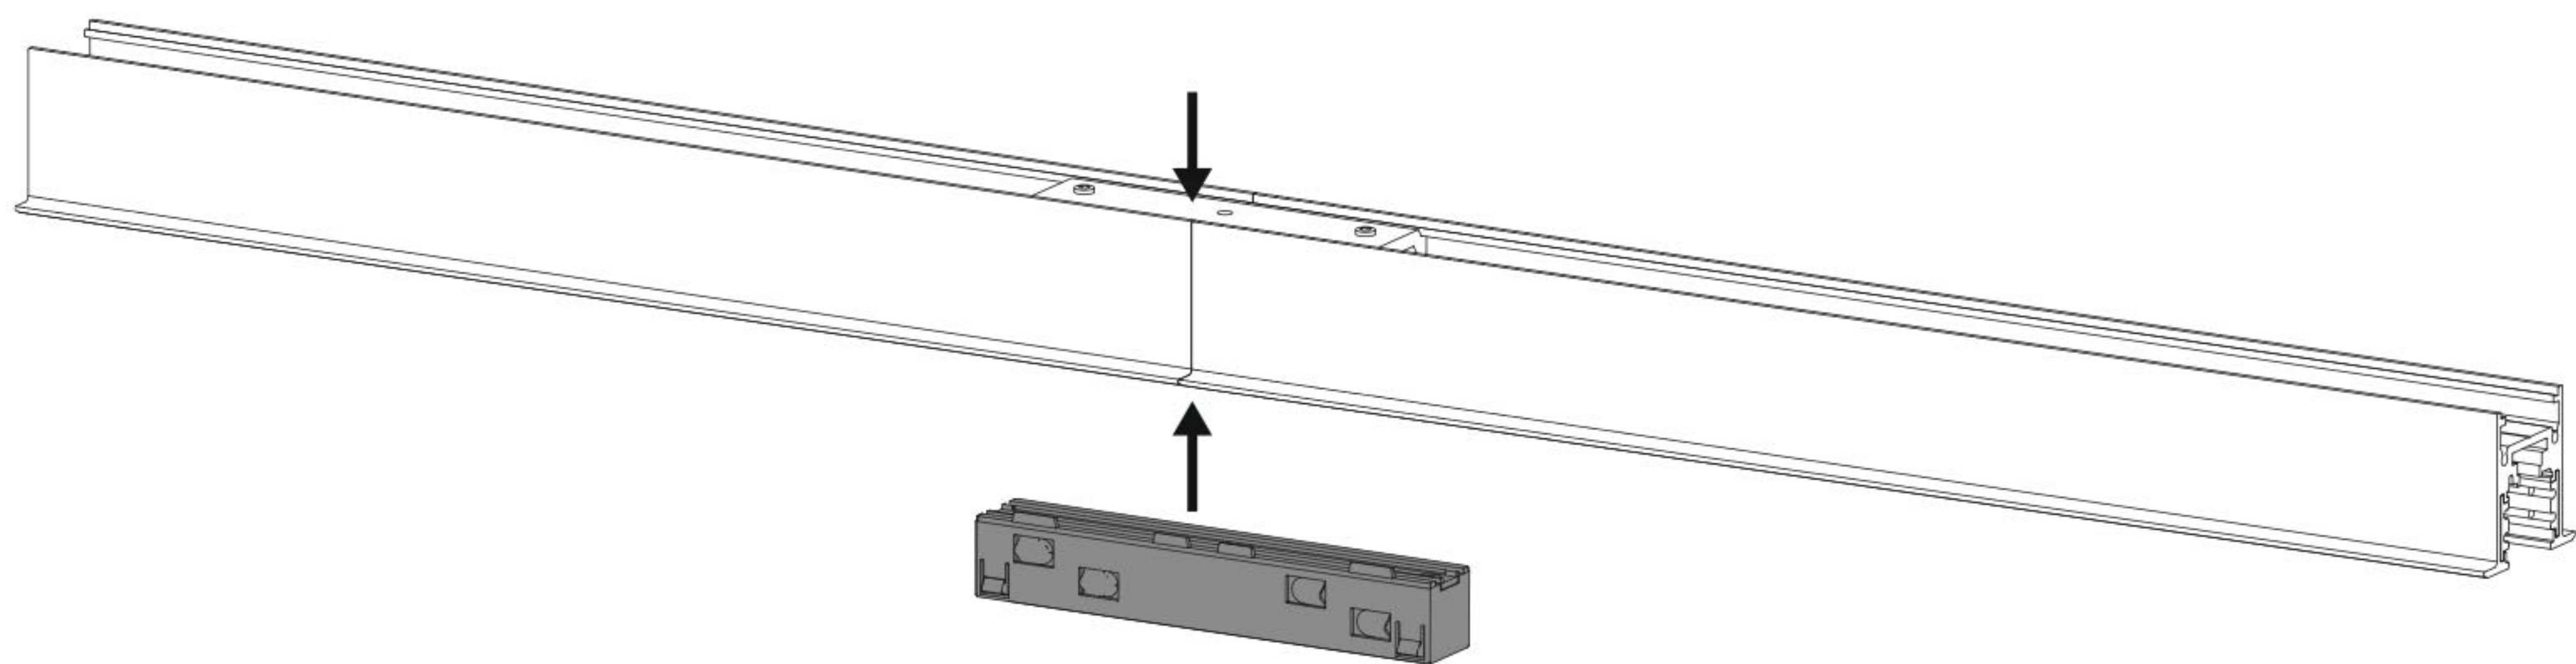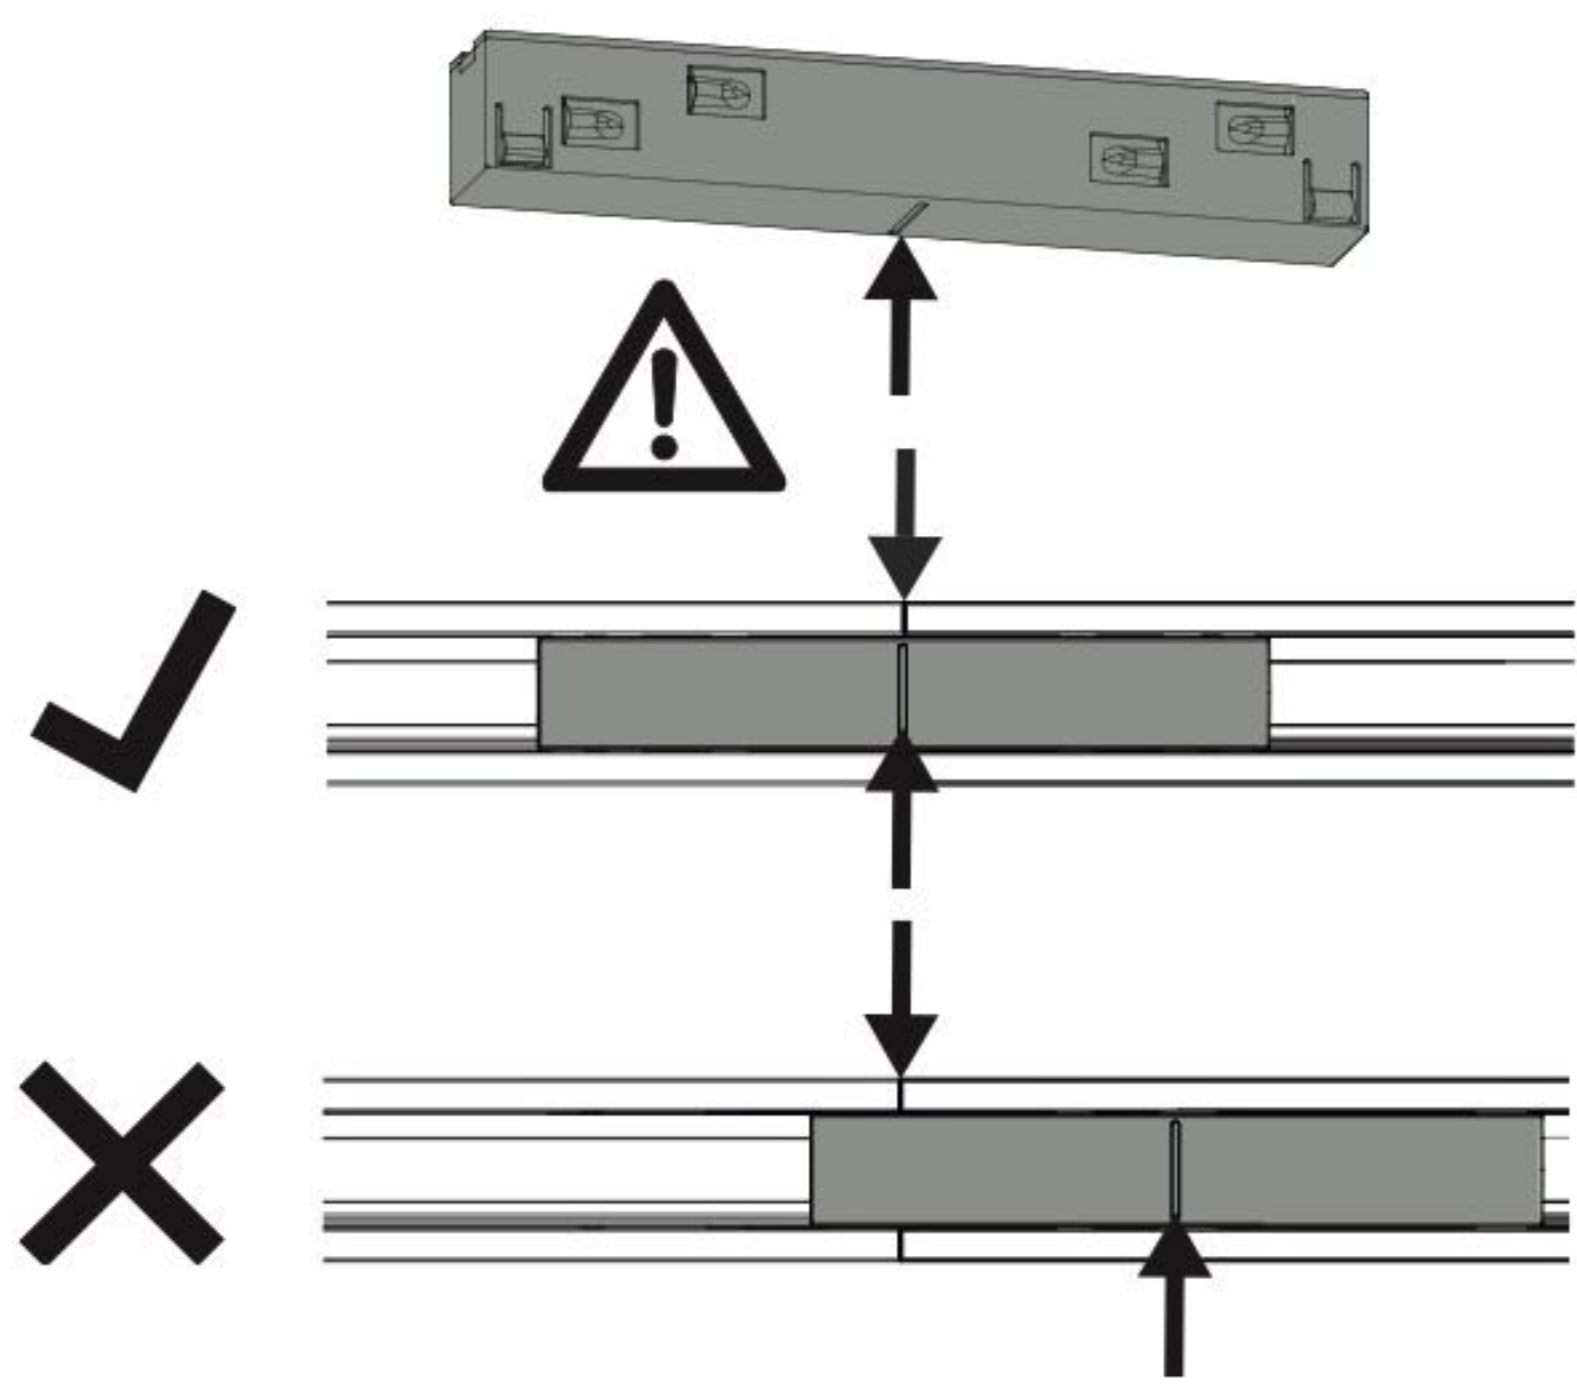


5 - S-9511/...-ST8-E

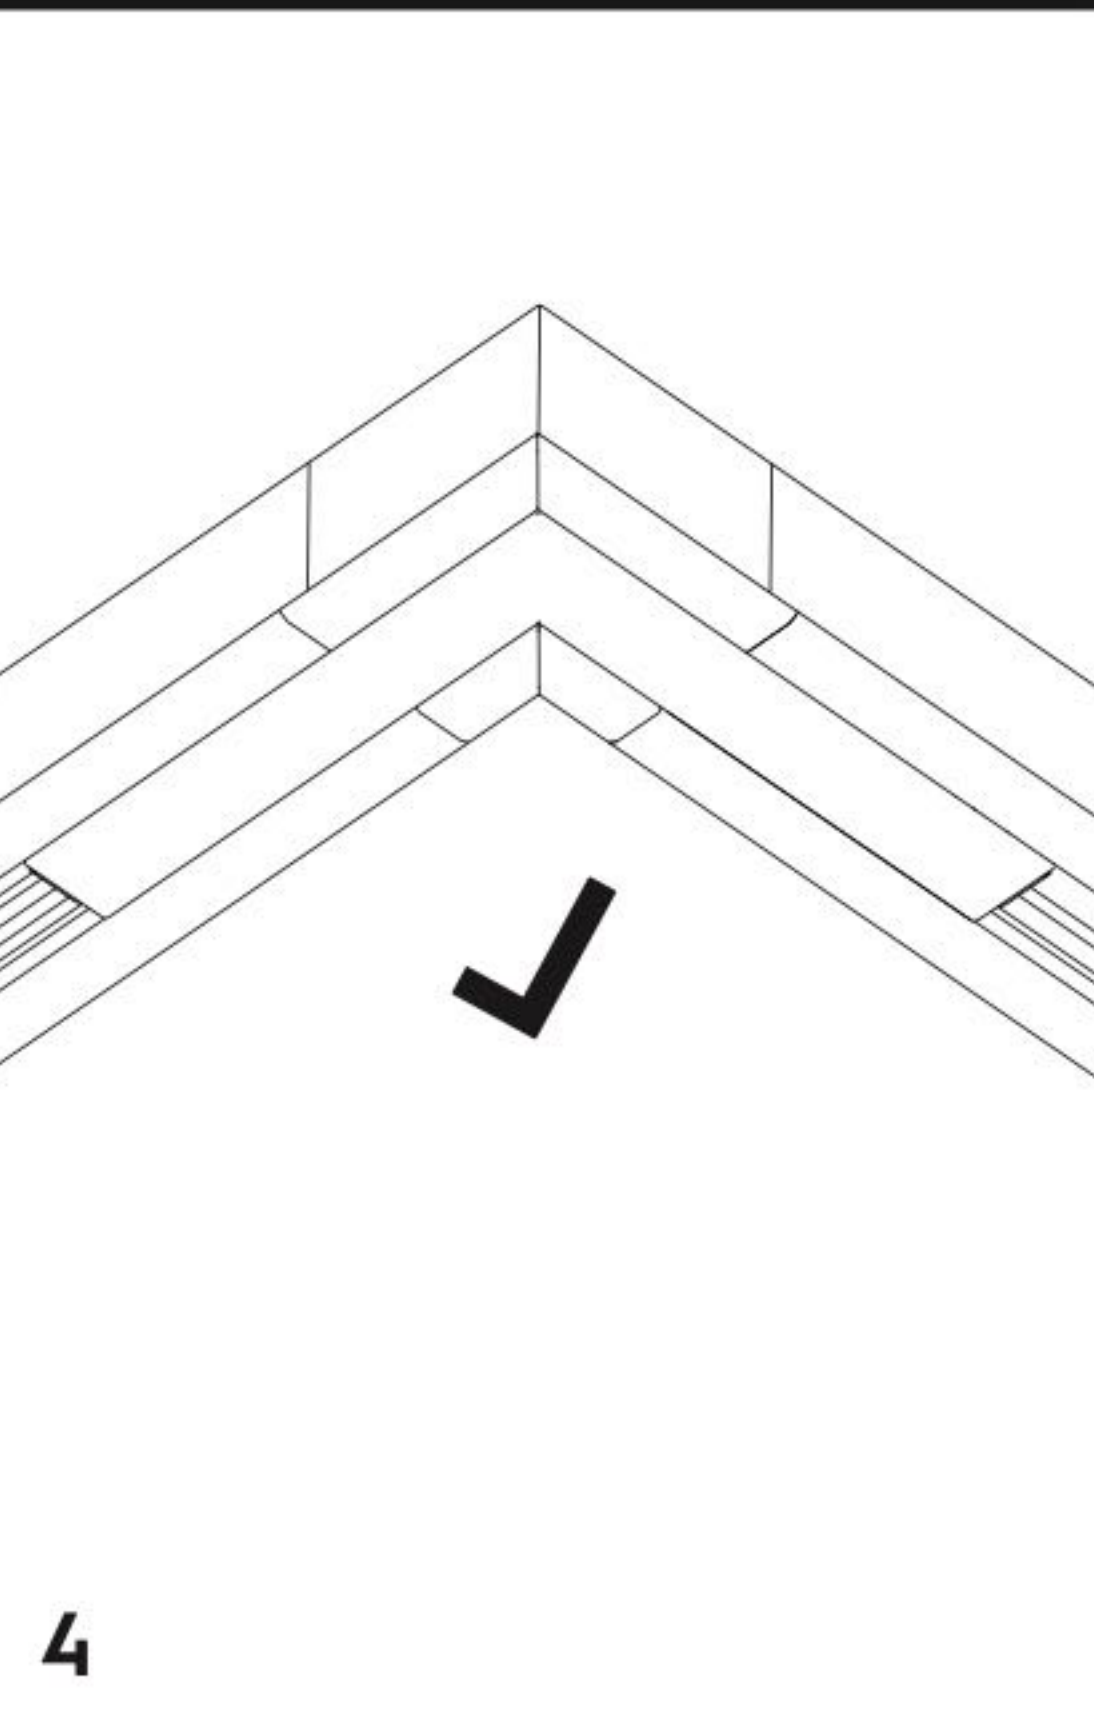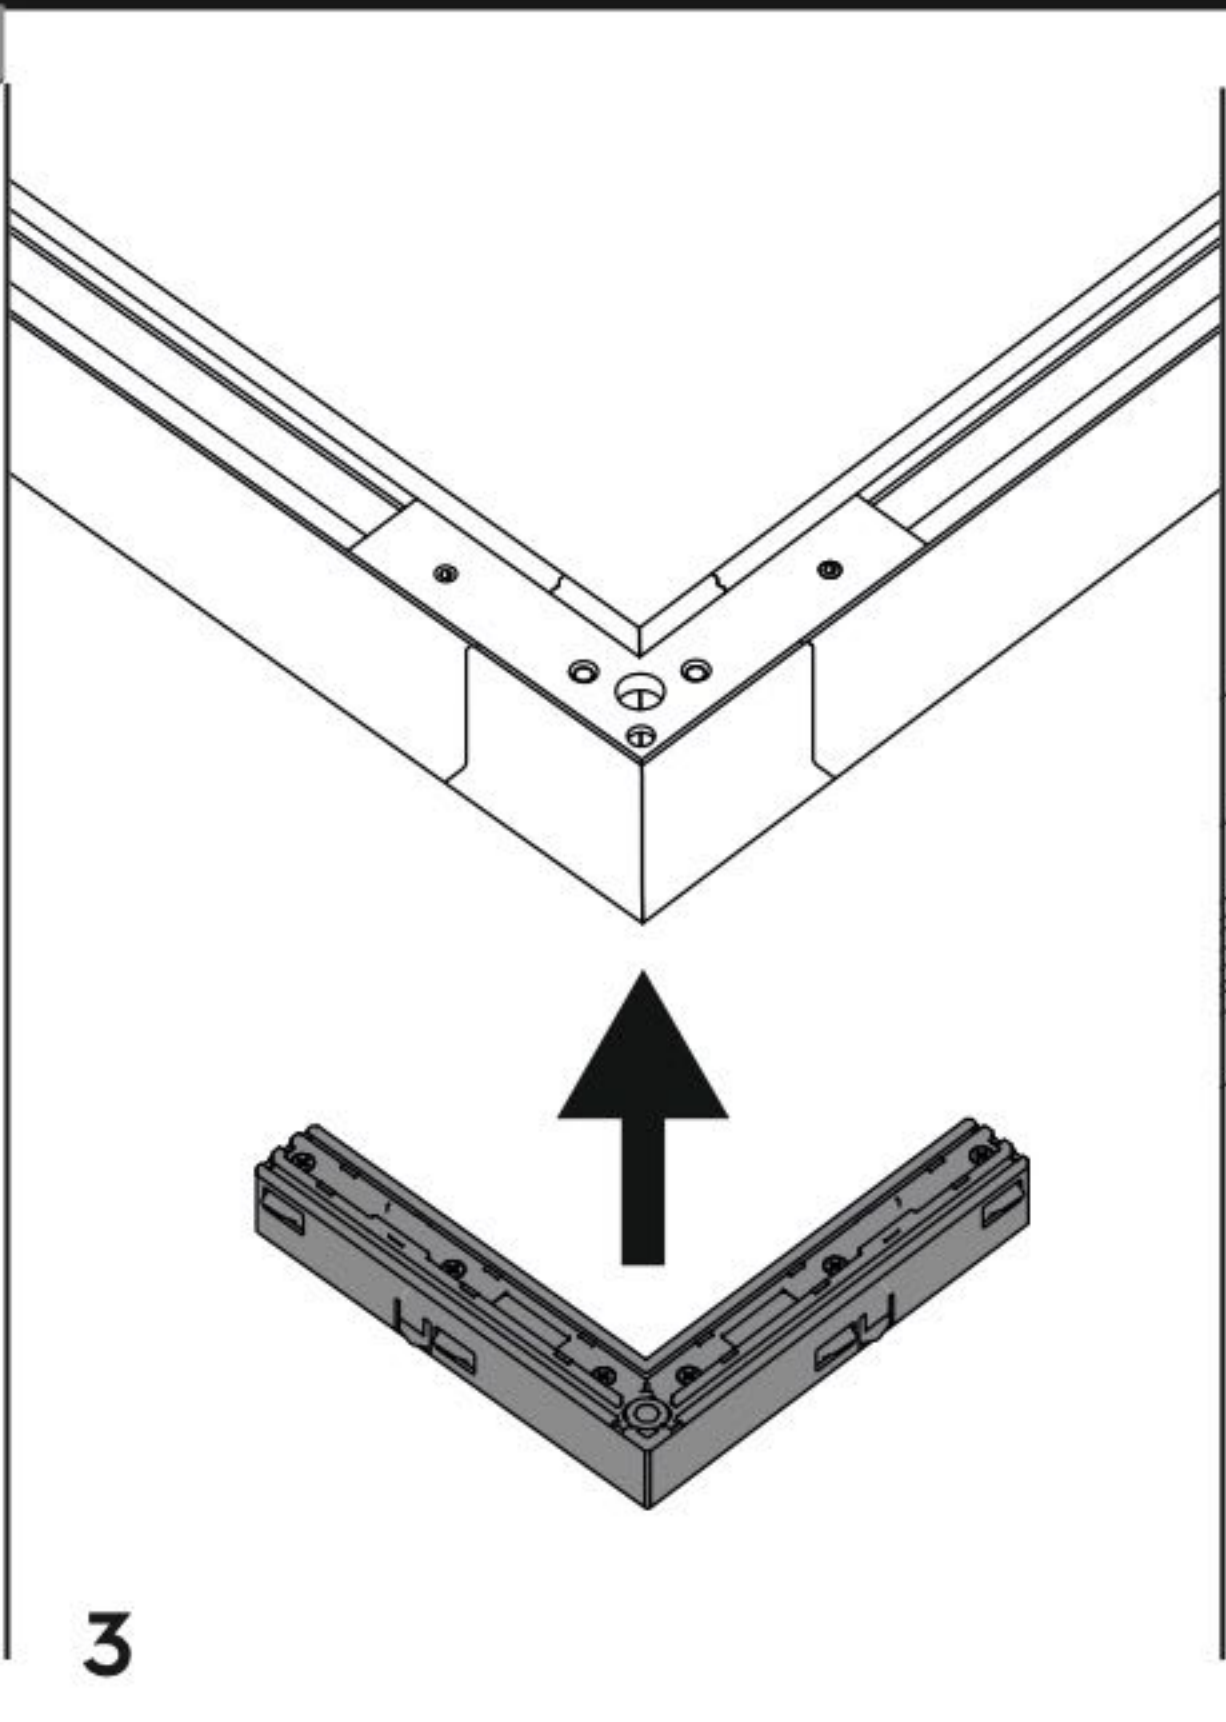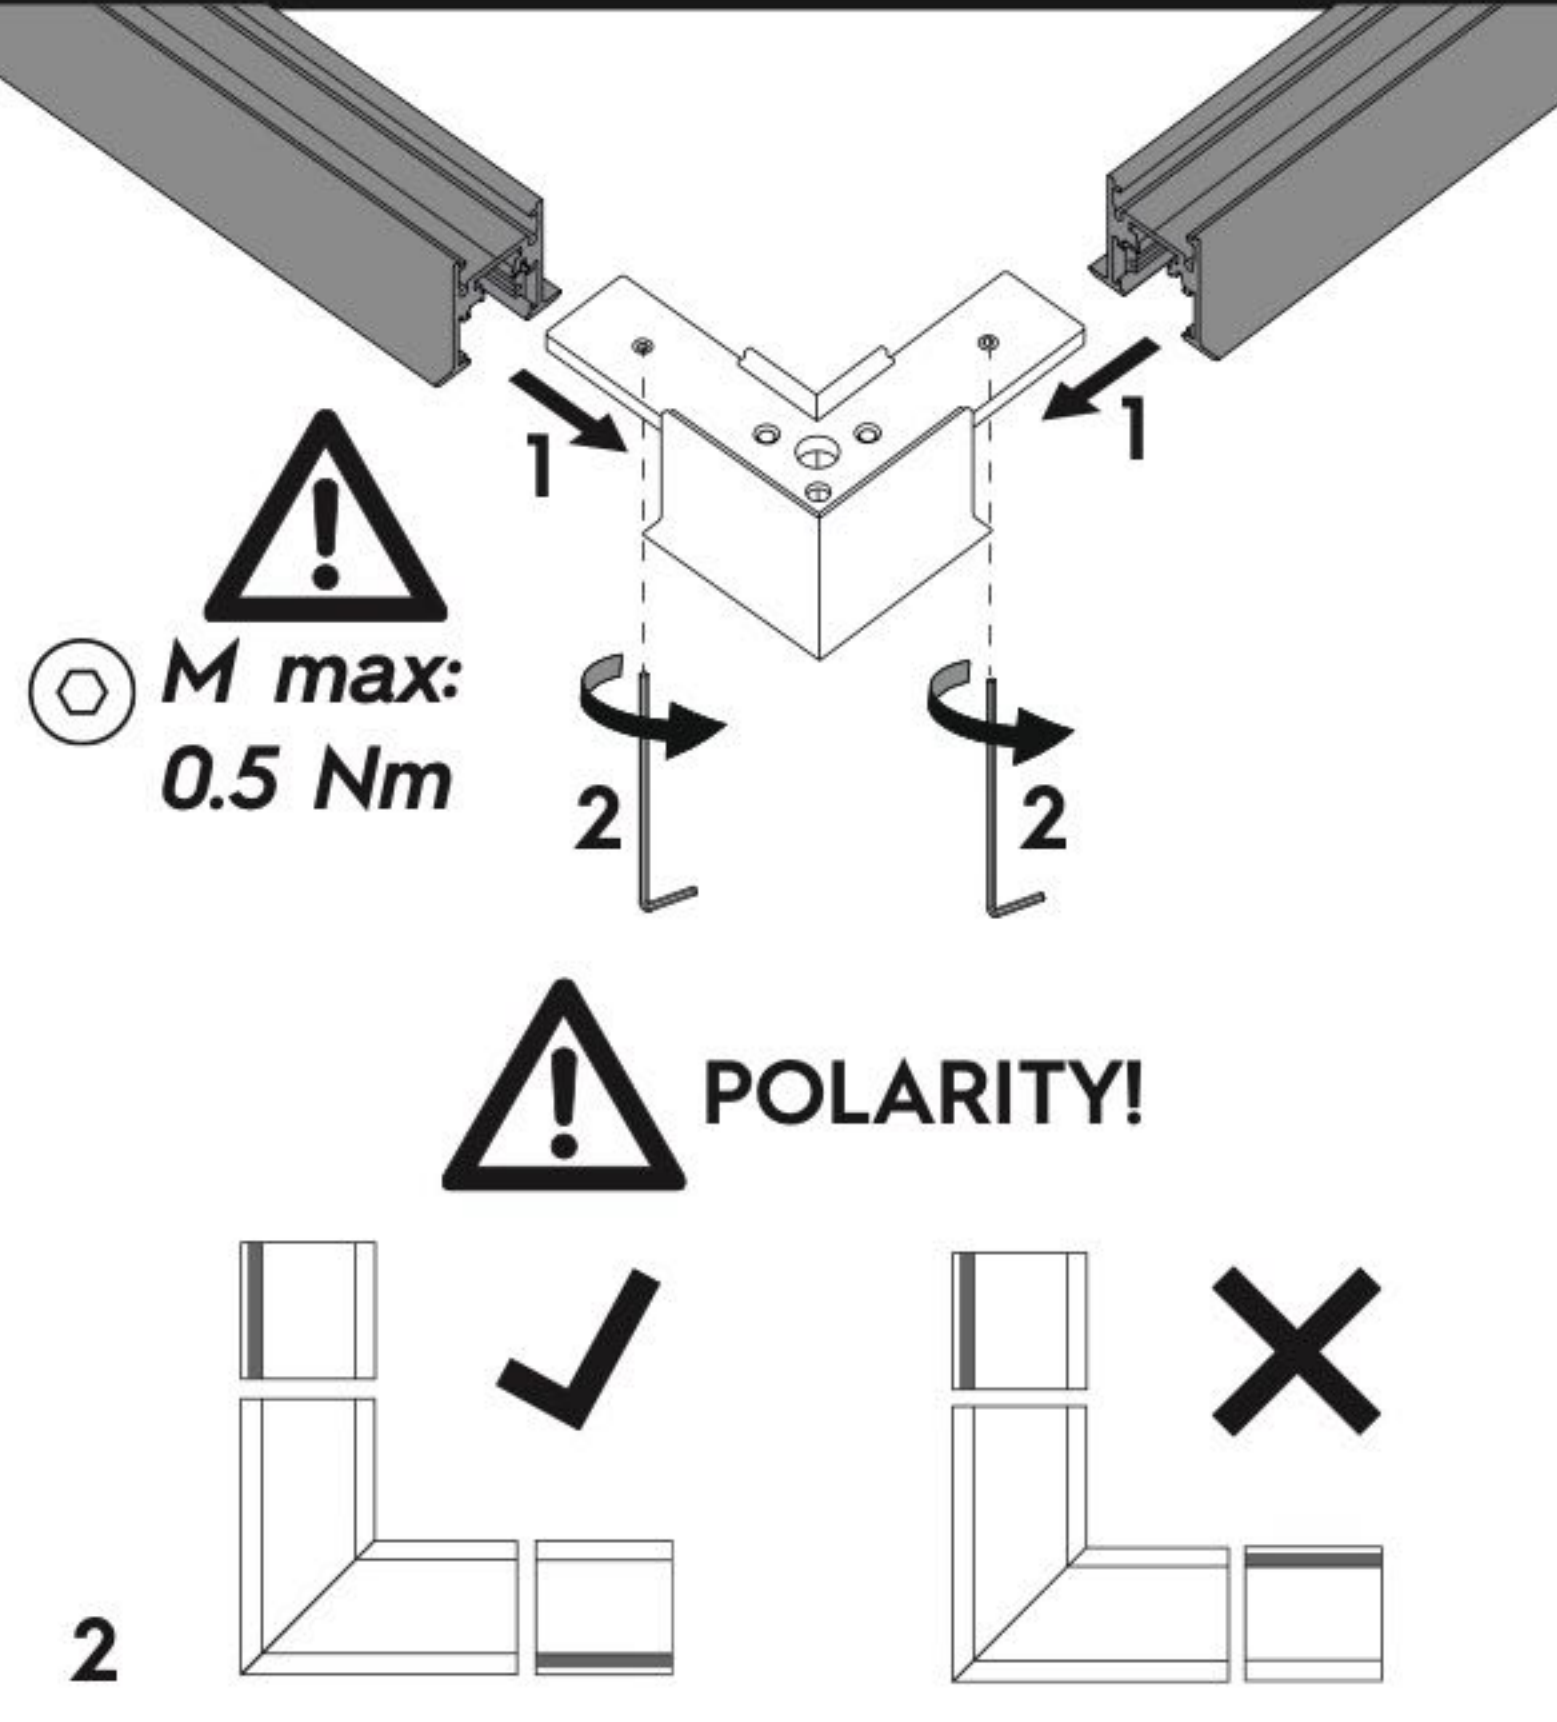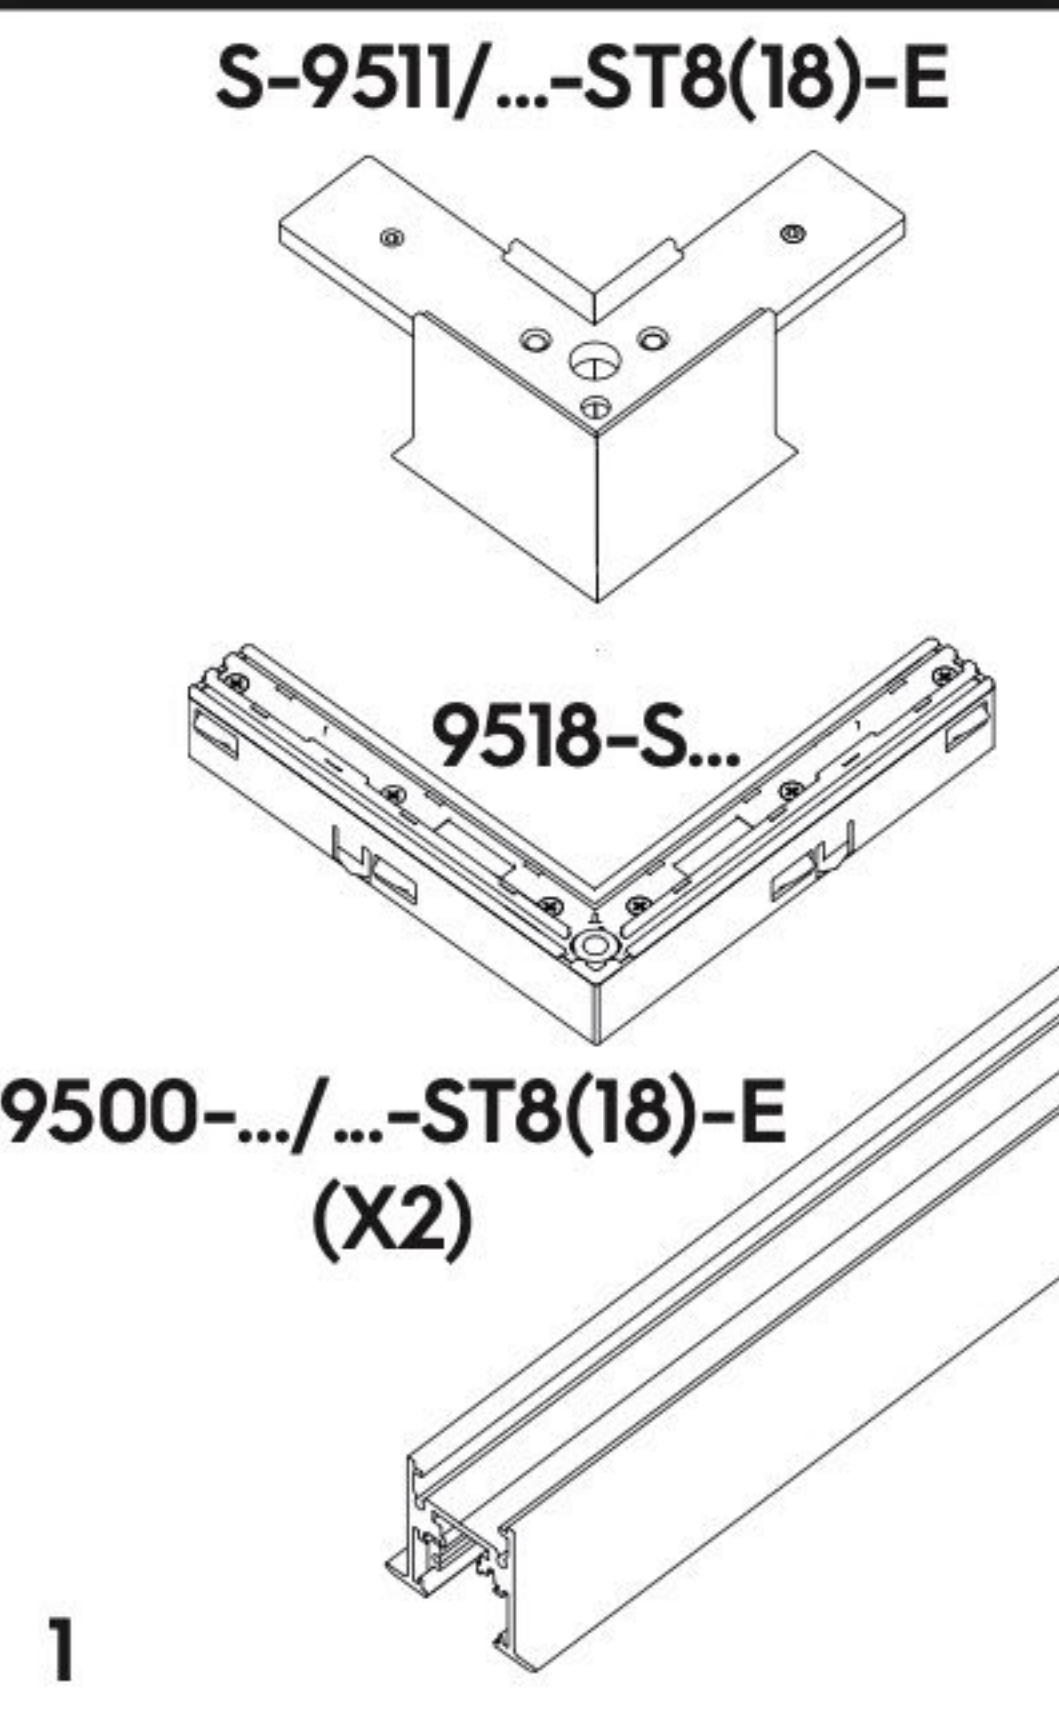
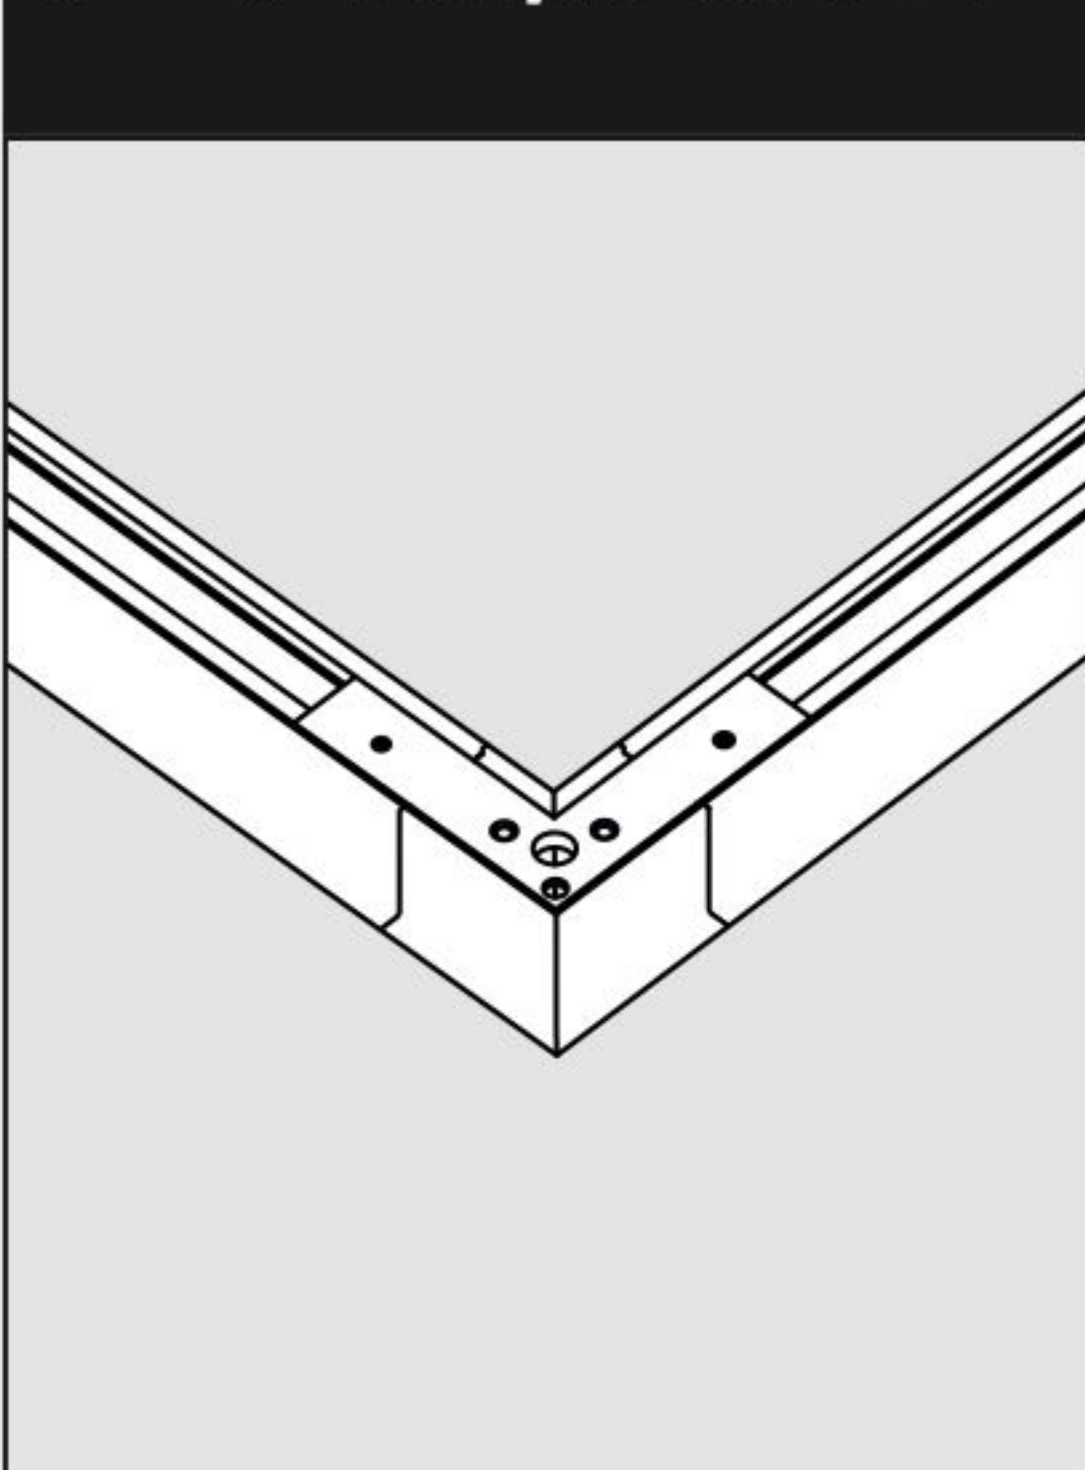


6 - CUTTING

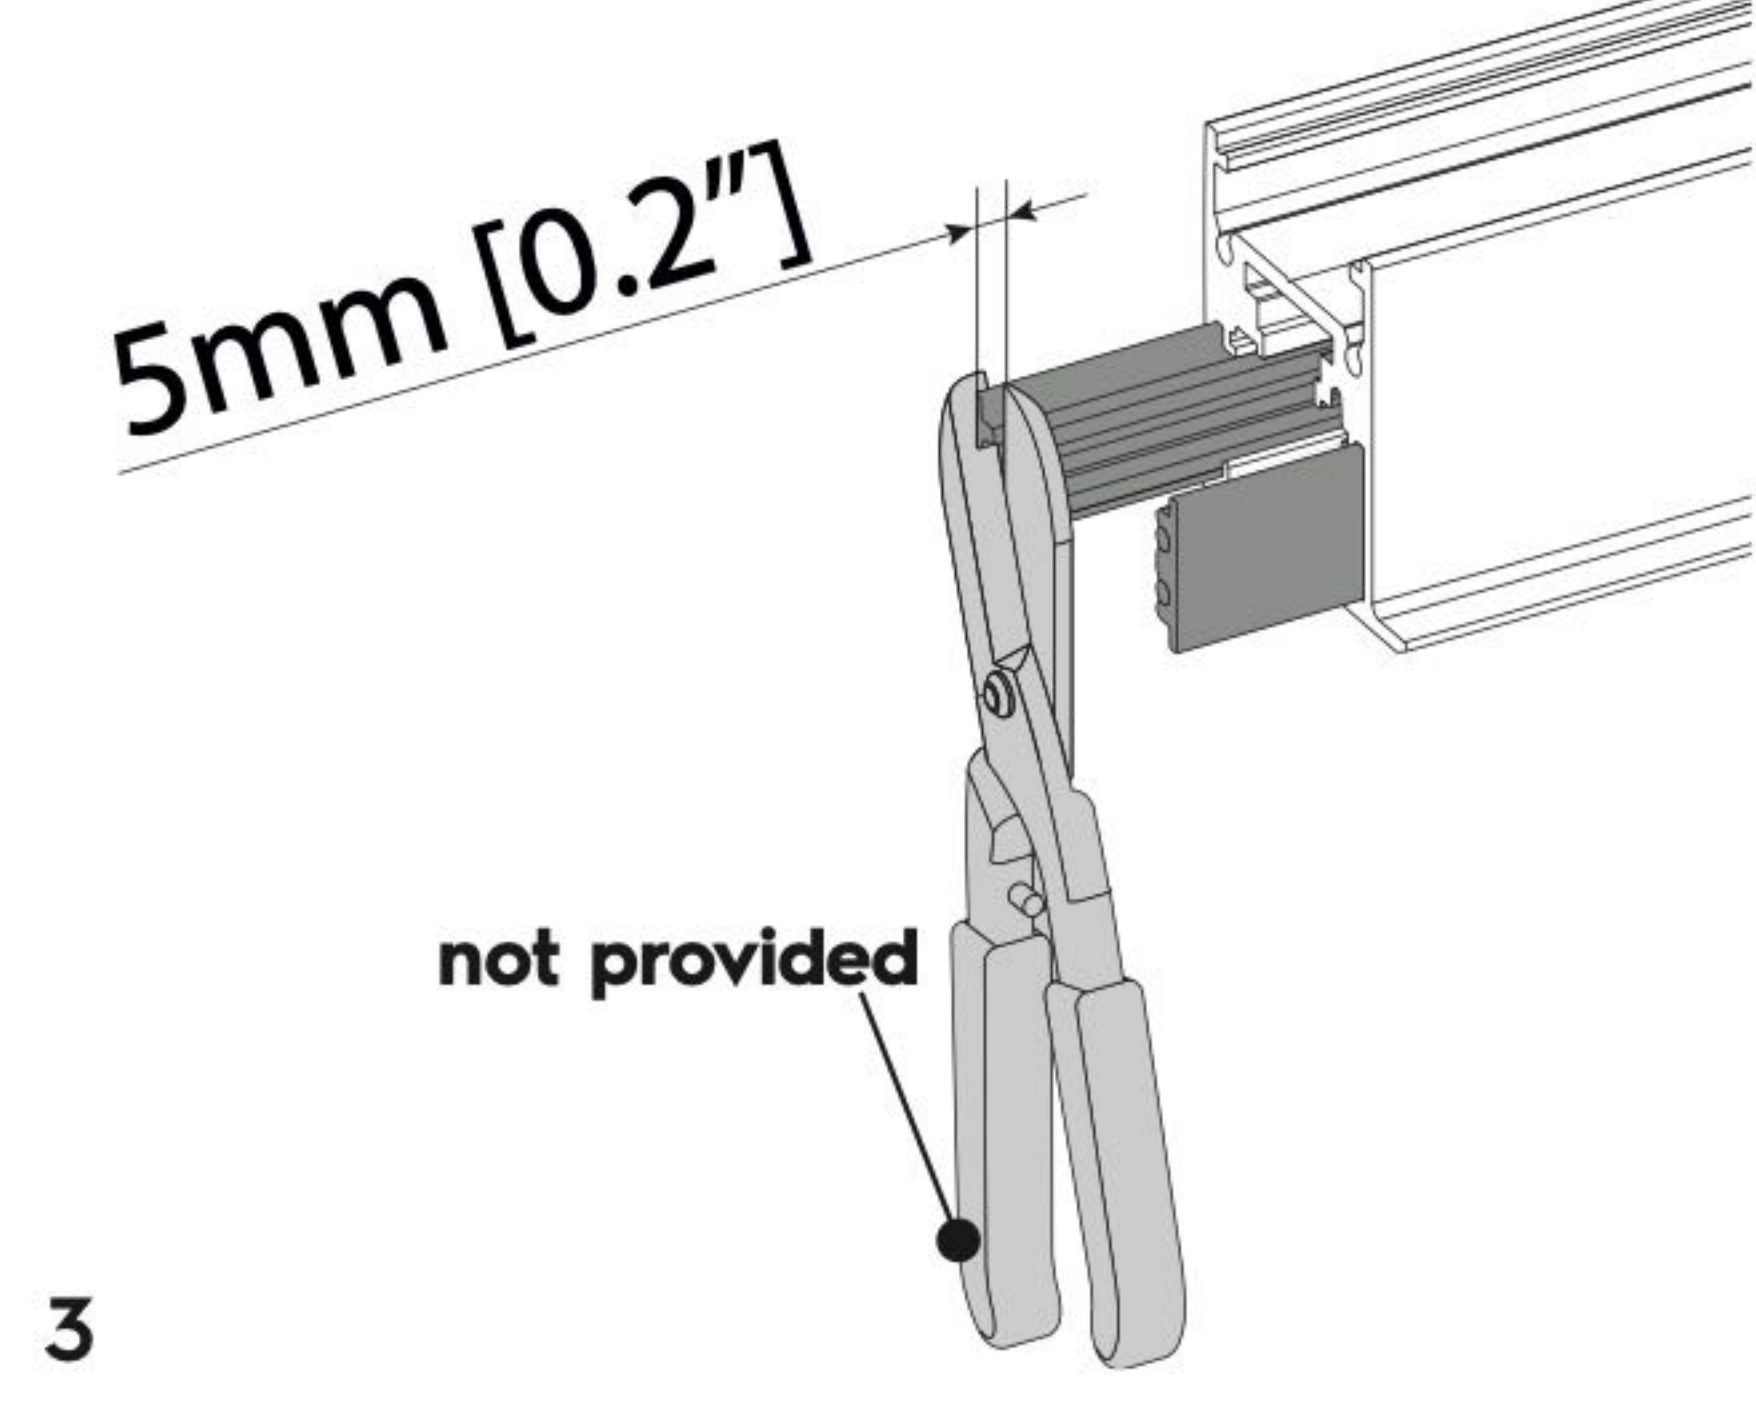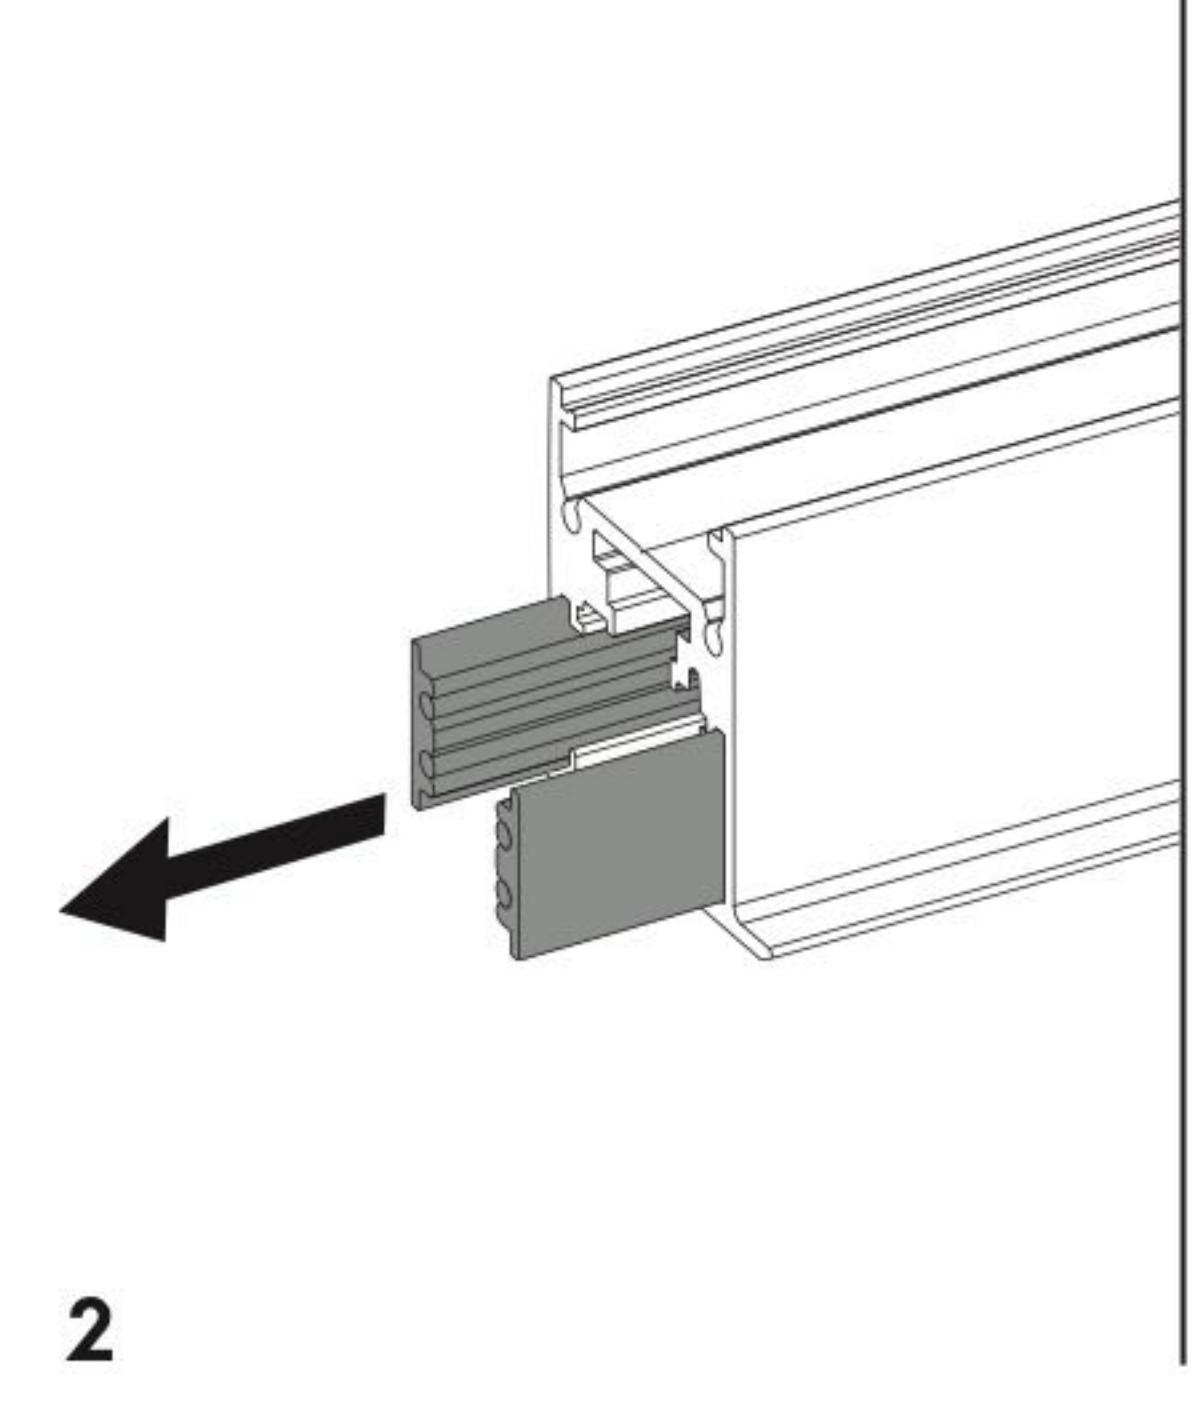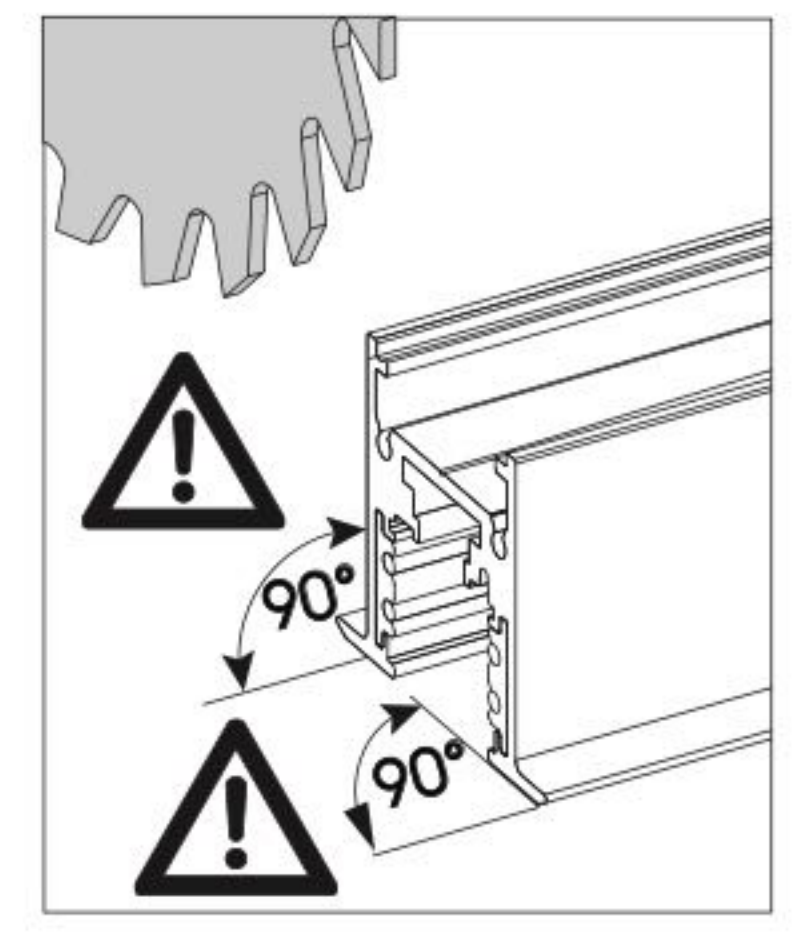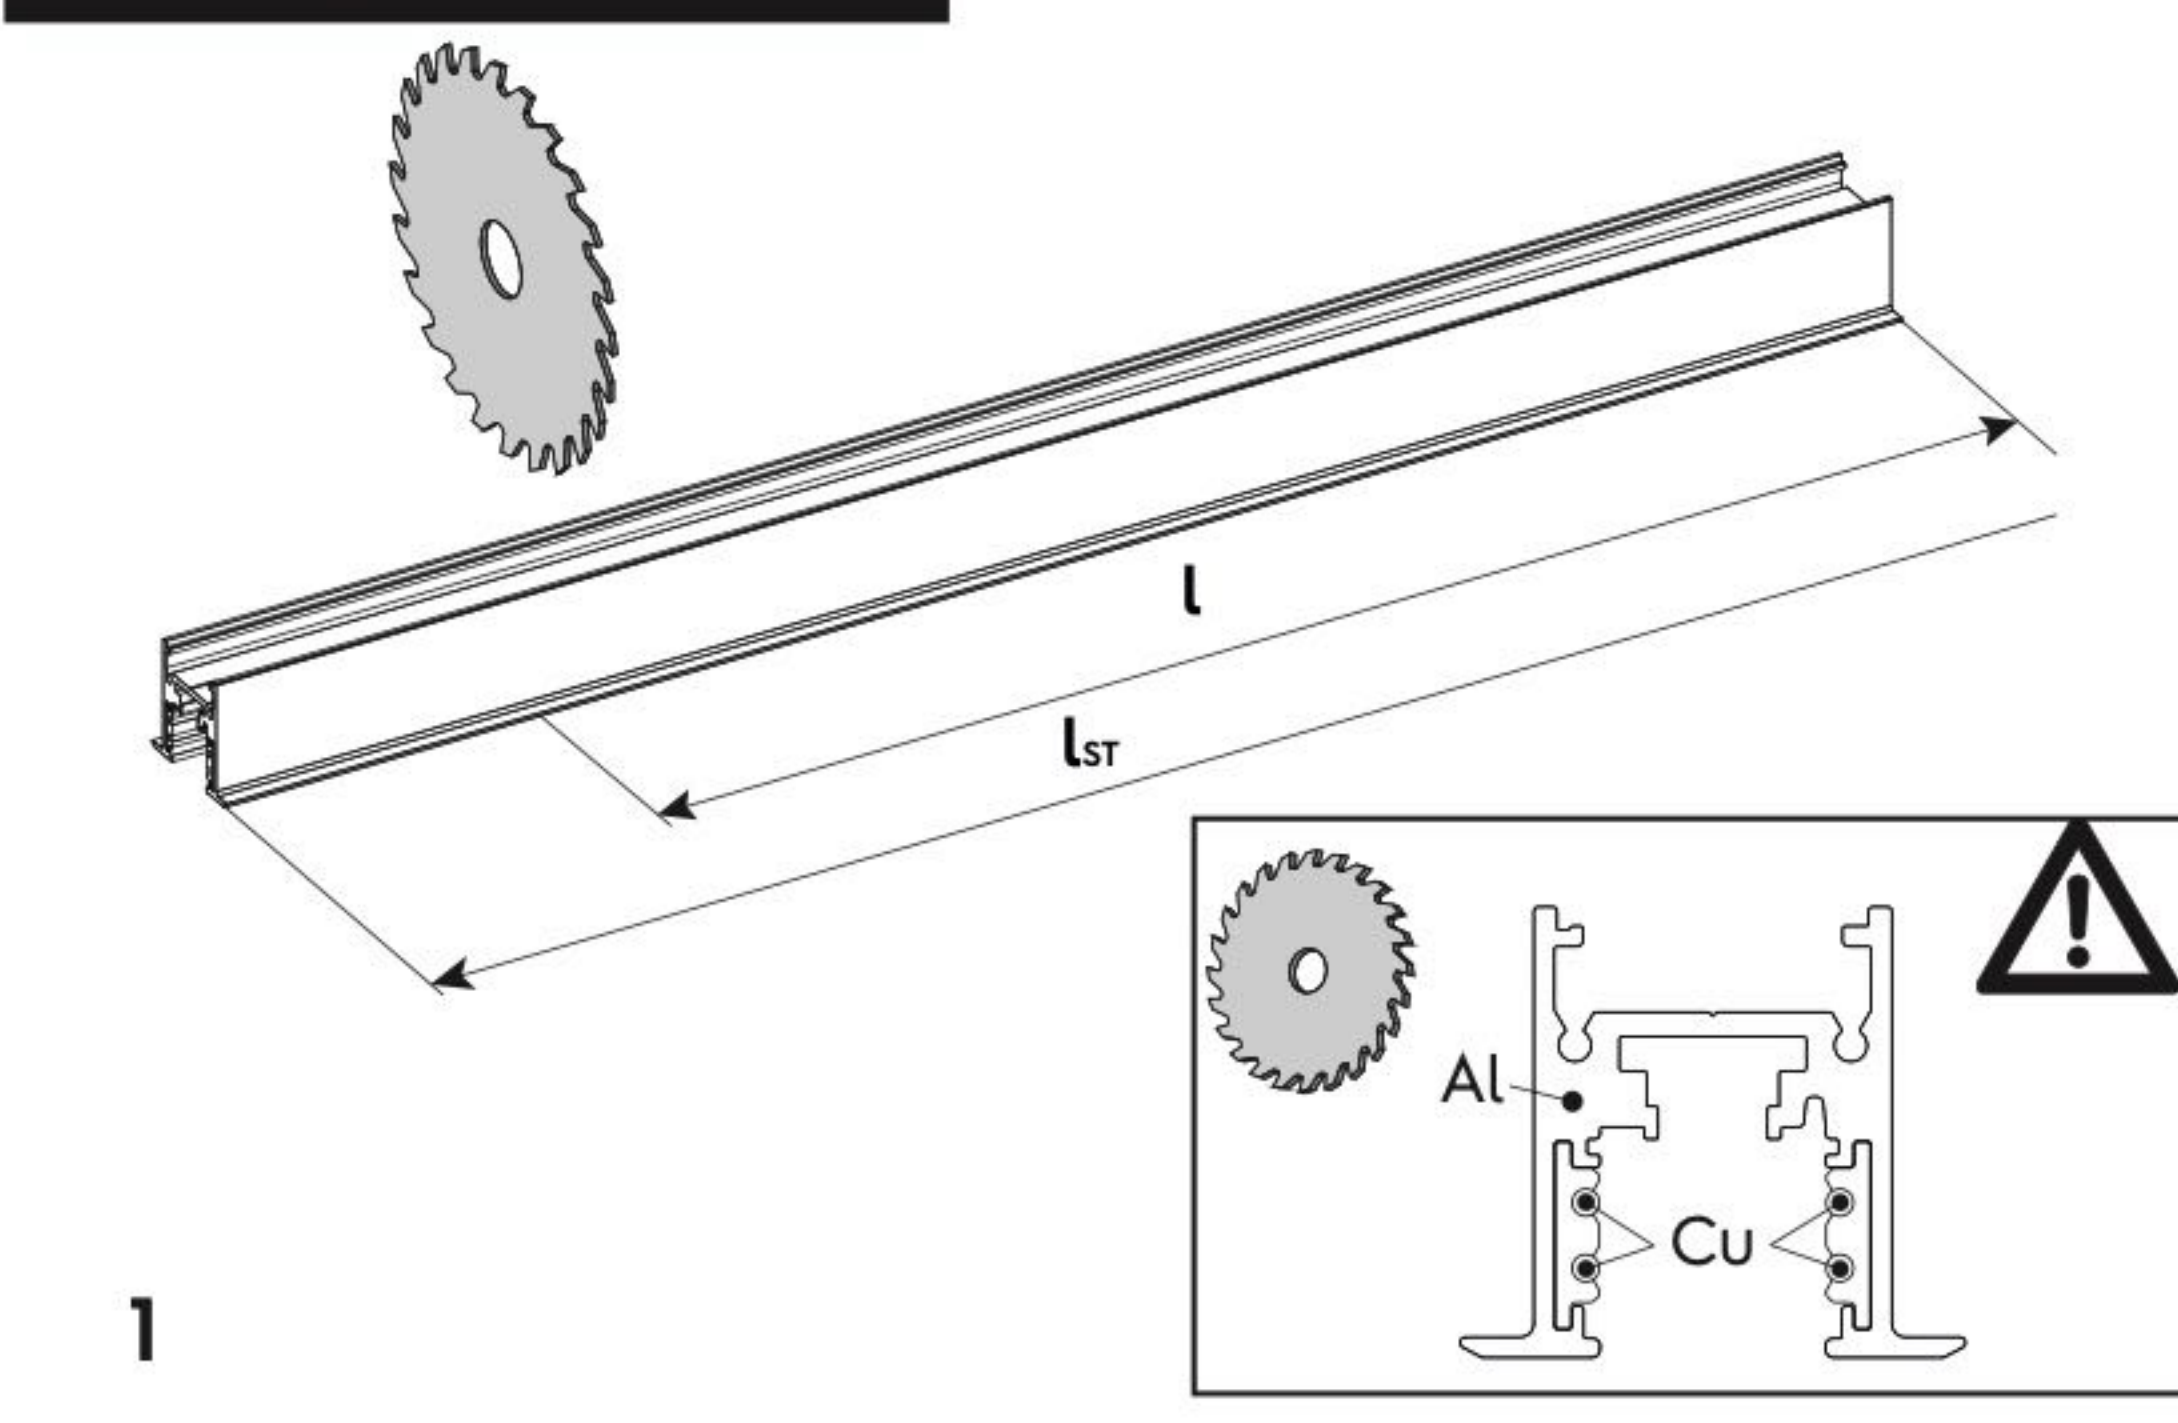


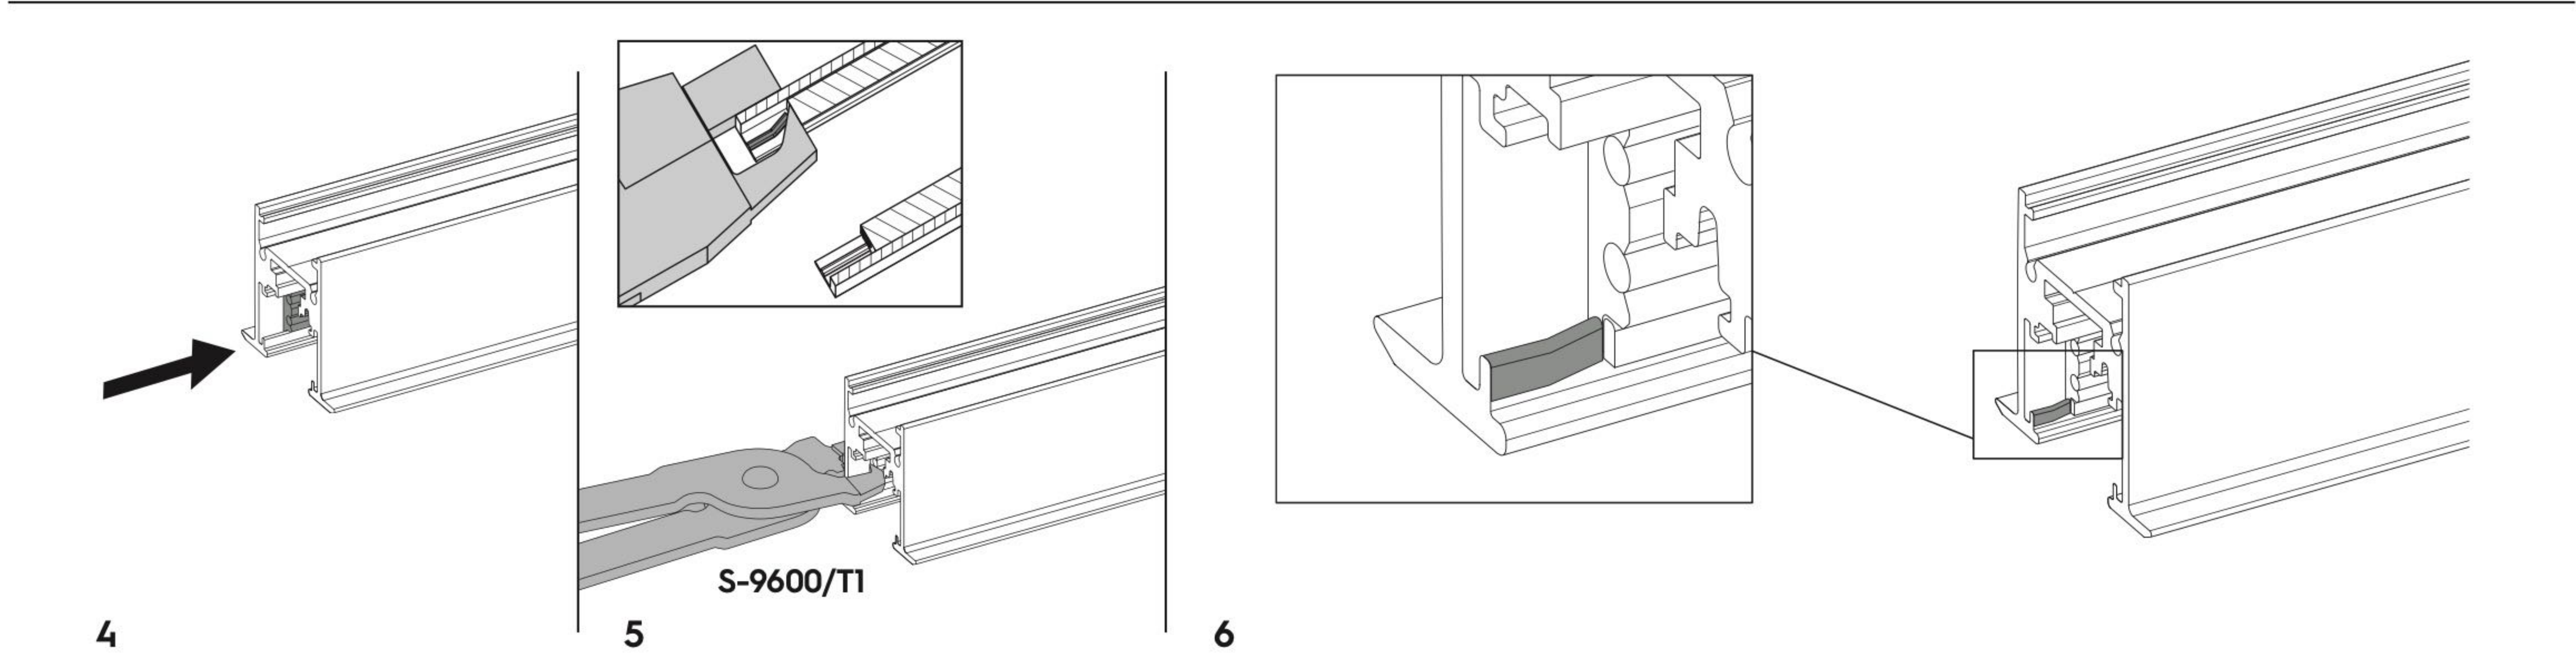


7 - 9501-S/...-E

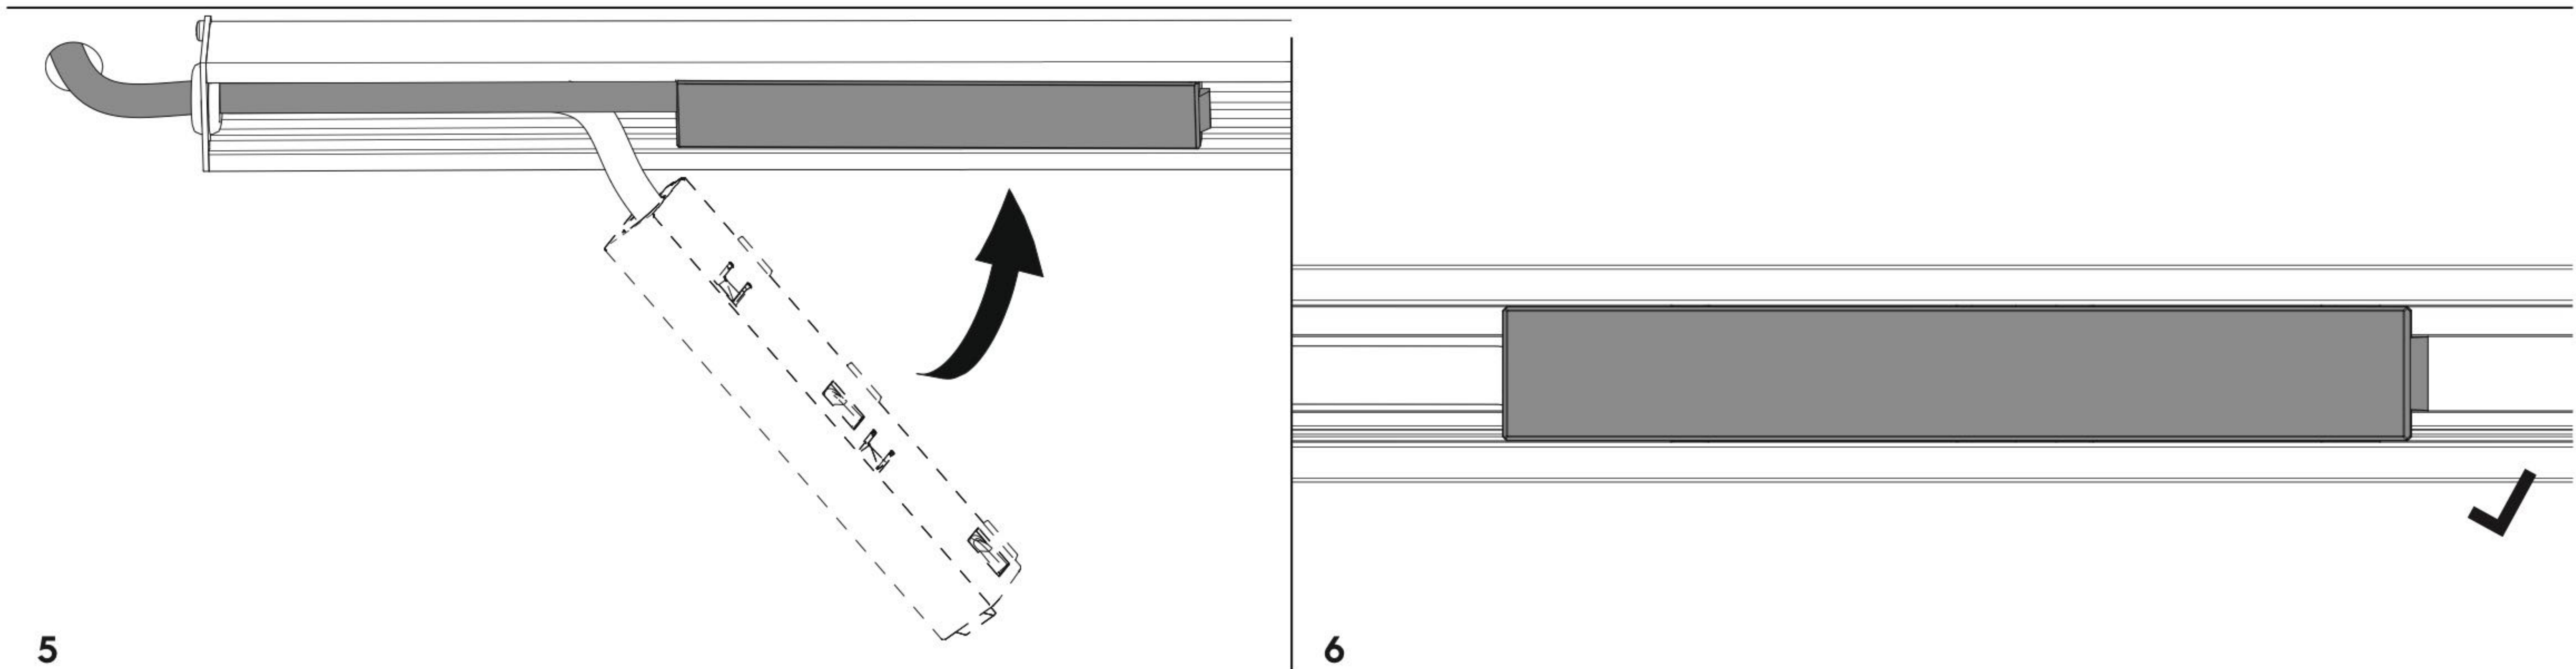
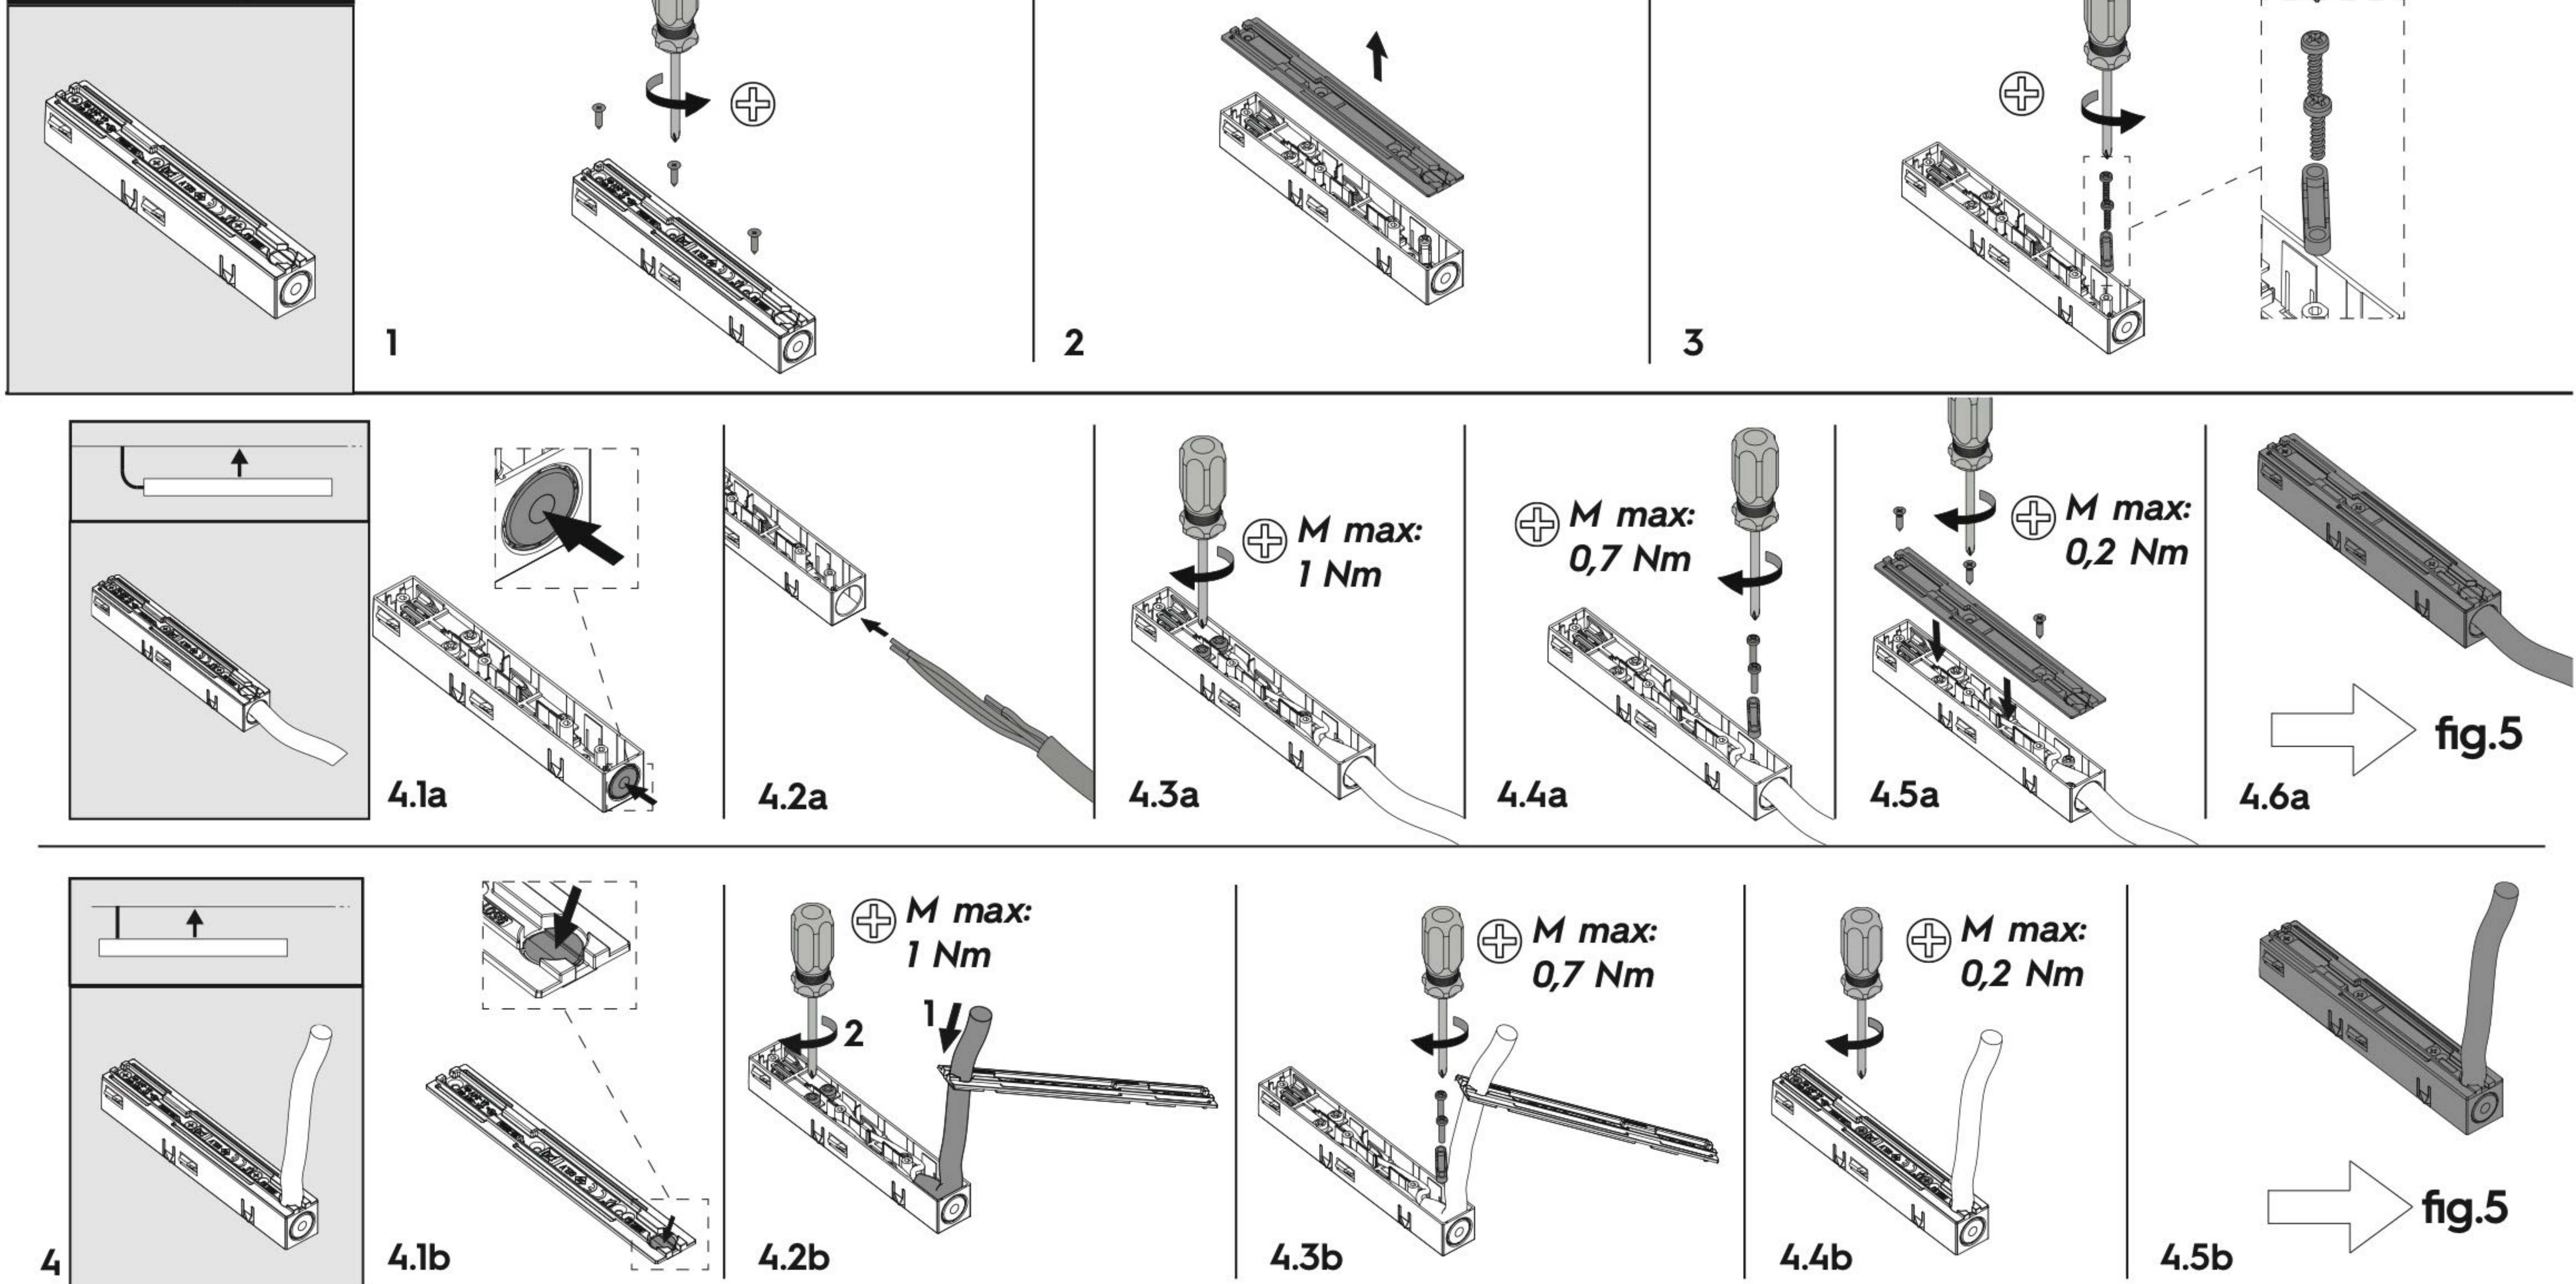


8 - 90° ANGLE

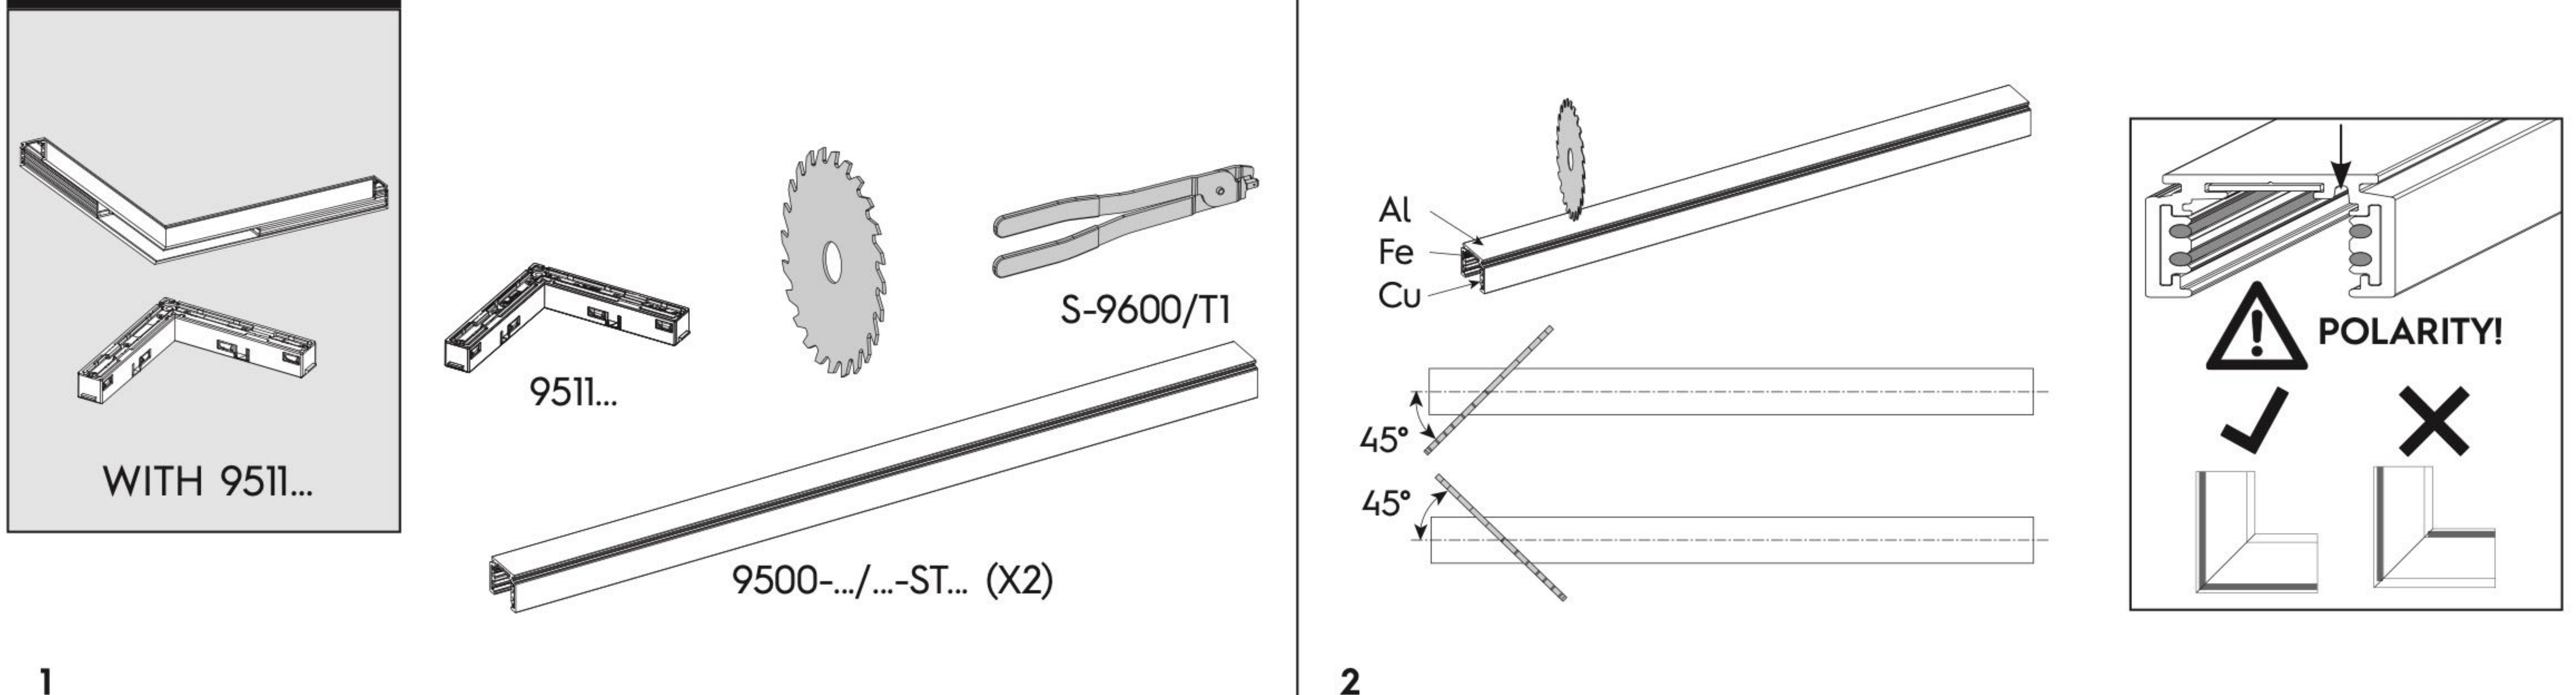

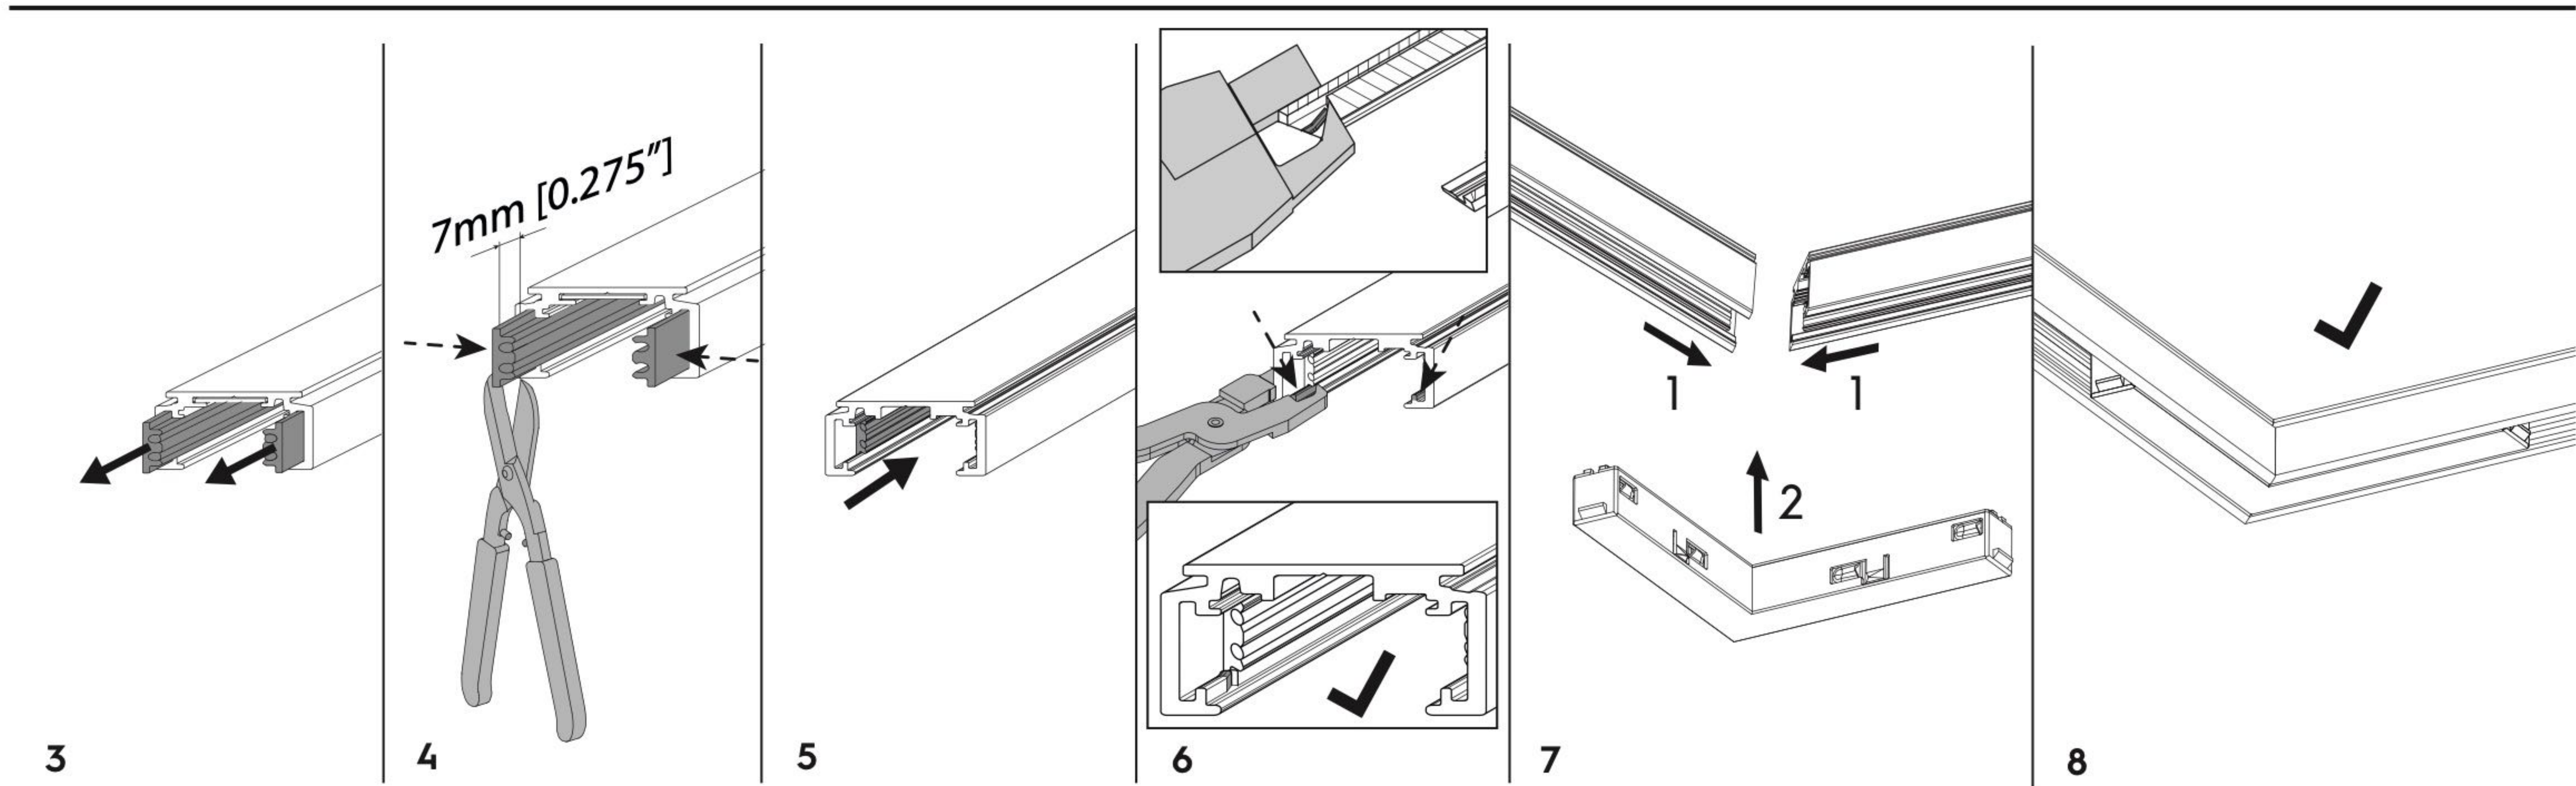

9 - = 90° ANGLE

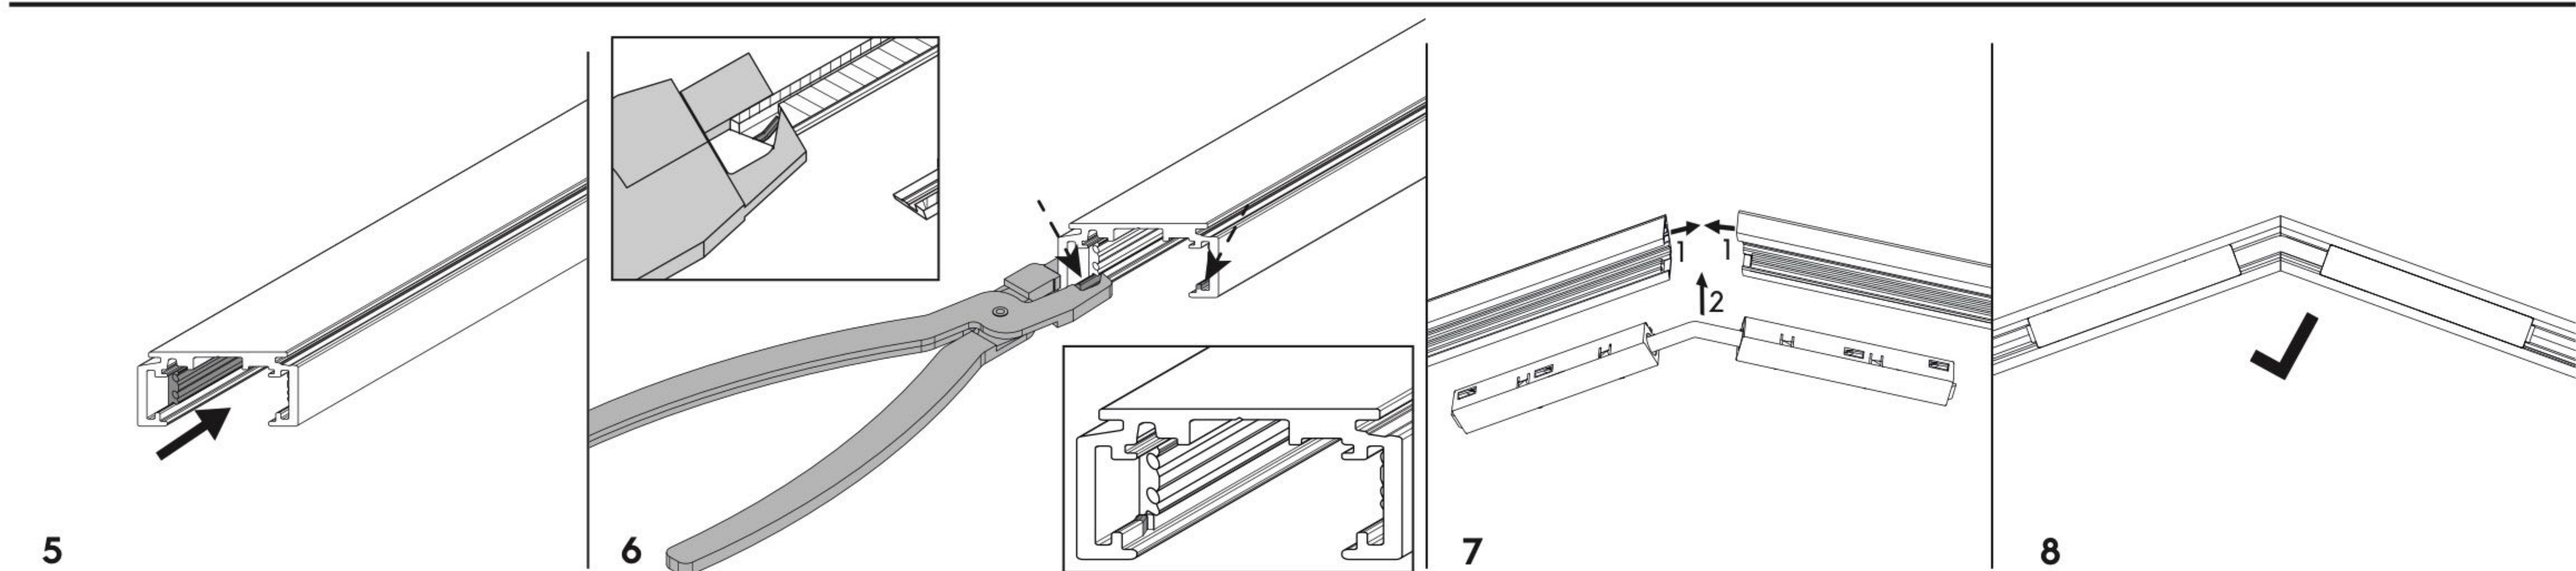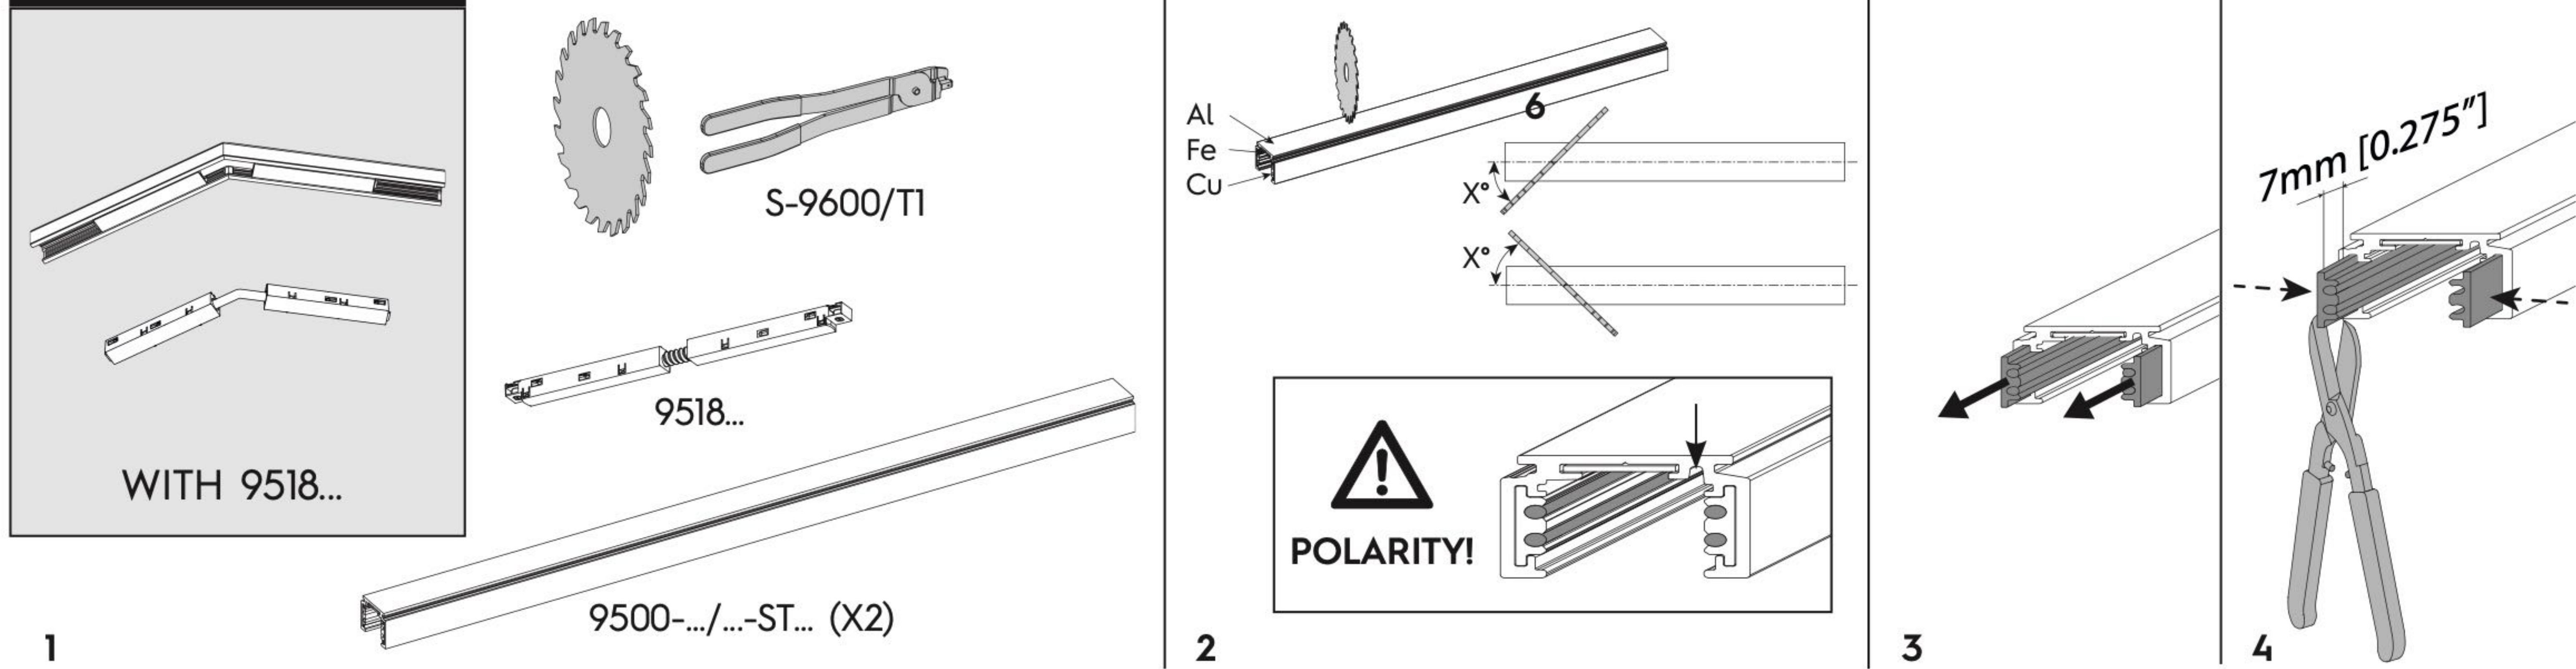

10 - WALL CEILING 90° ANGLE

